Honeywell

DR4300 Circular Chart Recorder Product Manual

44-01-25-14 12/03 Revision I

Copyright, Notices, and Trademark

Printed in U.S.A. – © Copyright 2003 by Honeywell Revision I – December 2003

WARRANTY/REMEDY

Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship. Contact your local sales office for warranty information. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace without charge those items it finds defective. The foregoing is Buyer's sole remedy and is in lieu of all other warranties, expressed or implied, including those of merchantability and fitness for a particular purpose. Specifications may change without notice. The information we supply is believed to be accurate and reliable as of this printing. However, we assume no responsibility for its use.

While we provide application assistance personally, through our literature and the Honeywell web site, it is up to the customer to determine the suitability of the product in the application.

Industrial Measurement and Control

Honeywell 1100 Virginia Drive Fort Washington, PA 19034

DR4300 and Accutune II are U.S. trademarks of Honeywell
Information Mapping is a trademark of Information Mapping Inc.
Modbus is a trademark of Modicon, Inc.
Other brands or product names are trademarks of their respective owners.

About This Document

Abstract

This manual contains instructions for installation, operation, and troubleshooting of the DR4300 Circular Chart Recorder.

References

The following list identifies all documents that may be sources of reference for material discussed in this publication.

Document Title	Doc ID	
How to Apply Digital Instrumentation in Severe Electrical Noise Environments	51-52-05-01	
Modbus® RTU Serial Communications User Manual	51-52-25-66	
Modbus® RTU Serial Communications User Manual Configuration Interface for DR4300	51-52-25-71	

Contacts

World Wide Web

The following lists Honeywell's World Wide Web sites that will be of interest to our customers.

Honeywell Organization	WWW Address (URL)
Corporate	http://www.honeywell.com
Industrial Measurement and Control	http://www.honeywell.com/imc
International	http://www.honeywell.com/Business/global.asp

Telephone

Contact us by telephone at the numbers listed below.

	Organization Phone Number		
United States and Canada	Honeywell	1-800-423-9883 1-888-423-9883	Tech. Support Q&A Faxback (TACFACS)
		1-800-525-7439	Service

Symbol Definitions

The following table lists those symbols used in this document to denote certain conditions.

Symbol Definition



This CAUTION symbol on the equipment refers the user to the Product Manual for additional information. This symbol appears next to required information in the manual.



WARNING

PERSONAL INJURY: Risk of electrical shock. This symbol warns the user of a potential shock hazard where HAZARDOUS LIVE voltages greater than 30 Vrms, 42.4 Vpeak, or 60 Vdc may be accessible. **Failure to comply with these instructions could result in death or serious injury.**



ATTENTION, Electrostatic Discharge (ESD) hazards. Observe precautions for handling electrostatic sensitive devices



Protective Earth (PE) terminal. Provided for connection of the protective earth (green or green/yellow) supply system conductor.



Functional earth terminal. Used for non-safety purposes such as noise immunity improvement. NOTE: This connection shall be bonded to protective earth at the source of supply in accordance with national local electrical code requirements.



Earth Ground. Functional earth connection. NOTE: This connection shall be bonded to Protective earth at the source of supply in accordance with national and local electrical code requirements.



Chassis Ground. Identifies a connection to the chassis or frame of the equipment shall be bonded to Protective Earth at the source of supply in accordance with national and local electrical code requirements.

Contents

1.	OV	ERVIEW	1
	1.1	Introduction	1
	1.2	Model Number Breakdown	4
	1.3	About This Manual	9
2.	INS	TALLATION	11
	2.1	Overview	
		Mounting Considerations and Overall Dimensions	
		Mounting Methods	
	2.3	2.3.1 Introduction	
		2.3.2 Mounting Flush in Panel (New Panel Cutout)	
		2.3.3 Panel Mounting Recorder with NEMA4 or Heavy Duty door	
		2.3.4 Mounting on a 2-inch pipe	20
		2.3.5 Mounting on Surface (of Panel or Wall)	21
	2.4	Wiring Prerequisites	22
	2.5	Input Wiring	27
		2.5.1 Power Wiring	
		2.5.2 Analog Input Wiring	
		2.5.3 Digital Inputs (Optional)	
		2.5.4 Communication (Optional)	
	2.6	Output Wiring	
		2.6.1 Discrete Outputs	
		2.6.2 Current Output	
		2.6.3 Transmitter Power Out	43
3.	СО	NFIGURATION, STARTUP, AND OPERATION OF BASIC RECORDER	
		ГНОUT DISPLAY	45
	3.1	Overview	45
	3.2	Configuration (Recording Set Up)	46
		3.2.1 Setting Configuration and Input Switches	
		3.2.2 Setting SW6 Switch 2	64
	3.3	Startup and Operation of Recorder without Display	65
		3.3.1 Overview	
		3.3.2 Preparing the Recorder for Operation	
		3.3.3 Running the Optional Step Test	
		3.3.4 Startup	69
4.	CO	NFIGURATION, STARTUP AND OPERATION OF RECORDER WITH	
••		PLAY	71
		Overview	
	1.1	♥ 1 ♥1 1 1♥ 11	/ 1

	4.2	Operator Interface on Recorder with Display and Keypad	72
	4.3	Configuration (Recording and Output Set Up)	74
		4.3.1 Overview	74
		4.3.2 Configuration Prompts	75
		4.3.3 How to Get Started	
		4.3.4 Configuration Tips	
		4.3.5 Switch Settings	79
		4.3.6 Configuration Procedure	
		4.3.7 Input Parameters Set Up Group	
		4.3.8 Pen Parameters Set Up Group	
		4.3.9 Chart Parameters Set Up Group	
		4.3.10 Totalizer Parameters Set Up Group	
		4.3.11 Control Parameters Set Up Group	
		4.3.12 Tuning Parameters Set Up Group	
		4.3.13 Setpoint Ramp/Program Set Up Group	
		4.3.14 Timer Set Up Group	
		4.3.15 Alarms Set Up Group	
		4.3.16 Auxiliary Output Set Up Group	
		4.3.17 Communication Set Up Group	
		4.3.18 Remote Switch (Digital Inputs) Set Up Group	
		4.3.19 Display Parameter Set Up Group	
		4.3.20 Lock Out Parameter Set Up Group.	
		4.3.21 Configuration Record Sheet	
		4.3.22 Limit Control Configuration	
	4.4	1 3 31	
		4.4.1 Overview	
		4.4.2 Preparing the Recorder for Startup	
		4.4.3 Running the Optional Step Test	
		4.4.4 Completing Preparation and Startup	123
	4.5	Operation of Recorder with Display and Keypad	128
		4.5.1 Monitoring Your Recorder	128
		4.5.2 Operator Functions	132
5.	INF	PUT AND OUTPUT CALIBRATION FOR RECORDER WITH DISPLA	AY 141
•	5.1	Overview	
	5.2	Input Calibration Minimum and Maximum Range Values	
	5.3	Input Calibration Preliminary Information	
	5.4	Input Calibration Set Up and Wiring	
	5.1	5.4.1 General Calibration Set Up	
		5.4.2 Thermocouple Inputs Using a Compensated Calibrator	
		5.4.3 Thermocouple Inputs Using an Ice Bath or Ice Point Reference	
		5.4.4 RTD (Resistance Temperature Detector) Inputs	
	5.5	Input Calibration Procedure	
		Current Output Calibration	
	5.0	Carrent Carput Carrotation	133
6.	P∩	UTINE MAINTENANCE	157
υ.	I/O	`U	13 <i>1</i>

	6.1	Overview	157
	6.2	Replacing the Chart	158
		Replacing the Ink Cartridge	
		Maximizing Pen Life	
7.		OUBLESHOOTING AND PEN ALIGNMENT OF BASIC RECORDER THOUT DISPLAY	161
	7.1		
	7.2	Observable Symptoms of Failure	
	7.3	Troubleshooting Procedures	
	1.5	7.3.1 Overview	
		7.3.2 Recorder Failure Troubleshooting	
		7.3.3 Pen Trace Troubleshooting	
		7.3.4 Chart Rotation Troubleshooting	
		7.3.5 Troubleshooting Erratic Pen Movement	
	7.4	Alignment of Pen at Zero and 100 %	169
8.		OUBLESHOOTING AND PEN ALIGNMENT OF RECORDER WITH SPLAY Overview	
	8.2	Troubleshooting Aids	
	8.3	Self Diagnostics	
	8.3	8.3.1 Power up tests	
		8.3.2 View Status of Tests	
		8.3.3 Background Tests	
		8.3.4 Error Messages	176
	8.4	Observable Symptoms of Failure	179
	8.5	Troubleshooting Procedures	180
		8.5.1 Overview	
		8.5.2 Recorder Failure Troubleshooting	
		8.5.3 Pen Trace Troubleshooting	
		8.5.5 Troubleshooting Erratic Pen Movement	
		8.5.6 Troubleshooting the Keypad and Display	
		8.5.7 Troubleshooting Relay Output	
		8.5.8 Troubleshooting External Alarm Function	
		8.5.9 Troubleshooting Remote Switch (Digital Input) Function	
		8.5.10 Troubleshooting Modbus Communications	
	8.6	Alignment of Pen at Zero and Span	188
9.	РА	RTS LIST	191
	9.1	Overview	191
	9.2	Exploded Views	192

A.	ACCURACY	199
	A.1 Overview	199
	A.2 Typical Reference Accuracy	200
В.	AVAILABLE 10-INCH CHARTS	203
	B.1 Single Range Charts	203
	B.2 Dual Range Charts	208
C.	SETPOINT RAMP/SOAK PROGRAMMING AND OPERATION	211
	C.1 Overview	211
	C.2 Program Contents	212
	C.3 Drawing a Ramp/Soak Profile	214
	C.4 Setpoint Program Prompt Hierarchy	218
	C.5 Run/Monitor the Program	221
D.	USING ACCUTUNE II	225
	D.1 Overview	225
	D.2 Starting and Stopping Tuning with Accutune II	226
	D.3 Using Accutune with Duplex (Heat/Cool) Control	227
Ε.	FOREIGN LANGUAGE SAFETY INSTRUCTIONS	229
F.	HONEYWELL SERVICE CENTERS	241

Tables

Table 2-1 Operating Limits and Condensed Specifications	12
Table 2-2 Mounting Flush in a New Panel Cutout	17
Table 2-3 Procedure for Mounting Recorder with NEMA4 or Heavy Duty Door	18
Table 2-4 Pipe Mounting Procedure	
Table 2-5 Mounting Flush on a Surface (of Panel or Wall)	21
Table 2-6 Wiring Bundling Categories	
Table 2-7 Wiring Illustrations	
Table 2-8 Procedure for Power Wiring Models	
Table 2-9 Analog Input Wiring	
Table 2-10 Digital Input Wiring	
Table 2-11 Communication Wiring	
Table 2-12 Output Terminal Use for Output Algorithm and Option Combinations	
Table 2-13 Relay Output Wiring - 1 or 2 Pen Models	
Table 2-14 Current Output Wiring	
Table 2-15 Transmitter Power Out Wiring	
Table 3-1 Procedure for Configuring Model without Display	
Table 3-2 Configuration and Input Switch Settings for Models without Display	
Table 3-3 Preparing the Recorder for Operation	
Table 3-4 Procedure for Running the Step Test	
Table 3-5 Startup Procedure	
Table 4-1 Key Functions	
Table 4-2 Configuration Tips	
Table 4-3 SW6 Input Switch Settings for Models Having Display and Keypad	
Table 4-4 Configuration Procedure	
Table 4-5 Input Parameter Definitions	
Table 4-6 Pen Parameter Definitions.	
Table 4-7 Chart Parameter Definitions.	
Table 4-8 Totalizer Function Definitions	
Table 4-9 Control Parameter Definitions	
Table 4-10 Tuning Parameter Definitions	
Table 4-11 Setpoint Ramp Parameter Definitions	
Table 4-12 Timer Parameter Definitions	
Table 4-13 Alarm Parameter Definitions	
Table 4-14 Auxiliary Output Parameter Definitions	
Table 4-15 Communication Parameter Definitions	
Table 4-16 Remote Switch Parameter Definitions	
Table 4-17 Display Parameter Definitions	
Table 4-18 Lockout Parameter Definitions	
Table 4-19 Limit Control Parameter Definitions	
Table 4-20 Preparing the Recorder for Operation	
Table 4-21 Procedure for Running the Step Test	
Table 4-22 Procedure for Setting Chart Time and Applying Power	
Table 4-23 Power-Up Diagnostic Tests	
Table 4-24 Procedure for Testing the Displays and Keys	
Table 4-25 Procedure for Starting the Recorder	
Table 4-26 Meaning of Indicators	
Table 4-27 Lower Display Operating Parameter Labels	
Table 4-28 Error Messages	
Table 4-29 Procedure for Selecting Automatic or Manual Mode	
Table 4-30 Procedure for Changing the Control Setpoints	
Table 4-31 Procedure for Displaying or Changing the Alarm Setpoints	
Table 4-32 Procedure for Selecting Factory or Field Calibration Values	
rable + 32 resocute for selecting ractory of reduced to the values	

Table 4-33 Procedure for Resetting Totalizer	137
Table 4-34 Procedure for Starting Timer	138
Table 4-35 Procedure for Resetting Limit Controller	139
Table 5-1 Voltage and Resistance Equivalents for 0 % and 100 % Range Values	
Table 5-2 Equipment Needed for Calibration	
Table 5-3 Disconnect the Field Wiring	
Table 5-4 General Calibration Set Up Procedure	
Table 5-5 Set Up Wiring Procedure for Thermocouple Inputs Using a Compensated Calibrator	
Table 5-6 Set Up Wiring Procedure for Thermocouple Inputs Using an Ice Bath	
Table 5-7 Set Up Wiring Procedure for Calibrating RTD Inputs	
Table 5-8 Set Up Wiring Procedure for Calibrating Millivolts, Volts, and Milliamps Inputs	
Table 5-9 Input Calibration Procedure Sequence	
Table 5-10 Set Up Wiring Procedure for Current Proportional Output	
Table 5-11 Procedure for Calibrating Current Output	
Table 6-1 Procedure for Replacing the Chart	
Table 6-2 Procedure for Replacing the Ink Cartridge	
Table 6-3 Maximizing Pen Life	
Table 7-1 Observable Symptoms of Failure	
Table 7-2 Troubleshooting Recorder Failure Symptoms	
Table 7-3 Troubleshooting Pen Trace Failure Symptoms	
Table 7-4 Troubleshooting Chart Rotation Failure Symptoms	
Table 7-5 Troubleshooting Erratic Pen Movement Symptoms	
Table 7-6 Procedure for Pen Alignment	
Table 8-1 Procedure for Identifying the Software Version	
Table 8-2 Power-Up Diagnostic Tests.	
Table 8-3 Procedure for Displaying the Results of Self-Diagnostics	175
Table 8-4 Error Messages	
Table 8-5 Observable Symptoms of Failure	
Table 8-6 Troubleshooting Recorder Failure Symptoms	
Table 8-7 Troubleshooting Pen Trace Failure Symptoms	
Table 8-8 Troubleshooting Chart Rotation Failure Symptoms	
Table 8-9 Troubleshooting Erratic Pen Movement Symptoms	
Table 8-10 Troubleshooting Keypad and/or Display Failure Symptoms	
Table 8-11 Troubleshooting Relay Output Failure Symptoms	
Table 8-12 Troubleshooting External Alarm Function Failure Symptoms	
Table 8-13 Troubleshooting Remote Switch (Digital Input) Function Failure Symptoms	
Table 8-14 Troubleshooting Modbus Communications	
Table 8-15 Procedure for Aligning Pen at Zero and Span	
Table 9-1 Door Assembly Parts	
Table 9-2 Chart Plate Assembly Parts	
Table 9-3 Basic Recorder Parts	
Table A-1 Typical Reference Accuracy	
Table B-1 10-inch Single Range Chart Part Numbers	
Table B-2 10-inch Dual Range Chart Part Numbers	
Table C-1 Prompt Hierarchy and Available Selections	
Table C-2 Run/Monitor Functions	
Table D-1 Procedure for Starting Accutune II	
Table D-2 Procedure for Using Accutune for Duplex Control	227

Figures

Figure 1-1 Guide to Manual's Organization	10
Figure 2-1 Overall Dimensions	
Figure 2-2 Plug Locations	16
Figure 2-3 Mounting Flush in a New Panel Cutout (Rear View)	17
Figure 2-4 Panel Mounting Recorder with NEMA4 or Heavy Duty Door	19
Figure 2-5 Pipe Mounting Brackets	20
Figure 2-6 Mounting Flush on a Surface of Panel or Wall (Rear View)	22
Figure 2-7 Recommended Wiring Routing - Models Without CE Mark	24
Figure 2-8 Recommended Wiring Routing - Models With CE Mark	25
Figure 2-9 Power Wiring – Models Without CE Mark	29
Figure 2-10 Power Wiring – Models With CE Mark	30
Figure 2-11 Analog Input Wiring	
Figure 2-12 Digital Input Wiring	
Figure 2-13 Communication Wiring	
Figure 2-14 Relay Output Wiring	
Figure 2-15 Open Collector Output Wiring	
Figure 2-16 Current Output Wiring	
Figure 2-17 Transmitter Power Out Wiring	
Figure 3-1 Location of Configuration and Input Switches	
Figure 3-2 Sample Chart for Single Pen Recorder	48
Figure 3-3 Basic Chart Plate Components	66
Figure 3-4 Typical Step Test Chart Patterns	68
Figure 3-5 Setting Chart Time to Time Index	69
Figure 4-1 Operator Interface	72
Figure 4-2 Prompt Hierarchy	
Figure 4-3 Location of Switches and Relays	82
Figure 4-4 Basic Chart Plate Components	120
Figure 4-5 Typical Step Test Chart Patterns	122
Figure 4-6 Setting Chart Time to Time Index	123
Figure 4-7 Operator Interface	128
Figure 5-1 Location of the Input Connections on the Input Boards	145
Figure 5-2 Calibration Set Up Diagram for Thermocouple Inputs Using a Compensated Calibrator	147
Figure 5-3 Calibration Set Up Diagram for Thermocouple Inputs Using an Ice Bath	148
Figure 5-4 Calibration Set Up Diagram for RTD Inputs	149
Figure 5-5 Calibration Set Up Diagram for Millivolts, Volts, and Milliamps Inputs	150
Figure 5-6 Test Equipment Connections for Calibrating Current Output	
Figure 6-1 Replacing the Chart and Ink Cartridge	158
Figure 9-1 Door Assembly	192
Figure 9-2 Chart Plate Assembly	193
Figure 9-3 Recorder Components	194
Figure 9-4 DR4300 Recorder (CE Mark) – Internal Cabling Diagram	
Figure 9-5 DR4300 Recorder (Non-CE Mark) – Internal Cabling Diagram	197
Figure C-1 Ramp/Soak Profile Example	214

1. Overview

1.1 Introduction

Function

The DR4300 recorder is a one or two pen microprocessor-based circular chart recorder. The basic DR4301 (one pen) and DR4302 (two pen) recorders provide reliable, convenient pen-drawn analog traces on preprinted 10 inch (250 mm) charts. Both the chart and the pens are driven by stepper motors controlled by the microprocessor. Chart speed and range are configurable. The basic recorder is also available in CE models DR4321 (one pen) and DR4322 (two pen).

In addition to generating pen-drawn chart traces, the DR4311 (one pen) and DR4312 (two pen) models include a display and keypad. This option lets you display the real time value of the process variable for each pen channel, as well as other values. The recorder with display and keypad is also available in CE models DR4331 (one pen) and DR4332 (two pen).

Each pen channel has its own printed circuit assembly (PCA), allowing the channels to operate independently.

CE conformity (Europe)

Indicated models of this product are in conformity with the protection requirements of the following European Council Directives: 73/23/EEC, the Low Voltage Directive, and 89/336/EEC, the EMC Directive. Conformity of this product with any other "CE Mark" Directive(s) shall not be assumed.

Deviation from the installation conditions specified in this manual, and the special conditions for CE conformity in Section 2 of this manual, may invalidate this product's conformity with the Low Voltage and EMC Directives.

Analog inputs

The input for each pen channel can be one of any standard electrical signal: milliamp, millivolt, voltage, RTD, or thermocouple. The input type and range are configurable. In the models having display and keypad the range can be expanded and compressed to meet specific measurement needs. The display and keypad also permit entry of input bias and filter values. (The input filter for the models without a display is fixed at one second; their bias is zero.)

Digital inputs

Two digital inputs for each pen channel are available as an option. These inputs can be used to trigger the switchover to a second control setpoint or a pre-configured constant output if an external event causes contact closure (sets the digital input to ON). In addition, the digital inputs can be used to remotely reset the optional totalizer or limit controller.

Communications

The Modbus communication option permits configuration of the unit and monitoring of process variables over a standard multi-drop serial communications link.

Relay outputs for control and alarms

The models with display and keypad are available with output relays, two for each pen channel. These relays can be wired for Normally Open (NO) and Normally Closed (NC) terminals. ON-OFF control can be performed using one relay (relay simplex control) or two relays (relay duplex control).

Any relay not used for control is available for alarming. Two alarm setpoints can be configured for each alarm relay. An adjustable hysteresis of 0.0 % to 100.0 % is configurable for the alarm setpoint.

Analog output for control or retransmission

Depending on the model ordered, a 4 to 20 mA current output may be available for control or retransmission of a process variable ("auxiliary output").

Failsafe operation

The control function can operate in automatic or manual mode. In automatic the control function works to maintain the process variable at the setpoint entered locally by the operator. During configuration a "failsafe" value can be specified. This value is used as the output at power up and in case of input failure during automatic operation. (When the unit goes to failsafe, the control function goes to manual mode.)

In manual mode the operator enters the output locally. If the recorder has gone to failsafe operation, the operator will be able to change the output value from the failsafe value specified during configuration.

Timer and totalizer options

The recorder is available with timer and totalizer options. The timer can be started locally, remotely, or by an alarm. The unit can be configured to display elapsed time or time remaining. At the end of the timeout period Relay 2 is energized, and remains energized until the timer is reset. The totalizer can be reset locally or remotely; its displayed value can be scaled.

Setpoint Programming Option

The recorder is available with a Setpoint Program option. This feature allows configuration of up to four setpoint programs using a total of twenty-four ramp and soak segments. A setpoint and time is configured for each segment. The program can be set up to include guaranteed soak segments. A plus/minus deviation is configured for all soak segments. Whenever the plus/minus deviation is exceeded, soak timing is frozen

Display and keypad

In addition to process variables, the display can show output, setpoint, and deviation real time values if the recorder is equipped with optional outputs. The upper display uses four characters to display the input value. The lower display shows other parameters using a two- or three-character label and four- or three-digit values. In addition, status and error messages flash on the lower display when necessary.

The six keys are used to select the real time value to be displayed, and to select set up parameters and their values during configuration. The display and keypad are behind the door, protecting them from dirt. A supplementary external keypad is also available.

For more information about the operator interface on models having a display and keypad, see Subsection 4.2.

Configuration

The models without a display are configured with two switchbanks: one for configuration, the other for input definition. Configuration is a simple matter of consulting a table in this manual; selecting the appropriate combination of range, chart speed, engineering unit, and input type; then setting the switches as shown in the table.

The display and keypad are used to configure models with these options. When the unit is in configuration mode, set up parameters are displayed, and grouped by function. Designate site-specific values by selecting them from a list of choices, or entering them as numeric values. The operator can be locked out from making configuration changes.

The models with display also use a switchbank to define the type of input to be expected by the hardware. Input parameters used by the software are configured using the display and keypad.

Self-diagnostics

All DR4300 recorders run self-diagnostics at power up and in the background during normal operation. Problems are reported by error messages on the display when present. An LED in the models without a display lights if the unit fails a self-diagnostic.

Construction

All DR4300 recorders are housed in a rugged molded case which can be panel-, pipe- or surface-mounted. An acrylic-windowed, gasketed door protects internal components from harsh environments while allowing easy access to the chart.

1.2 Model Number Breakdown

Introduction

The model number breakdown is presented in the tables that follow. Note that not all options are available with all recorders. Check the "Availability" column for each model. A star (*) in the Availability column means unrestricted availability of the feature for that model. N/A indicates the feature is not available for that model. A letter in the Availability column denotes restricted availability. The meaning of each letter is provided at the bottom of this page.

The Notes referred to in the tables are also at the end of this subsection.

Model number format

The basic model number consists of a key number. Appended to this key number are characters that identify the features in various categories. The meaning of the characters in each category is presented in a table identified below.

Key numbers

The base model numbers for the DR4300 Circular Chart Recorder are:

One Pen Recorder (Basic Recorder Without Display)	DR4301
Two Pen Recorder (Basic Recorder Without Display)	DR4302
One Pen Recorder (With Display)	DR4311
Two Pen Recorder (With Display)	DR4312
One Pen Recorder (Basic Recorder Without Display, With CE Mark)	DR4321
Two Pen Recorder (Basic Recorder Without Display, With CE Mark)	DR4322
One Pen Recorder (With Display, With CE Mark)	DR4331
Two Pen Recorder (With Display, With CE Mark)	DR4332

Restricted availability designations

- \mathbf{d} = Not available with Table I selection XX0X.
- e = Not available with Table I selection XXX0.
- \mathbf{f} = Not available with Table I selection 0XXX.
- $\mathbf{g} = \text{Not available with Table I selection 0000}.$
- **h** = Not available with Table I selections FXXX, XFXX, GXXX, XGXX.
- \mathbf{j} = Not available with Table I selection 0XXX.
- \mathbf{k} = Not available with Table I selection X0XX.
- m = Not available with Table I selections 2XXX, 3XXX, 4XXX, 5XXX, AXXX, XXX0.
- \mathbf{n} = Not available with Table II selection SXXXX.
- \mathbf{p} = Not available with Table II selections RXXXX, SXXXX.
- **q** = Not available with Table II selections GXXXX, BXXXX, HXXXX, CXXXX, KXXXX, LXXXX.

Model Number Table I - OUTPUT

Description	Model No.	Availability			
		4301 4321	4302 4322	4311 4331	4312 4332
Pen One					
None	0	*	*	*	*
2 Outputs (Alarm/On-Off Control)	2	N/A	N/A	d	d
1 PID Control with Accutune II (see Note 1)	3	N/A	N/A	d	d
1 PID Control/Setpoint Program/Timer(see Note 1)	4	N/A	N/A	d	d
2 Outputs (Alarm 1 and Timer)	5	N/A	N/A	d	d
4 to 20 mA Retransmission Output (see Note 4)	A	N/A	N/A	d	d
FM Approved Limit Control	F	N/A	N/A	d	d
FM Approved Limt Control/Timer Output	G	N/A	N/A	d	d
Pen Two					
None	_0	*	*	*	*
2 Outputs (Alarm/On-Off Control)	_2	N/A	N/A	N/A	е
1 PID Control with Accutune II (see Note 1)	_3	N/A	N/A	N/A	е
1 PID Control/Setpoint Program/Timer(see Note 1)	_4	N/A	N/A	N/A	е
2 Outputs (Alarm 1 and Timer)	_5	N/A	N/A	N/A	е
4 to 20 mA Retransmission Output (see Note 4)	_A	N/A	N/A	N/A	е
FM Approved Limit Control	_F	N/A	N/A	N/A	m
FM Approved Limt Control/Timer Output	_G	N/A	N/A	N/A	m
Output Type Pen 1					
None	0_	*	*	*	*
Electromechanical Relay	E_	N/A	N/A	j	j
Solid State Relay	s_	N/A	N/A	j	j
Open Collector	T_	N/A	N/A	j	j
Output Type Pen 2					
None	0	*	*	*	*
Electromechanical Relay	E	N/A	N/A	N/A	k
Solid State Relay	S	N/A	N/A	N/A	k
Open Collector	T	N/A	N/A	N/A	k

Model Number Table II - INSTRUMENT OPTIONS

Description	Model No.		Avail	ability	
		4301 4321	4302 4322	4311 4331	4312 4332
Door Options					
Gray Door	G	*	*	*	*
Blue Door	В	*	*	*	*
Gray Door with External Keypad	H	N/A	N/A	*	*
Blue Door with External Keypad	C	N/A	N/A	*	*
Black Door	К	*	*	*	*
Black Door with External Keypad	L	N/A	N/A	*	*
SST Door	R	*	*	*	*
NEMA 4 SST Door	S	*	*	*	*
Standard Latch	_0	n	n	n	n
Keyed Latch	_A	*	*	*	*
Keyed Latch/Chart Plate Seal	_B	q	q	q	q
Door Lock	_K	р	р	р	р
Instrument Power/Transmitter Power					
Universal Recorder Power	1	*	*	*	*
Universal Power +24 Vdc Transmitter Power	3	*	*	*	*
Communications					
None	0_	*	*	*	*
RS485 Modbus RTU Communication (see Note 5)	C_	*	*	*	*
Product Configuration					
Standard	0	*	*	*	*
Configuration for Non-Standard Range Settings (see Note 6)	1	*	*	N/A	N/A
Configuration for Customer's Specific Data (see Note 6)	2	N/A	N/A	*	*

Model Number Table III - PEN 1 OPTIONS

Description	Model No.		Availability			
		4301 4321	4302 4322	4311 4331	4312 4332	
No Digital Inputs	0	*	*	*	*	
Digital Inputs (See Note 3)	D	N/A	N/A	f	g	
None	_0	*	*	*	*	
No Totalizer Function	0_	*	*	*	*	
Totalizer	T_	N/A	N/A	h	h	
Future	0	*	*	*	*	

Model Number Table IV - PEN 2 OPTIONS

Description	Model No.		Availability			
		4301 4321	4302 4322	4311 4331	4312 4332	
No Digital Inputs	0	*	*	*	*	
Digital Inputs (See Note 3	D	N/A	N/A	N/A	g	
None	_0	*	*	*	*	
No Totalizer Function	0_	*	*	*	*	
Totalizer	T_	N/A	N/A	N/A	h	
Future	0	*	*	*	*	

Model Number Table V - APPROVALS/CERTIFICATES

Description	Model No.		Availability		
		4301 4321	4302 4322	4311 4331	4312 4332
No Approvals	0_	*	*	*	*
UL Listing	U_	n	n	n	n
CSA Certification	C_	n	n	n	n
UL and CSA Approved	B_	n	n	n	n
No Certificate	_ 0	*	*	*	*
Certificate of Conformance (F3391)	_ 1	*	*	*	*
Certificate of Calibration (F3399) (See Note 2)	_2	*	*	*	*
Certificate of Conformance and Calibration (See Note 2)	_3	*	*	*	*

- **NOTE 1:** PID control options include current output plus two discrete outputs for alarms. If ON-OFF or time-proportioned simplex control is used, only one discrete output is available for an alarm. Time-proportioned duplex control requires the use of both outputs and therefore no relay outputs are available for alarms on that pen channel. Accutune II tuning is a standard feature with PID control options.
- **NOTE 2:** Customer must supply the input actuation and range information for each input in the Free Form section of the order to have the unit supplied with a Certificate of Calibration.
- **NOTE 3:** Digital Inputs are only available when ordering outputs in Table I.
- **NOTE 4:** 4 to 20 mA Retransmission Output includes two outputs per pen for alarms. You must specify the type of alarm outputs required (i.e., Relay, SS Relay, Open Collector Outputs).
- NOTE 5: On key numbers DR4301, DR4302, DR4321, and DR4322 the communication address is fixed; the display assembly is required to change it. Only one DR4301 or DR4321 instrument, or only one pen of a DR4302 or DR4322 can exist on the network, otherwise communication conflicts will exist. Pen 1 is the default when communications is specified on these models.
- **NOTE 6:** Recorder is supplied with one box of 30755820-001, 0 to 100 Even "starter" charts. For special range configuration on the DR4301, DR4302, DR4321, or DR4322 Recorder, provide the Input Type, Chart Range, Chart Speed, °C or °F, Engineering Units, Linear or Non-Linear Chart Type when ordering.

For example: Pen 1: "J" Thermocouple, 0-375 °F, 7-Day Linear Chart Pen 2: 4-20 mA, 0-1000, 7-Day Linear Chart

For configuration on Models DR4311, DR4312, DR4331, and DR4332, the customer must supply completed "Configuration Worksheets" with order for units to be Factory configured.

1.3 About This Manual

All models described

This manual contains instructions for installation, set up, startup, operation, troubleshooting, and repair of all recorder models listed in Subsection 1.2. The models fall into two broad categories:

- basic version without display: DR4301, DR4302, DR4321, and DR4322
- enhanced version with display: DR4311, DR4312, DR4331, and DR4332

Some sections in the manual apply to all models, while others contain information specific to one of these two categories. Unless a section's title refers to recorders "without display" or "with display", the information in the section applies to all models. To see which sections apply to your recorder, see Figure 1-1.

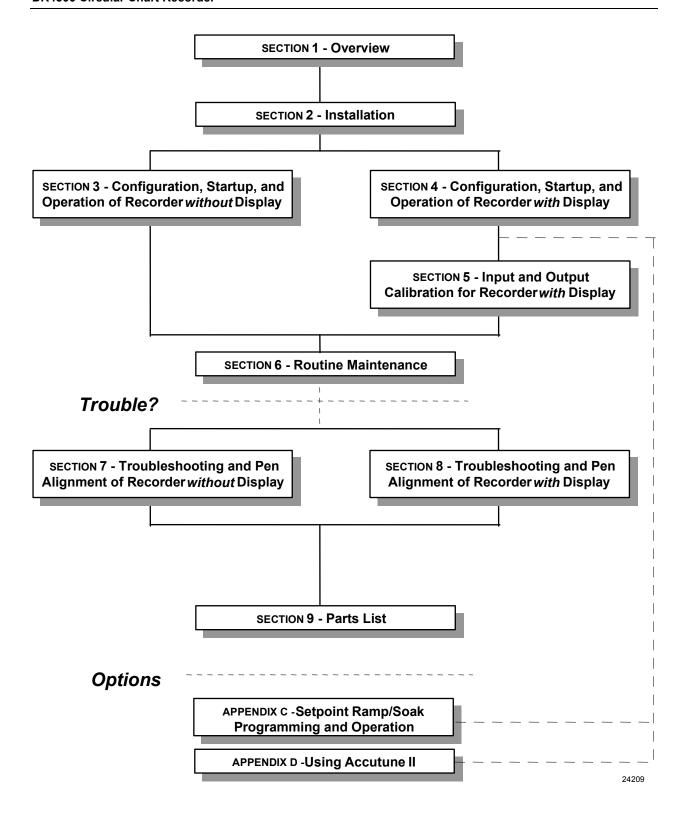


Figure 1-1 Guide to Manual's Organization

2. Installation

2.1 Overview

Introduction

Installation of the DR4300 recorder consists of mounting and wiring the recorder according to the instructions given in this section.

Read the pre-installation information below, check the model number interpretation in Section 1, and become familiar with your model selections, then proceed with installation.

What's in this section?

The following is a list of topics in this section.

Topic	See Page
2.1 Overview	11
2.2 Mounting Considerations and Overall Dimensions	15
2.3 Mounting Methods	16
2.4 Wiring Prerequisites	22
2.5 Input Wiring	27
2.6 Output Wiring	37

Pre-installation information

If the recorder has not been removed from its shipping carton, inspect the carton for damage and remove the recorder. Inspect the unit for any obvious shipping damage and report any damage due to transit to the carrier.

- Make sure a bag containing mounting hardware is included in the carton with the recorder.
- Check that the model number shown on the chart plate agrees with what you have ordered.

Operating limits

We recommend that you review and adhere to the operating limits listed in Table 2-1 when you install your recorder.

Table 2-1 Operating Limits and Condensed Specifications

Condition	Specifications
Accuracy	See Appendix A
Ambient Temperature	0 °C to 55 °C [32 °F to 131 °F]
Relative Humidity	5 % to 90 % RH at 40 °C [104 °F]
Vibration Frequency Acceleration	0 to 200 Hz 0.5 g
Mechanical Shock Acceleration Duration	5 g 30 ms
Mounting Position from Vertical Tilted Forward Tilted Backward Tilted to side (±)	5° 90° 20°
Power Voltage (ac/dc) Frequency (Hz)	100 Vac to 240 Vac or 20 Vac/Vdc to 27 Vac/Vdc 49 Hz to 61 Hz
Power Consumption	20 Watts maximum
Type of Actuations	Thermocouple: B, E, E (low), J, J (low), K, K (low), Ni-Ni Moly, Nicrosil-Nisil, R, S, T, T (low), W5W26 RTD: Platinum 100 ohms*, 100 ohms (low)*, 100 ohms** Linear: 4-20 mA dc, 0-20 mA dc, 0-10 mV dc, 0-100 mV dc, 0-200 mV dc, 0-1 Vdc, 0-2 Vdc, 0-5 Vdc, 0-10 Vdc, 1-5 Vdc, 2-10 Vdc Digital: +24 Vdc source for external dry contacts or isolated solid state contacts *IEC Alpha = 0.00385 **Alpha = 0.00391
Minimum Input Span	Range is fully configurable within span limitation of the sensing element.
Input Impedance	mA dc: 250 ohms Vdc: 200K ohms RTD: 13.3 K ohms All others: 10 Megohms
Span Step Response Time	7 seconds maximum
Reproducibility	0.1 percent of span
Sampling Rate	Input sampled 3 times per second

Condition	Specifications		
Input Filter	Without Display: Analog with time constant of 3 seconds and digital with time constant of 1 second.		
	With Display: Analog with time constant of 3 seconds and digital adjustable 0 seconds to 120 seconds.		
Case	Molded, foamed-Noryl with gasketed door to meet NEMA 3 enclosure requirements.		
Pen	Disposable fiber-tip ink cartridge, line length per cartridge more than 305 m [1000 ft]		
	One Pen: Purple Two Pen: Purple (pen 1) and red (pen 2)		
	NOTE: Only pen 1 (purple) is referenced to the chart time line.		
Chart	262 mm [10.32-inch] diameter chart with standard preprinted markings and a calibrated width of 100 mm [4 inches].		
Wiring Connections	Screw terminals (2 piece)		
Color	Case: Black Door: Standard—Gray; Optional—Carribean blue or black		
Weight	5.4 kg [12 lbs]		
Mounting	Panel-, pipe- or surface-mounted		
Installation Category (Overvoltage Category)	Category II: Energy-consuming Equipment Supplied from the Fixed Installation, Local Level Appliances, and Industrial Control Equipment (EN61010-1).		
Pollution Degree	Pollution Degree 2: Normally Non-conductive Pollution with Occasional Conductivity Caused by Condensation (Ref. IEC 664-1).		
EMC Classification	Group 1, Class A: ISM Equipment (EN55011, emissions), Industrial Equipment (EN50082-2, Immunity).		
Dielectric Insulation	AC Main to Inputs/Outputs 250 Vac Input to Input 250 Vac Input to Output 250 Vac (except Digital Input to Current Output) AC Main to Transmitter Power 250 Vac		
Options			
Current Output (Isolated)	Range can be set anywhere between 4 mA and 21 mA, and as direct or reverse action. Resolution: 11 bits for 4 mA to 21 mA Accuracy: 0.5 % full scale Temperature Stability: 0.1 % F.S./°C Load Resistance: 0 ohms to 600 ohms		
Electromechanical Relay Output	SPDT contacts. Internally socketed. Resistive Load: 5 A @ 120 Vac or 2.5 A @ 240 Vac or 30 Vdc. Inductive Load: 50 VA @ 120 Vac or 240 Vac. Motor: 1/6 H.P.		

Condition	Specifications
Solid State Relay Output	SPST solid state contacts consisting of a triac NO output. Internally socketed. Resistive Load: 1.0 A @ 25 °C for 120 Vac or 240 Vac. 0.5 A @ 55 °C for 120 Vac or 240 Vac. Inductive Load: 50 VA @ 120 Vac or 240 Vac.
Open Collector Output	Maximum Sink Current: 20 mA Internally powered @ 30 Vdc Opto-isolated from all other circuits except current output, but not from each other. Socketed jumper assembly replaces relay.
Modbus Communication	Baud Rate: 19,200 maximum, configurable for models with display; fixed at 9,600 for models without display Protocol: Modbus Length of Link: 1,219 m [4,000 ft] maximum Link Characteristics: Two-wire, multidrop
Digital Inputs (Supply common with current output)	+24 Vdc source for external dry contacts or isolated solid state contacts for either of the two inputs. On contact closure the recorder will respond according to how each digital input is configured. Opening contact causes return to previous state.
Transmitter Power	24 Vdc with adjustment of ± 6 % (22.6 to 25.4) 100 mA maximum output

2.2 Mounting Considerations and Overall Dimensions

Physical considerations

The recorder can be mounted flush in a panel or on the surface of a panel or wall using the mounting kit supplied with the recorder. Adequate access space must be available at the back of the panel for installation and servicing.

A kit for mounting the unit on a pipe is available (see Section 9 Parts List).

Overall dimensions

The overall dimensions and panel cutout requirements for mounting the recorder are shown in Figure 2-1.

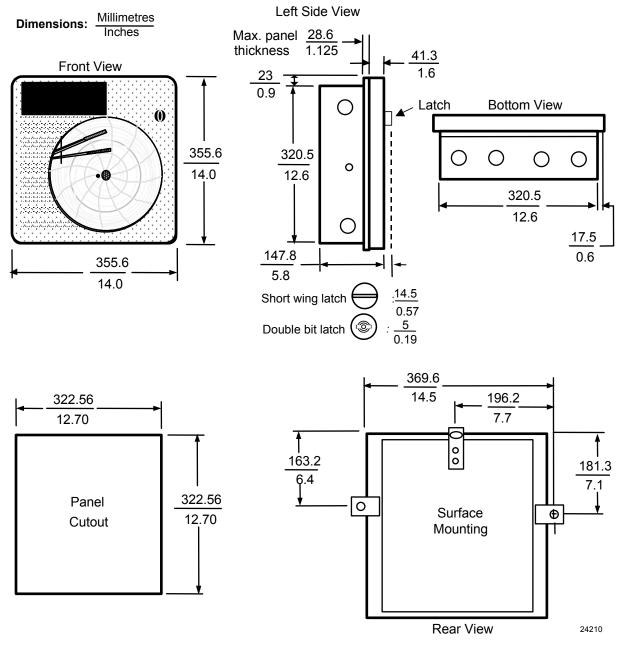


Figure 2-1 Overall Dimensions

2.3 Mounting Methods

2.3.1 Introduction

Overview

This section provides instructions for mounting the recorder using one of the following methods:

- Flush in a panel (Subsection 2.3.2)
- Flush in a panel for recorders with NEMA4 or Heavy Duty door (Subsection 2.3.3)
- On a 2-inch pipe (Subsection 2.3.4)
 [A pipe mounting kit is available (see Section 9 Parts List).]
- On the surface of a wall or panel (see Subsection 2.3.5).

Choose the method that meets your mounting requirements. Use the associated dimension drawings for reference.

How to remove knockouts for conduits

Before you mount the recorder, remove the appropriate plugs in the bottom and/or sides of the recorder case for wire entry via 1/2" (12.7 mm) conduits. Refer to Figure 2-2 for plug locations. To see recommended use of conduits for various types of wiring, refer to Figure 2-7 and Figure 2-8.

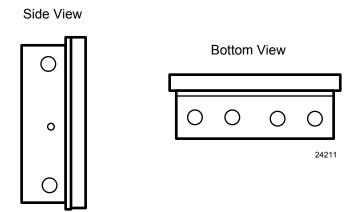


Figure 2-2 Plug Locations

2.3.2 Mounting Flush in Panel (New Panel Cutout)

Procedure

Refer to Figure 2-3 and follow the procedure in Table 2-2 to make a new cutout in a panel and mount your recorder in the cutout.

Table 2-2 Mounting Flush in a New Panel Cutout

Step	Action
1	At the appropriate location, make a square cutout in the panel. Cutout dimensions should be 322.56 mm \pm 1.52 mm x 322.56 mm \pm 1.52 mm [12.7 in \pm 0.060 in x 12.7 in \pm 0.060 in]. See Figure 2-3.
2	Orient the recorder case properly and slide it into the cutout from the front of the panel. Support the recorder as shown in Steps 3 and 4.
3	Refer to Figure 2-3. From the back of the panel, attach a mounting bracket to each side of the recorder case using a 1/4-20 x 1/2-inch hex screw for each bracket (mounting hardware supplied with recorder). Leave the screws slightly loose so you can adjust the brackets.
4	While holding the recorder firmly against the panel, slide each bracket against the back of the panel and tighten the screws.

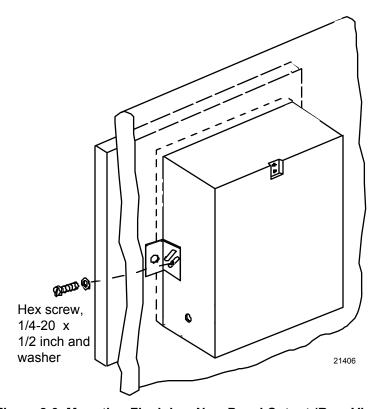



Figure 2-3 Mounting Flush in a New Panel Cutout (Rear View)

2.3.3 Panel Mounting Recorder with NEMA4 or Heavy Duty door

Refer to Figure 2-4 and follow the procedure in Table 2-3 to panel mount your recorder if it has a NEMA4 or Heavy Duty door.

Table 2-3 Procedure for Mounting Recorder with NEMA4 or Heavy Duty Door

Step	Action
1	Place the panel gasket onto the rear flange of the recorder case.
2	Install four #8-32 screws on each of the three mounting brackets so the ends of the screw threads are flush with the face of the bracket.
	NOTE: Screw heads to be flange side of brackets.
3	Insert the case with gasket into the panel opening.
4	Install one left hand and one right hand bracket with 1/4 x 3/8 long bolts and lockwashers on each side of the case.
	NOTE: The notch on each bracket should be facing upward towards the top of the unit.
	Do not tighten the hex bolts at this time.
5	Install the remaining right hand bracket on the top with the 1/4 x 3/4 long bolt and lockwasher.
	Do not tighten the bolt at this time.
6	Place a screwdriver blade on the notch of each bracket and firmly tap so that each bracket firmly mates the case with gasket to the panel.
	NOTE: Keep brackets parallel to case. Tighten the three 1/4 hex bolts to hold the brackets in place.
7	Start to tighten the #8-32 x 1/2 screws on the right side bracket. Alternate screws at opposite ends until all four screws have a minimum of 10 lb-in of torque applied. Do the same to both the left side and top brackets.
	When completed all twelve screws should have a minimum of 10 lb-in of torque applied. This assures the case and panel gasket are adequately sealed against the panel.

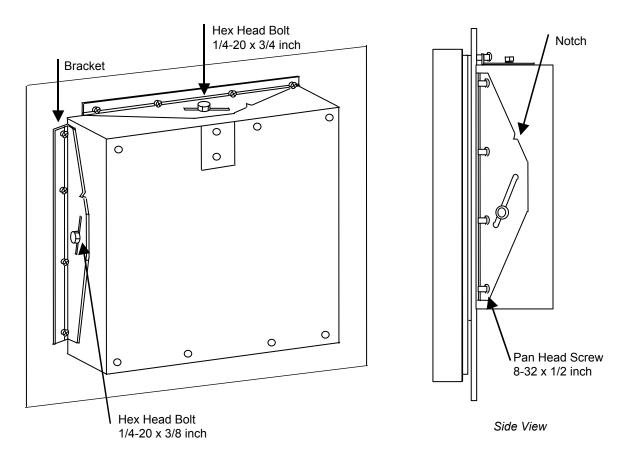

NOTE: Mounting brackets and attaching hardware are included in kit 30755065-502; panel gasket supplied in kit 51197657-501.

Figure 2-4 Panel Mounting Recorder with NEMA4 or Heavy Duty Door

2.3.4 Mounting on a 2-inch pipe

Refer to Figure 2-5 and follow the procedure in Table 2-4 to mount your recorder on a 2-inch pipe.

Table 2-4 Pipe Mounting Procedure

Step	Action
1	Using the eight plastite screws supplied with the pipe mounting bracket kit, attach the two mounting brackets (flat side against the case) to the back of the recorder. Refer to Figure 2-5 for location.
2	Position the recorder with brackets on the 2-inch pipe.
3	Install the U-bolts around the pipe and through the bracket holes. Secure with lockwashers and hex nuts provided.

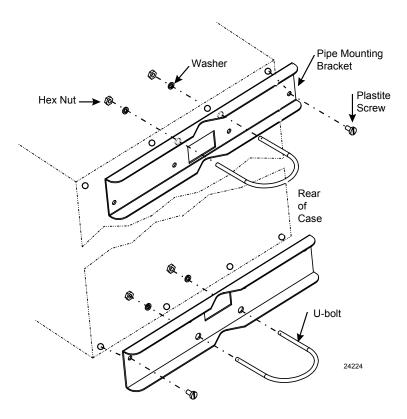


Figure 2-5 Pipe Mounting Brackets

2.3.5 Mounting on Surface (of Panel or Wall)

Procedure

Refer to Figure 2-6 and follow the procedure in Table 2-5 to mount your recorder on a surface (panel or wall).

ATTENTION

Three (3) screws must be supplied by the user for attaching the mounting hardware (brackets and support hook) to panel or wall.

Table 2-5 Mounting Flush on a Surface (of Panel or Wall)

Step	Action
1	Using two flat-head 10-32 x 1/4-inch screws supplied with the recorder, fasten the support hook into the recess at the back of the recorder case as shown in Figure 2-6.
2	Using 1/4-20 x 1/2-inch hex screws and lockwashers, attach a mounting bracket to each side of the case. Leave the screws slightly loose so as to permit some adjustments of the brackets.
3	On the panel, mark the locations for the three holes, as shown by the hole pattern in Figure 2-6.
4	Using a drill of appropriate size for user-supplied screws, drill a hole in the front of the panel for the eye of the support hook.
5	Insert the screws for the support hook into the panel, allowing the screw head to protrude approximately 5/16-inch.
6	Hang the recorder support hook on the screw. Make sure that the locations for the other two holes (marked in Step 3) are correct. If not, make sure that the recorder is aligned vertically, and use the brackets as templates to mark the proper locations.
7	Remove the recorder from the panel and drill the other two holes.
8	Hang the recorder on the screw by the support hook and insert the other two user-supplied screws through the brackets into the panel. Tighten the two hex screws that attach the brackets to the case.

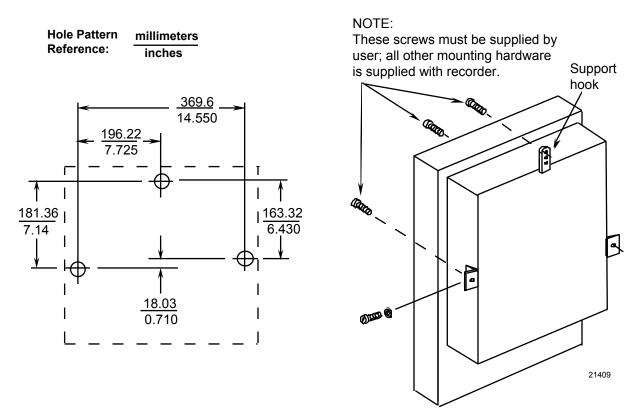


Figure 2-6 Mounting Flush on a Surface of Panel or Wall (Rear View)

2.4 Wiring Prerequisites

ATTENTION

Wiring should be performed by qualified personnel.

Electrical considerations



The recorder is considered "rack and panel mounted equipment" per EN 61010-1, Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use, Part 1: General Requirements.

Recorder grounding



PROTECTIVE EARTH (GROUND)

Grounding of this recorder shall be in accordance with national and local electrical codes.



NOISELESS (CLEAN) EARTH (GROUND)

To minimize electrical noise and transients that may adversely affect the recorder, connection of the recorder terminal (located in the rear of the case) to a local earth (ground) using a No. 11 (4 mm²) braided copper conductor is recommended.

Taking electrical noise precautions

Electrical noise is composed of unabated electrical signals which produce undesirable effects in measurement and control circuits.

Digital equipment is especially sensitive to the effects of electrical noise. Your recorder has built-in circuits to reduce the effect of electrical noise from various sources. If there is a need to further reduce these effects:

- **Separate External Wiring**—Separate connecting wires into bundles (see Table 2-6) and route the individual bundles through separate conduits or metal trays.
- **Use Suppression Devices**—For additional noise protection, you may want to add suppression devices at the external source. Appropriate suppression devices are commercially available.

For additional noise information, refer to document 51-52-05-01, *How to Apply Digital Instrumentation in Severe Electrical Noise Environments*.

CE conformity special conditions (Europe)

Shielded cables with a drain wire are required for all input and output cables. All instrument shielded cable drain wires must be connected to a low impedance earth ground at the entry fitting. Cable/conduit entry fittings shall effectively terminate the cable shield connecting the shield to the enclosure conductive coating. The shielded cable shield shall not extend into the instrument closure.

Recommended wiring routing

The case is equipped with numerous knock-outs (plugs) for wiring conduits (see Figure 2-2). To see recommended use of these points of entry for various types of wiring, refer to Figure 2-7 and Figure 2-8.


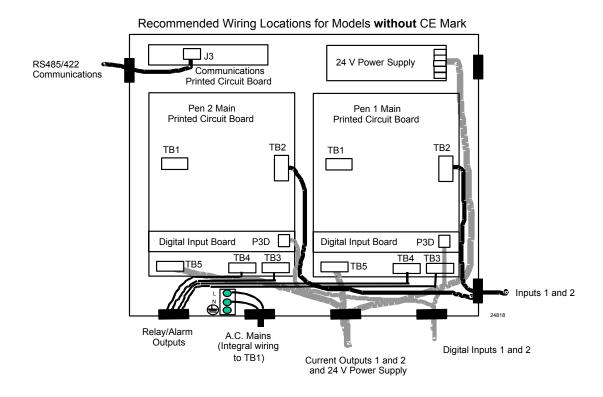


Figure 2-7 Recommended Wiring Routing - Models Without CE Mark

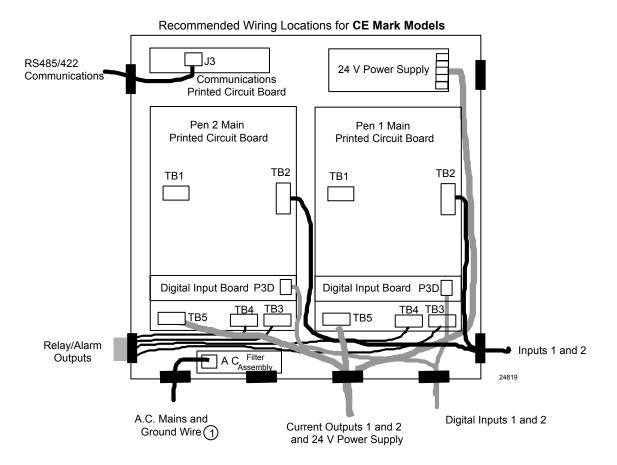

1 A braided copper shield shall be connected to ground (green screw on the filter assembly).

A separate braided copper shield shall be used to connect (on rear of case to chassis ground

Figure 2-8 Recommended Wiring Routing - Models With CE Mark

Wire bundling recommendations

Bundling together the wrong wires can adversely affect the recorder's performance. Table 2-6 shows which wire functions may usually be bundled together. **Do not bundle together wires from different categories.**

Table 2-6 Wiring Bundling Categories

Category	Wire Functions
1	Line power wiring
	Earth ground wiring
	Control relay output wiring
	Line voltage alarm wiring
2	Analog signal wire, such as:
	Input signal wire (thermocouple, 4 to 20 mA, etc.)
	4-20 mA output signal wiring
	Digital input wiring
	Communication wiring
	Transmitter power out wiring
3	Low voltage alarm relay output wiring
	Low voltage wiring to solid state type control circuits

Wiring diagrams

To determine the appropriate diagrams for wiring your recorder, refer to the model number interpretation in *Section 1 - Overview*. The model number of the recorder can be found on the chart plate.

Using the information contained in the model number, select the appropriate wiring diagrams from the figures listed in Table 2-7 and wire the recorder accordingly.

Table 2-7 Wiring Illustrations

Wiring Requirements	See
Power Wiring - Models Without CE Mark	Figure 2-9
Power Wiring - Models With CE Mark	Figure 2-10
Analog Input Wiring	Figure 2-11
Digital Input Wiring	Figure 2-12
Communication Wiring	Figure 2-13
Relay Output Wiring	Figure 2-14
Open Collector Relay Output Wiring	Figure 2-15
Current Output Wiring	Figure 2-16
Transmitter Power Out Wiring	Figure 2-17

2.5 Input Wiring

Introduction

This section describes procedures for wiring power, analog inputs, optional digital inputs, and the optional communication link.

2.5.1 Power Wiring

Introduction

Recorder models are available for use with 100 to 240 Vac or 20 Vdc to 27 Vdc power. (See Model Number in *Section 1 Overview*.)

Procedure

The procedure to connect power wiring is in Table 2-8.

- See
- Figure 2-9 for models without CE Mark.
- See
- Figure 2-10 for models with CE Mark.

WARNING



SHOCK HAZARD

Be sure that the line voltage is OFF before connecting the power wires to the recorder. Failure to observe this precaution can result in serious personal injury or death.

CAUTION



This equipment is suitable for connection to 100 to 240 Vac (49 to 61 Hz) or 20 to 27 Vac/Vdc power supply mains. It is the user's responsibility to provide a switch and non-time delay (North America), quick-acting, high breaking capacity, Type F, (Europe) 1/2 A, 250 V fuse(s) or circuit-breaker as part of the installation. The switch or circuit-breaker shall be located in close proximity to the recorder, within easy reach of the operator. The switch or circuit-breaker shall be marked as the disconnecting device for the recorder.

Table 2-8 Procedure for Power Wiring Models

Step	Action
1	Open the recorder door. Loosen the captive screw in the chart plate and swing the plate out.
2	Locate the power terminal block for your recorder model.
	 See Figure 2-9 for models without CE Mark. See Figure 2-10 for models with CE Mark.
	Note that the power connection between the boards on two-pen models is made at the factory. On CE Mark and UL models the connection between the terminal block at the bottom of the case and the PCA is also made at the factory. In all models, you only have to connect power to a single terminal block.
3	Run the power wires separately through the conduit hole indicated in Figure 2-7 or Figure 2-8.
4	Strip 1/4-inch maximum of insulation from the end of each wire and form end to fit under a screw connection.
	I: To avoid damaging the recorder, be sure that you install the power wires into the ew terminals as shown Figure 2-9 and Figure 2-10.
5	Tighten the screws to secure the wires.
6	Dress the wires with as much slack as possible. Do not bundle any low level signal wires with the power wires. Refer to Table 2-6 for permissible wire bundling.
	Refer to Appendix A for additional information concerning noise interference prevention.
A	WARNING SHOCK HAZARD Input line voltage may be present on the instrument ground plane if earth ground is not attached. Failure to observe this precaution can result in serious personal injury.

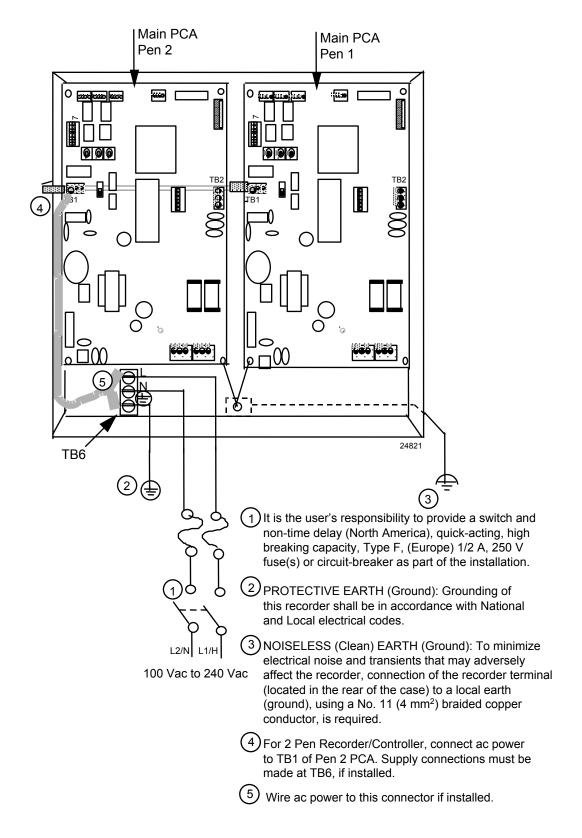


Figure 2-9 Power Wiring – Models Without CE Mark

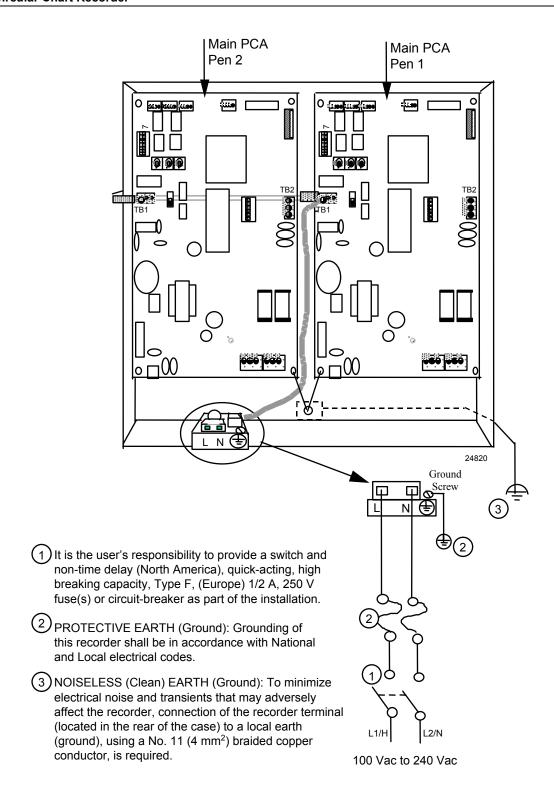


Figure 2-10 Power Wiring - Models With CE Mark

30

2.5.2 Analog Input Wiring

Introduction

The input for pen channel 1 is wired to TB2 on the printed circuit assembly (PCA) on the right (when facing recorder). The input for pen channel 2 is wired to TB2 on the PCA on the left.

Each input can be wired for thermocouple, RTD, mA, mV, or Volt actuations.

ATTENTION

Make sure you have configured the recorder to accept the desired input type. See Section 3 – Configuration, Startup, and Operation of Recorder Without Display or Section 4 – Configuration, Startup, and Operation of Recorder With Display.

Procedure

Refer to Figure 2-11 while following the procedure in Table 2-9 to install analog input wiring.

Table 2-9 Analog Input Wiring

Step	Action	
	ATTENTION To avoid damaging the recorder, be sure that you install the power wires into the correct screw terminals as shown in Figure 2-9 and Figure 2-10.	
1	Turn off the power to the recorder.	
2	Open the recorder door. Loosen the captive screw in the chart plate and swing the plate out.	
3	Locate terminal block TB2 on the right edge of the printed circuit assembly for pen 1 (refer to Figure 2-11).	
4	Run the input wires through the appropriate conduit hole (see Figure 2-7 and Figure 2-8). DO NOT bundle them with the power wires.	
5	Strip 1/4-inch maximum of insulation from the end of each wire and form end to fit under the screw terminal on the removable connection block.	
6	Insert the wires under the appropriate screws for the applicable input type. See Figure 2-11 for specific input actuation wiring.	
	Tighten the screws to secure the wires.	
7	If the recorder has two pens, repeat Steps 3 through 6 to wire the input for the second pen channel to TB2 on the PCA on the left inside of the recorder.	

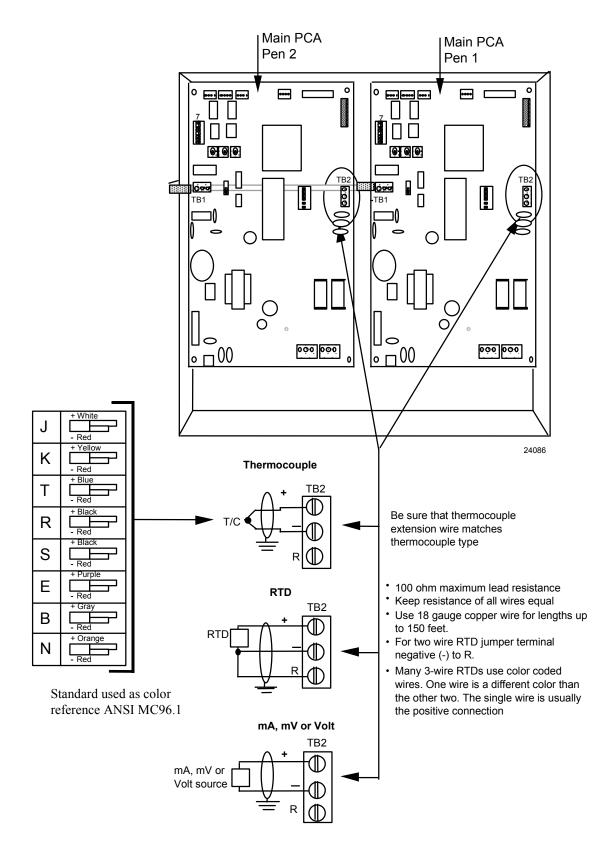


Figure 2-11 Analog Input Wiring

2.5.3 Digital Inputs (Optional)

Introduction

If the recorder hardware supports optional digital inputs, the inputs are wired to the terminal block on the digital input board mounted on stand-offs on the printed circuit assembly for the pen channel.

Procedure

Refer to Figure 2-12 while following the procedure in Table 2-10 to install digital input wiring.

Table 2-10 Digital Input Wiring

Step	Action	
	ATTENTION To avoid damaging the recorder, be sure that you install the power wires into the correct screw terminals as shown in Figure 2-9 and Figure 2-10.	
1	Open the recorder door. Loosen the captive screw in the chart plate and swing the plate out.	
2	Locate the terminal block, P3D, on the optional digital input printed circuit assembly mounted on stand-offs above the printed circuit assembly (PCA) for the pen channel. The PCA on the right inside the recorder is for pen 1; if there is a second pen, its PCA is on the left. (See Figure 2-12.)	
3	Run the input wires through the appropriate conduit hole (see Figure 2-7 and Figure 2-8). DO NOT bundle them with the power wires.	
4	Strip 1/4-inch maximum of insulation from the end of each wire and form end to fit under a screw connection.	
5	Insert the wires under the appropriate screws for the input number (labeled on assembly). Tighten the screws to secure the wires.	
6	If the recorder has two pens, repeat Steps 2 through 5 to wire the input for the second pen channel.	

12/03

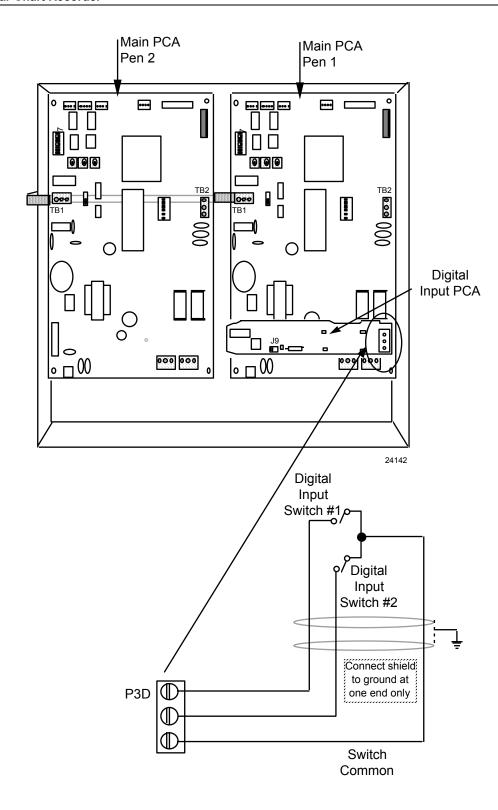


Figure 2-12 Digital Input Wiring

2.5.4 Communication (Optional)

Introduction

If the recorder hardware supports optional Modbus RTU communication, the communication link is wired to the terminal block on the communication board in the upper left corner of the case.

ATTENTION

Network address, baud rate, and transmitter delay are configurable for models with a display (see Section 4).

For models without a display the address of pen 1 is fixed at 127, baud rate is fixed at 9600, and there is no transmitter delay. Only one pen channel with the fixed address of 127 can be on the network. Pen channel 2, if present in the recorder, cannot communicate. (Display is required to configure a unique address for the second pen to communicate.)

Procedure

Refer to Figure 2-13 while following the procedure in Table 2-11 to install communication wiring.

Table 2-11 Communication Wiring

Step	Action	
	ATTENTION To avoid damaging the recorder, be sure that you install the power wires into the correct screw terminals as shown Figure 2-9 and Figure 2-10.	
1	Open the recorder door. Loosen the captive screw in the chart plate and swing the plate out.	
2	Locate the terminal block on the optional communication printed circuit assembly in the upper left corner of the case. (See Figure 2-13.)	
3	Run the communication wires through the appropriate conduit hole (see Figure 2-7 and Figure 2-8). DO NOT bundle them with the power wires.	
4	Strip 1/4-inch maximum of insulation from the end of each wire and form end to fit under a screw connection.	
5	Insert the wires under the appropriate screws (labeled on assembly). Tighten the screws to secure the wires.	

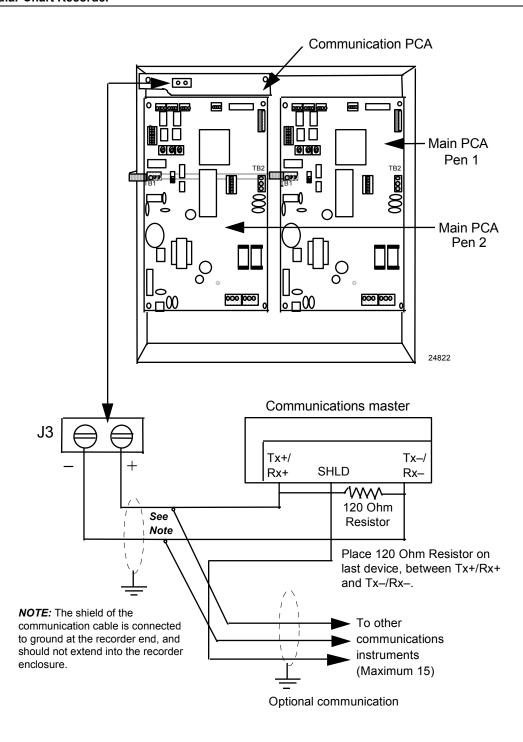


Figure 2-13 Communication Wiring

2.6 Output Wiring

ATTENTION

The recorder is available with several options and multiple output algorithms. Output terminal use depends on which output algorithm and options are used. The wiring diagrams in this section show how to wire the terminals. To see which terminals are used for what output function, refer to Table 2-12. This table applies to all control types. Each pen channel is configured separately, and each can use a different output algorithm. (The output algorithm is set with the control set up group "OUTALG" parameter.)

Table 2-12 Output Terminal Use for Output Algorithm and Option Combinations

	Terminal Function		
OUTALG value	Current Out (TB5)	Relay 1 (TB4)	Relay 2 (TB3)
NONE	auxilary output*	alarm 1	alarm 2 or timer*
RLY	auxilary output*	control	alarm 2 or timer*
RLYD	auxilary output*	control 1 (heat)	control 2 (cool)
CUR	control	alarm 1	alarm 2 or timer*
CurT	control (cool)	control (heat)	alarm 2 or timer*
Tcur	control (heat)	control (cool)	alarm 2 or timer*

^{*}Option

2.6.1 Discrete Outputs

Introduction

Each pen channel in the recorder models having display and keypad can be equipped with two optional discrete outputs. These outputs can be used for control or alarming, depending on the configuration as described in *Section 4 – Configuration, Startup, and Operation of Recorder with Display*.

Three types of discrete outputs are available:

- electromechanical relay
- solid state relay
- open collector output

ATTENTION

The electromechanical relays on the printed circuit assembly (PCA) for each pen channel can be wired for Normally Open (NO) and Normally Closed (NC) operation.

ATTENTION

The DR4300 is available as a limit controller. In a limit controller each pen channel's printed circuit assembly Relay 1 (TB4 terminals 3 and 2 for NO contacts, and 2 and 1 for NC contacts) is used for limit control. When the recorder detects that the input has exceeded the limit (or fallen below the limit, depending on configuration), the controller goes to the limit state: Relay 1 is de-energized.

Insulation of output wires

The insulation of wires connected to the relay output terminals shall be rated for the highest voltage involved. Extra Low Voltage (ELV) wiring (input, current output, and low voltage control/alarm circuits) shall be separated from HAZARDOUS LIVE (>30 Vac, 42.4 Vpeak or 60 Vdc) wiring per Table 2-6.

Procedure

Follow the procedure in Table 2-13 to wire the discrete outputs.

Refer to Figure 2-14 for wiring electromechanical and solid state relays.

Refer to Figure 2-15 for wiring open collector outputs.


Refer to Table 2-12 to see the output function of each terminal with the available output algorithms and options.

Table 2-13 Relay Output Wiring - 1 or 2 Pen Models

Step	Action	
	ATTENTION To avoid damaging the recorder, be sure that you install the power wires into the correct screw terminals as shown in Figure 2-9 and Figure 2-10.	
1	Turn off the power to the recorder.	
2	Open the recorder door. Loosen the captive screw in the chart plate and swing the plate out.	
3	Locate terminal blocks TB3* and TB4* on the bottom right edge of the printed circuit assembly (PCA) for pen 1 or pen 2.	
4	Run the output wires through the appropriate conduit hole (see Figure 2-7 and Figure 2-8). DO NOT bundle them with input wires.	
5	Strip 1/4-inch maximum of insulation from the end of each wire and form end to fit under a screw connection.	
6	Insert the wires under the appropriate screws for the applicable relay output as shown in the figures. Tighten the screws to secure the wires.	

^{*}TB3 is output 2.

TB4 is output 1.

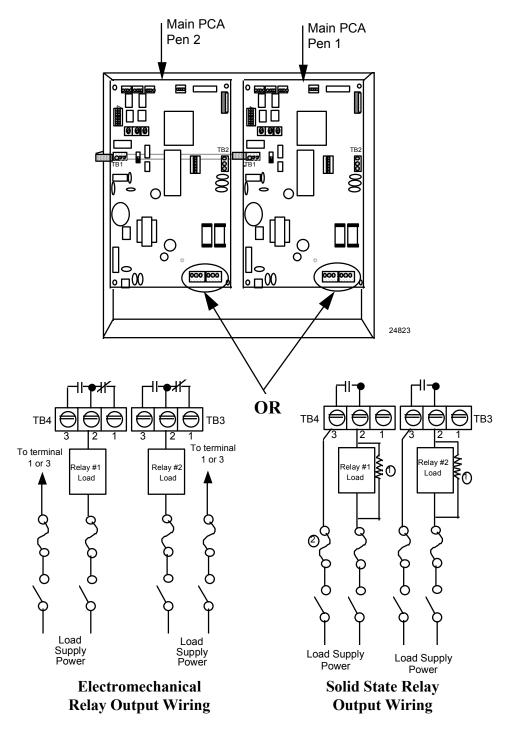

① If the load current is less than the minimum rated value of 20 mA, there may be a residual voltage across both ends of the load even if the relay is turned off. Use a dummy resistor as shown to counteract this. The total current through the resistor and the load current must exceed 20 mA.

Figure 2-14 Relay Output Wiring

² Solid State relays are rated at 0.5 Amps. Size fuses accordingly.

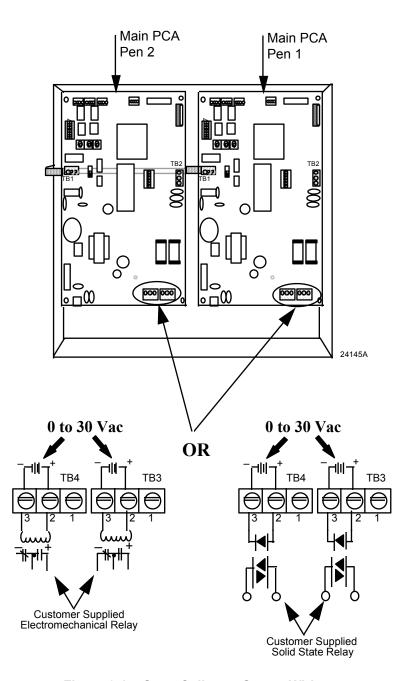


Figure 2-15 Open Collector Output Wiring

2.6.2 Current Output

Introduction

4 to 20 mA current outputs are optionally available for each pen channel in the recorder models having display and keypad.

Insulation of output wires

The insulation of wires connected to the relay output terminals shall be rated for the highest voltage involved. Extra Low Voltage (ELV) wiring (input, current output, and low voltage control/alarm circuits) shall be separated from HAZARDOUS LIVE (>30 Vac, 42.4 Vpeak or 60 Vdc) wiring per Table 2-6.

Procedure

Refer to Figure 2-16 and follow the procedure in Table 2-14 to wire the current outputs.

Refer to Table 2-12 to see the output function of TB5 with the available output algorithms and options.

Table 2-14 Current Output Wiring

Step	Action	
	ATTENTION To avoid damaging the recorder, be sure that you install the power wires into the correct screw terminals as shown in Figure 2-9 and Figure 2-10.	
1	Turn off the power to the recorder.	
2	Open the recorder door. Loosen the captive screw in the chart plate and swing the plate out.	
3	Locate terminal block TB5 on the printed circuit assembly (PCA) for pen 1 or pen 2. (See Figure 2-16.)	
4	Run the output wires through the appropriate conduit hole (see Figure 2-7 and Figure 2-8). Refer to Table 2-6 for acceptable wire bundling.	
5	Strip 1/4-inch maximum of insulation from the end of each wire and form end to fit under a screw connection.	
6	Insert the wires under the appropriate screws for the applicable relay output as shown in the figure. Tighten the screws to secure the wires.	

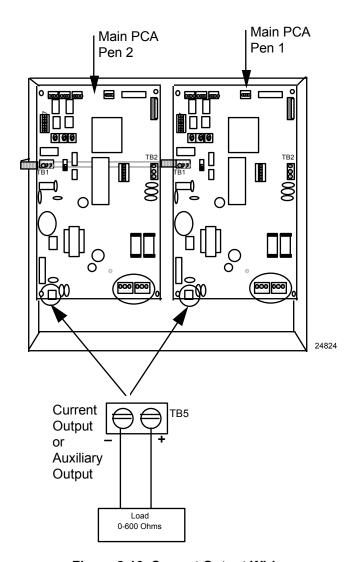


Figure 2-16 Current Output Wiring

2.6.3 Transmitter Power Out

Introduction

A recorder model is available that provides +24 Vdc power out to a transmitter.

Procedure

Refer to Figure 2-17 and follow the procedure in Table 2-15 to wire the transmitter power out.

Table 2-15 Transmitter Power Out Wiring

Step	Action	
	ATTENTION To avoid damaging the recorder, be sure that you install the power wires into the correct screw terminals as shown in Figure 2-9 and Figure 2-10.	
1	Turn off the power to the recorder.	
2	Open the recorder door. Loosen the captive screw in the chart plate and swing the plate out.	
3	Locate the DC OUT terminal block on the Transmitter Power Module, located above the printed circuit assembly (PCA) for pen 1. (See Figure 2-17.)	
4	Run the output wires through the appropriate conduit hole (see Figure 2-7 and Figure 2-8). Refer to Table 2-6 for acceptable wire bundling.	
5	Strip 1/4-inch maximum of insulation from the end of each wire and form end to fit under a screw connection.	
6	Insert the wires under the appropriate screws for the transmitter power out as shown in the figure. Tighten the screws to secure the wires.	

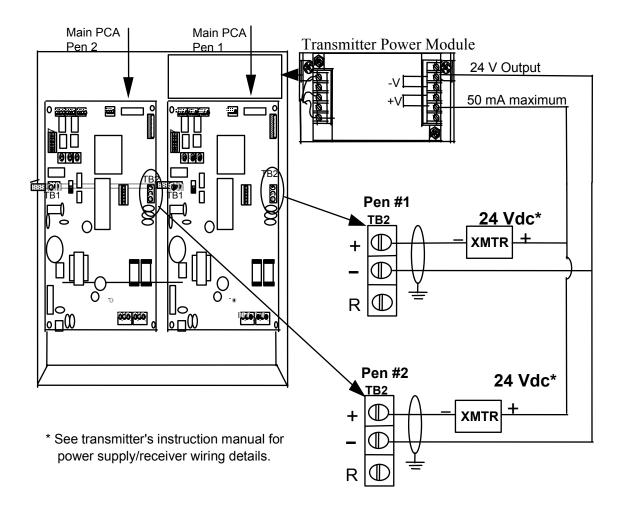


Figure 2-17 Transmitter Power Out Wiring

NOTE: Ensure switches on SW6 are set to their correct positions prior to applying power to transmitter supply.

For switch settings see Table 3-2 (recorders without display) or Table 4-3 (recorders with display).

3. Configuration, Startup, and Operation of Basic Recorder without Display

3.1 Overview

Introduction

Set up the functionality of the models that do not have a display and keypad using configuration and input switches. Each pen channel in the recorder has an associated printed circuit assembly (PCA) shown in Figure 3-1. The configuration switches are the SW1 switchbank. The input switches are the SW6 switchbank. If your recorder is equipped with two pens, the printed circuit assemblies for the two pens can be set up differently. The PCA for pen 1 (purple) is on the right (when facing the recorder); the PCA for pen 2 (red) is on the left (if present).

Set up is fast and easy. This section includes a table that shows the various available combinations of recording selections (such as chart range, length of time for single rotation of chart, whether the input is linear or non-linear), input actuation types, and whether jumper R56 should be in or out. Find your desired configuration for the pen 1 channel on the table, then set the SW1 and SW6 switches as indicated. Repeat the process for the pen 2 channel, if available on your recorder, and set up is complete.

What's in this section?

The following is a list of topics covered in this section.

Topic	See Page
3.1 Overview	45
3.2 Configuration (Recording Set Up)	46
3.3 Startup and Operation	65



WARNING—SHOCK HAZARD



SET THE SWITCHES DESCRIBED IN THIS SECTION WITH THE UNIT POWER DISCONNECTED. DO NOT TOUCH POWER CONNECTIONS AT TB1. FAILURE TO OBSERVE THIS PRECAUTION CAN RESULT IN EXPOSURE TO A POTENTIALLY LETHAL SHOCK HAZARD. MORE THAN ONE SWITCH MAY BE REQUIRED TO DE-ENERGIZE UNIT.

3.2 Configuration (Recording Set Up)

3.2.1 Setting Configuration and Input Switches

Introduction

Configuration switches SW1 (see Figure 3-1) and input switches SW6 are provided on each printed circuit assembly associated with a pen channel. If your recorder is equipped with two pens, the printed circuit assemblies for the two pens can be set up differently.

Table 3-2 shows the various available combinations of recording selections (such as chart range, length of time for single rotation of chart, whether input is linear or non-linear), input actuation types, and whether jumper R56 should be in or out.

Figure 3-2 shows a sample chart for a 1-pen recorder.

Procedure

Follow the procedure in Table 3-1 to set up your recorder model without display. (To set up a model with a display see *Section 4 – Configuration, Startup, and Operation of Recorder with Display*.)

The procedure described here assumes that the chart door is opened, the chart plate is swung out, and the power is removed.

WARNING



SHOCK HAZARD

When the unit is powered a potentially lethal shock hazard exists at the AC line connections at TB1 on each printed circuit assembly. Make sure the unit power is disconnected before starting the procedure. More than one switch may be required to de-energize the recorder.

Failure to observe this precaution can result in exposure to a potentially lethal shock hazard.

Table 3-1 Procedure for Configuring Model without Display

Step	Action
1	Turn off the power to the recorder.
2	Go to Table 3-2 and find the desired combination of recording selections and input type for the pen 1 channel.
3	Set the switches in SW1 and SW6 on the pen 1 printed circuit assembly (the PCA on the right when facing recorder) as indicated in Table 3-2. (Pen 1 is purple.)
4	Repeat for pen 2 channel (if available).
5	For each PCA, make a note of the number assigned to the configuration (from first column of Table 3-2). If you have to call Honeywell Technical Assistance for help, tell the support staff the configuration number(s) of the pen channel(s) in your recorder to speed up the troubleshooting process.

ATTENTION

If you set the switches in an ON/OFF combination that does not match any of the configurations in Table 3-2, the recorder will use configuration #1.


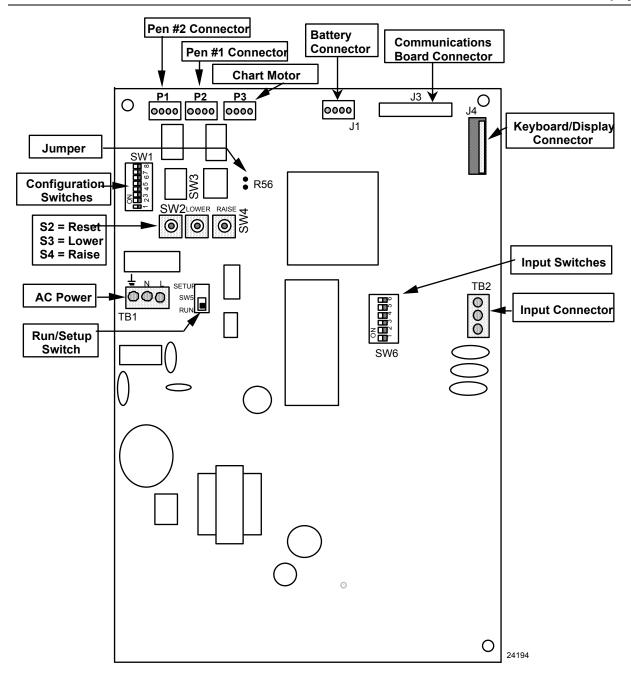


Figure 3-1 Location of Configuration and Input Switches

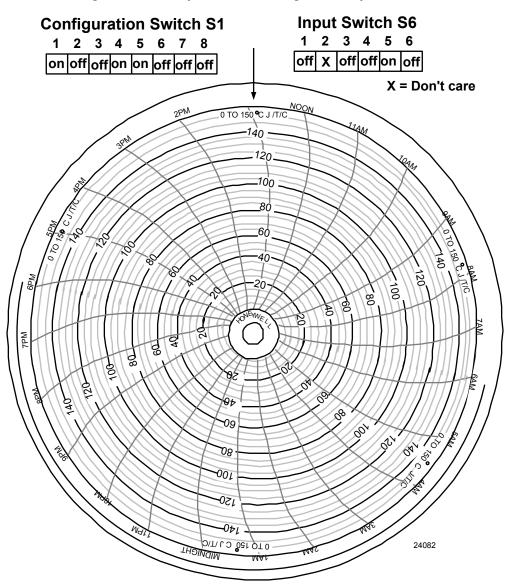

Configuration and Input switch settings for sample chart

Summary of Input Set Up Switch S6 Functions

1	2	3	4	5	6
200 mV	Burnout	RTD	Volts	mV	mA

Figure 3-2 Sample Chart for Single Pen Recorder

Table 3-2 Configuration and Input Switch Settings for Models without Display

		J-2 O					-	-											- •			
CONFIG S	8	□ = off ■ = on Any RTD marked with an asterisk is IEC Alpha = 0.00391 All other RTDs are IEC Alpha = 0.00385 ☑ in column for SW6 switch 2 = see Subsection 3.2.2 rt Type Con- fig # CONFIG Switches (SW6)																	IN	o IPUT S		6 5 4 3 2 1
Input Type	Chart Type		EU			C	ON			che	s			INP			ches	3		Par ber	t	R56 ***
					1	2	3	4	5	6	7	8	1	2	3	4	5	6				
	Stored Configuration	0																				in
		255												×								in
	Stored Configuration	256																				out
0-1 Volt	Any linear chart 8 Hr	291												X								out
0-5 Volt	Any linear chart 8 Hr	288												X								out
0-10 Volt	Any linear chart 8 Hr	292												X								out
1-5 Volt	Any linear chart 8 Hr	289			-									X								out
2-10 Volt	Any linear chart 8 Hr	297												X								out
0-20 mA	Any linear chart 8 Hr	296												X								out
4-20 mA	Any linear chart 8 Hr	290												X								out
0-10 mV	Any linear chart 8 Hr	293			-									X								out
0-100 mV	Any linear chart 8 Hr	294				•	•							X		-						out
0-200 mV	Any linear chart 8 Hr	295								-				X								out
0-1 Volt	Any linear chart 12 Hr	301												X								out
0-5 Volt	Any linear chart 12 Hr	298				•		-						×		-						out
0-10 Volt	Any linear chart 12 Hr	302												X								out
1-5 Volt	Any linear chart 12 Hr	299												×								out
2-10 Volt	Any linear chart 12 Hr	307												X								out
0-20 mA	Any linear chart 12 Hr	306												X				-				out

	8 7 6 6 6 6 6 6 6 6 6		-) mark All ot olumn	ced her	with	Ds a	as are	IEC	sk is Alp	ha :	C AI = 0.0	038	5					NPUT SWITCH	6 5 4 3 2 1
Input Type	Chart Type	Con- fig #	EU	Non- Lin		C	ON		Swit N1)	che	s			INP		wito V6)	hes	i	Chart Part Number	R56 ***
					1	2	3	4	5	6	7	8	1	2	3	4	5	6		
4-20 mA	Any linear chart 12 Hr	300																		out
0-10 mV	Any linear chart 12 Hr	303																		out
0-100 mV	Any linear chart 12 Hr	304												×						out
0-200 mV	Any linear chart 12 Hr	305											•	×						out
0-1 Volt	Any linear chart 24 Hr	4												×					24001660-tab	in
0-5 Volt	Any linear chart 24 Hr (default setting)	1**												X					24001660-tab	in
0-10 Volt	Any linear chart 24 Hr	5												×					24001660-tab	in
1-5 Volt	Any linear chart 24 Hr	2												×					24001660-tab	in
2-10 Volt	Any linear chart 24 Hr	200												×					24001660-tab	in
0-20 mA	Any linear chart 24 Hr	9												×					24001660-tab	in
4-20 mA	Any linear chart 24 Hr	3												×					24001660-tab	in
0-10 mV	Any linear chart 24 Hr	6												×					24001660-tab	in
0-100 mV	Any linear chart 24 Hr	7												×					24001660-tab	in
0-200 mV	Any linear chart 24 Hr	8											-	×					24001660-tab	in
0-1 Volt	Any linear chart 7 Day	13												×					24001661-tab	in
0-5 Volt	Any linear chart 7 Day	10												×					24001661-tab	in
0-10 Volt	Any linear chart 7 Day	14				•	-	-						×		•			24001661-tab	in
1-5 Volt	Any linear chart 7 Day	11												×					24001661-tab	in
2-10 Volt	Any linear chart 7 Day	201												X					24001661-tab	in

NO CONFIG S	8 7 7 6 6 5 4 3 3 2 5 1 1 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5		-) mark All ot olumn	ked her	witl RT	Ds a	as are	teris IEC	sk is Alp	ha :	C AI = 0.0	038	5						6 5 4 3 2 1
Input Type	Chart Type	Con- fig #	EU	Non- Lin		C	CON		Swit N1)	tche	s			INP		wito V6)	ches	;	Chart Part Number	R56 ***
					1	2	3	4	5	6	7	8	1	2	3	4	5	6		
0-20 mA	Any linear chart 7 Day	18				•								X		•			24001661-tab	in
4-20 mA	Any linear chart 7 Day																		24001661-tab	in
0-10 mV	Any linear chart 7 Day	15			-	•	-	-						×			•		24001661-tab	in
0-100 mV	Any linear chart 7 Day	16												×					24001661-tab	in
0-200 mV	Any linear chart 7 Day	17			•				•				•	X					24001661-tab	in
B t/c	0 to 1800 °C 24 Hr	78		х							•			X					1660-135	in
E t/c	0 to 250 °C 24 Hr	41		х	•			•		•				X			•			in
J t/c	0 to 100 Even 24 hr	197	°F		•		-				•	-		X			•		1660-001	in
J t/c	0 to 100 Even 7 Day	198	°F											X					1661-001	in
J t/c	0 to 100 Even 24 hr	230	°C								•	•		×					1660-001	in
J t/c	0 to 100 Even 7 Day	231	°C									-		X					1661-001	in
J t/c	–45 to 150 °C 24 Hr	108		х										X					1660-027	in
J t/c	–45 to 150 °C 7 Day	109		x							•			X					1661-027	in
J t/c	0 to 150 °C 24 Hr	25		x										X					1660-070	in
J t/c	0 to 150 °C 7 Day	26		х										X					1661-070	in
J t/c	0 to 150 Even 24 Hr	232	۴											X					1660-180	in
J t/c	0 to 150 Even 7 Day	233	°F		•			•		•	•	-		X						in
J t/c	0 to 200 °F 24 Hr	35		х										X					1660-114	in
J t/c	0 to 200 Even 24 Hr	129	°F											X					1660-010	in
J t/c	0 to 200 Even 24 Hr	132	°C				•					-		X			•		1660-010	in
J t/c	0 to 200 Even 7 Day	135	°F											X					1661-004	in
J t/c	0 to 200 Even 7 Day	138	°C											X					1661-004	in

NO CONFIG S	8		-) mark All ot olumn	ced her	witl RT	Ds a	as are l	teris	sk is Alp	ha :	C AI = 0.0	038	5					NPUT SWITCH	2 1
Input Type	Chart Type	Con- fig #	EU	Non- Lin		(ON		Swit V1)	che	s			INP		Swite N6)	ches	•	Chart Part Number	R56 ***
		1 2 3 4 5 6 7 8 1 2 3 4 5 39 X ■ ■ □ □ ■ □ □ □ □ □ □ □ □ □														6				
J t/c	0 to 250 °C 24 Hr	39		х										×					1660-024	in
J t/c	0 to 250 °C 7 Day	40		х										X					1661-024	in
J t/c	50 to 250 Even 24 Hr	214	°F											X					1660-008	in
J t/c	–50 to 300 °F 24 Hr	257		х	-									X			•		1660-019	out
J t/c	–50 to 300 °F 7 Day	258		х		•								X			•		1661-019	out
J t/c	0 to 300 °C 24 Hr	44		х										X					1660-062	in
J t/c	0 to 300 °F 24 Hr	45		х										X					1660-002	in
J t/c	0 to 300 °F 7 Day	90		х										X					1661-002	in
J t/c	0 to 300 Even 24 Hr	143	°F											X					1660-050	in
J t/c	0 to 300 Even 7 Day	215	°F											X					1661-050	in
J t/c	0 to 300 Even 7 Day	216	°C									•		X					1661-050	in
J t/c	0 to 300 °C 7 Day	287		х		•								X					1661-062	out
J t/c	10 to 340 °C 24 Hr	46		х		•								X					1660-057	in
J t/c	10 to 340 °C 7 Day	47		х		•								X					1661-057	in
J t/c	0 to 350 Even 24 Hr	148	°C											X					1660-037	in
J t/c	0 to 350 Even 7 Day	149	°F											X					1660-037	in
J t/c	0 to 350 Even 24 Hr	217	°F											X					1660-037	in
J t/c	0 to 350 Even 7 Day	219	ç											X					1660-037	in
J t/c	0 to 400 °F 24 Hr	48		х										X					1660-012	in
J t/c	0 to 400 °C 24 Hr	50		х										X					1660-063	in
J t/c	0 to 400 Even 24 Hr	152	°F											X					1660-011	in
J t/c	0 to 400 Even 24 Hr	155	°C											X					1660-011	in
J t/c	0 to 400 Even 7 Day	158	°F											X					1661-005	in

	8 7 7 6 5 5 4 4 3 3 2 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		-) mark All ot olumn	ced her	witl RT	Ds a	as are	teris IEC	sk is Alp	ha :	C AI = 0.0	038	5					NPUT SWITCH	6 5 4 3 2 1
Input Type	Chart Type	Con- fig #	EU	Non- Lin		C	ON		Swil N1)	tche	s	_		INP		wito V6)	hes		Chart Part Number	R56 ***
					1	2	3	4	5	6	7	8	1	2	3	4	5	6		
J t/c	0 to 400 Even 7 Day	161	°C											X					1661-005	in
J t/c	0 to 400 °F 8 Hr	286		х										X					1902-001	out
J t/c	0 to 500 °F 24 Hr	54		х										X					1660-013	in
J t/c	0 to 500 °F 7 Day	95		х				•			•			X					1661-007	in
J t/c	0 to 600 °F 24 Hr	56		х										X					1660-003	in
J t/c	0 to 600 °F 7 Day	57		х										X					1661-003	in
J t/c	0 to 600 Even 24 Hr	166	۶F											X					1660-052	in
J t/c	0 to 600 Even 24 Hr	167	°C									-		X					1660-052	in
J t/c	0 to 600 Even 7 Day	234	°F									-		X					1661-008	in
J t/c	50 to 650 °F 24 Hr	100		х										X					1660-056	in
J t/c	50 to 650 °F 7 Day	101		х										X					1661-056	in
J t/c	150 to 750 °F 7 Day	102		x										X					1661-150	in
J t/c	10 to 760 °C 24 Hr	103		x										X					1660-030	in
J t/c	10 to 760 °C 7 Day	104		x										X					1661-030	in
J t/c	0 to 800 °F 24 Hr	59		х										X					1660-014	in
J t/c	0 to 800 °F 7 Day	60		х										X					1661-009	in
J t/c	0 to 800 Even 24 Hr	169	°F											X					1660-137	in
J t/c	0 to 800 Even 24 Hr	170	ç											X					1660-137	in
J t/c	0 to1000 °F 24 Hr	63		х										X					1660-015	in
J t/c	0 to1000 °F 7 Day	64		х										X					1661-010	in
J t/c	0 to 1200 °F 24 Hr	67		х										X					1660-004	in
J t/c	0 to 1200 °F 7 Day	70		х										X					1661-011	in
J t/c	0 to 1200 Even 7 Day	178	°F											X					1661-108	in

S CONFIG S	8 7 7 6 5 6 5 6 7 8 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9		-) mark All ot olumn	ced her	witl RT	Ds a	as are	teris EC	sk is Alp	ha =	C AI = 0.0	038	5						6 5 4 3 2 1
Input Type	Chart Type	Con- fig #	EU	Non- Lin			CON		Swil V1)	che	s	_		INP		wito V6)	ches	;	Chart Part Number	R56 ***
					1	2	3	4	5	6	7	8	1	2	3	4	5	6		
J t/c	0 to 1600 °F 24 Hr	72		х										X					1660-018	in
J t/c	0 to 1600 °F 7 Day	92		x										X					1661-018	in
J t/c	0 to 1600 Even 7 Day	179	°F											X					1661-109	in
K t/c	-100 to 100 Even 24 Hr	226	°F									-		X					1660-201	in
K t/c	–100 to 100 Even 24 Hr	227	°C											×					1660-201	in
K t/c	–100 to 200 Even 24 Hr	220	ç											X					1660-232	in
K t/c	–100 to 200 Even 7 Day	221	ç											X					1661-178	in
K t/c	–100 to 200 Even 24 Hr	222	°F									-		X					1660-232	in
K t/c	–100 to 200 Even 7 Day	223	°F									-		×					1661-178	in
K t/c	0 to 200 °C 24 Hr	34		х										×					1660-086	in
K t/c	0 to 200 Even 24 Hr	130	°F									-		X					1660-010	in
K t/c	0 to 200 Even 24 Hr	133	°C									-		X					1660-010	in
K t/c	0 to 200 Even 7 Day	136	°F									-		X					1661-004	in
K t/c	0 to 200 Even 7 Day	139	°C									-		X					1661-004	in
K t/c	0 to 400 °F 24 Hr	49		х										×					1660-053	in
K t/c	0 to 400 °C 24 Hr	51		х										X					1660-064	in
K t/c	0 to 400 Even 24 Hr	153	°F											X					1660-011	in
K t/c	0 to 400 Even 24 Hr	156	°C											X					1660-011	in
K t/c	0 to 400 Even 7 Day	159	°F											X					1661-005	in
K t/c	0 to 400 Even 7 Day	162	°C											X					1661-005	in
K t/c	0 to 500 °F 24 Hr	55		х										X						in
K t/c	0 to 500 °C 24 Hr	98		х										X					1660-205	in
K t/c	0 to 600 °C 24 Hr	58		х										X					1660-059	in

NO CONFIG S	8 7 6 6 5 4 3 2 2 1 SWITCHES			O marl All ot olumr	ked her	witl RT	Ds a	as are	teris	sk is Alp	ha :	C AI = 0.0	038	5					8	3 2 1
Input Type	Chart Type	Con- fig #	EU	Non- Lin		C	ON		Swit V1)	tche	s			INP		Swite N6)	ches	3	Chart Part Number	R56 ***
	1 2 3 4 5 6 7 8 1 2 3 4 5															6				
K t/c	0 to 600 Even 24 Hr																1660-052	in		
K t/c	0 to 600 Even 24 Hr	4 Hr																1660-052	in	
K t/c	0 to 600 Even 7 Day	247	°F		•									X			•			in
K t/c	0 to 800 °C 24 Hr	61		х	•									X			•		1660-060	in
K t/c	0 to 800 Even 24 Hr	171	°F		•									X			•		1660-137	in
K t/c	0 to 800 Even 24 Hr	248	°C											X			•		1660-137	in
K t/c	0 to 1000 °F 24 Hr	62		х										\boxtimes					1660-007	in
K t/c	0 to 1000 °C 24 Hr	65		х										X			•		1660-049	in
K t/c	0 to 1000 °C 7 Day	66		х										X					1661-049	in
K t/c	0 to 1000 °F 7 Day	96		х										X					1661-016	in
K t/c	0 to 1000 Even 24 Hr	174	°F											×					1660-173	in
K t/c	0 to 1000 Even 24 Hr	175	°C											X					1660-173	in
K t/c	0 to 1200 °F 24 Hr	68		х										X					1660-006	in
K t/c	0 to 1200 °C 24 Hr	69		х	•									X					1660-065	in
K t/c	0 to 1200 °F 7 Day	71		х	•									X					1661-012	in
K t/c	0 to 1200 Even 24 Hr	176	°C						•			-		\boxtimes						in
K t/c	0 to 1200 Even 7 Day	177	°F		•							-		X					1661-108	in
K t/c	0 to 1200 Even 7 Day	235	°C		•						•			X					1661-108	in
K t/c	–18 to 1320 °C 7 Day	105		х	•						•			X					1661-031	in
K t/c	0 to 1600 °F 24 Hr	73		х	•						•			X					1660-016	in
K t/c	0 to 1600 °F 7 Day	74		х				•			•			X					1661-013	in
K t/c	0 to 1600 Even 7 Day	180	°F						•					X					1661-109	in
K t/c	1200 to 1600 °F 24 Hr	268		х										X					1660-164	out

S CONFIG S	Any RTD marked with an asterisk is IEC Alpha = 0.00391 All other RTDs are IEC Alpha = 0.00385 All other RTDs are IEC Alpha = 0.00385 in column for SW6 switch 2 = see Subsection 3.2.2 put Chart Type Con- EU Non- CONFIG Switches INPUT Switches																8 INPUT SWITCH	- 1		
Input Type		Con- fig#	EU	Non- Lin		C	ON		_	tche	s			INP			ches	;	Chart Part Number	R56 ***
					1	2	3	4	5	6	7	8	1	2	3	4	5	6		
K t/c	0 to 2000 °F 24 Hr	79		Х	-	•	-	•			•			×			•		1660-005	in
K t/c	0 to 2000 °F 7 Day 0 to 2000 Even 236 °F																	1661-014	in	
K t/c	7 Day 0 to 2000 Even 236 °F □ □ ■ ■ □ ■ ■ □ ⊠ □ □ ■ ■ □ □ ■ ■ □ □ □ ■ □ □ □ □																	1660-202	in	
K t/c	24 Hr																1660-009	in		
K t/c	0 to 2400 °F 7 Day	82		х										X					1661-015	in
K t/c	0 to 2500 Even 24 Hr	185	°F											X					1660-113	in
R t/c	0 to 1600 °C 24 Hr	75		х	•	•		•			•			X			•		1660-017	in
R t/c	0 to 1600 Even 7 Day	181	°C		-				•	•		-		×			•		1661-109	in
R t/c	800 to 1600 °C 24 Hr	106		х		•		•		•	•			×			•		1660-089	in
R t/c	0 to 2000 Even 24 Hr	183	°F									•		X					1660-202	in
R t/c	0 to 2500 °F 24 Hr	83		х										X					1660-025	in
R t/c	0 to 2500 °F 7 Day	84		х										X					1661-025	in
R t/c	30 to 2900 °F 24 Hr	85		х										X					1660-032	in
R t/c	30 to 2900 °F 7 Day	86		х										X			•		1661-032	in
Rem SW1	Digital Pen (off=90%, on =95%)	253			-			-	-	-	-			X			•			in
Rem SW2	Digital Pen (off=80%, on=85%)	254												X						in
RTD	–80 to 20 Even 7 Day	199	°C																1661-653 (dual range chart)	in
RTD*	–50 to 25 °C 24 Hr	259		Х															1660-048	out
RTD*	–50 to 25 °C 7 Day	260		Х															1661-048	out
RTD	–25 to 25 Even 7 Day	308	°C																	out
RTD*	–100 to 50 °C 24 Hr	261		Х											•				1660-091	out
RTD	–50 to 50 °C 24 Hr	19		х																in

S CONFIG S	8 7 7 6 6 4 3 3 2 1 1 2 5 WITCHES		-) mark All ot olumn	ked her	witl	Ds a	as are	teris IEC	sk is Alp	ha :	C AI = 0.0	038	5						6 5 4 3 2 1
Input Type	Chart Type	Con- fig #	EU	Non- Lin		C	CON		Swit N1)	che	s			INP		wito V6)	hes	•	Chart Part Number	R56 ***
					1	2	3	4	5	6	7	8	1	2	3	4	5	6		
RTD	–50 to 50 Even 24 Hr	Hr																		in
RTD	–50 to 50 Even 7 Day	Hr																	1661-218	in
RTD	–5 to 50 Even 24 Hr	Day To 50 Even 112 °C Down to 50 Even To 50																	1660-022	in
RTD	–5 to 50 Even 7 Day	to 50 Even																	1661-197	in
RTD	0 to 50 Even 24 Hr	Hr																	1660-104	in
RTD	0 to 50 Even 7 Day	50 Even																	1661-051	in
RTD	–40 to 60 °C 24 Hr	20		х															1660-067	in
RTD	–40 to 60 °C 7 Day	91		х															1661-067	in
RTD	–30 to 70 Even 24 Hr	186	°C			•		•	-			-							1660-601 (dual range chart)	in
RTD	-30 to 70 Even 7 Day	187	°C		-	•		•	-			-							1661-601 (dual range chart)	in
RTD	0 to 70 Even 7 Day	196	°C				•					-							1661-075	in
RTD	–35 to 75 Even 24 Hr	192	°C								•	-							1660-023	in
RTD	–35 to 75 Even 7 Day	193	°C		-						•	-							1661-023	in
RTD	–35 to 75 Even 24 Hr	202	°F									-							1660-023	in
RTD	–35 to 75 Even 7 Day	203	°F		•							-							1661-023	in
RTD*	–200 to 100 °F 24 Hr	262		х															1660-044	out
RTD*	–200 to 100 °F 7 Day	263		х	•	•	•								•		•		1661-044	out
RTD	–100 to 100 °C 7 Day	22		х		•	•								•		•		1661-080	in
RTD	-100 to 100 Even 24 Hr	228	°F																1660-201	in
RTD	-100 to 100 Even 24 Hr	229	°C		•		•					-							1660-201	in
RTD	-100 to 100 Even 7 Day	279	°F																	out
RTD	0 to 100 Even 24 Hr	114	°C			•				•					•				1660-001	in
RTD	0 to 100 Even 24 Hr	115	°F																1660-001	in

O CONFIG S	8 7 7 6 5 6 5 6 6 6 6 6 6 6 6 6 6 6 6 6 6		•) mark All ot olumn	ced her	witl RT	Ds a	as are	teris IEC	sk is Alp	ha :	C AI = 0.0	038	5					INPUT SWITCH	5 4 3 2 1
Input Type	Chart Type	Con- fig #	EU	Non- Lin		(ON		Swit N1)	tche	s			INP		Switc N6)	ches	\$	Chart Part Number	R56 ***
		1 2 3 4 5 6 7 8 1 2 3 4 5															5	6		
RTD	0 to 100 Even 7 Day	0 100 Even																1661-001	in	
RTD	0 to 100 Even 7 Day	o 100 Even																	1661-001	in
RTD	0 to 100 Even 12 Hr	190	ç																1903-002	in
RTD	0 to 150 Even 24 Hr	118	°C																1660-180	in
RTD	0 to 150 Even 7 Day	250	ç																	in
RTD*	0 to 150 °C 24 Hr	27		х															1660-090	in
RTD*	50 to 150 °C 24 Hr	28		x															1660-116	in
RTD*	–30 to 170 °F 24 Hr	264		х				•									•		1660-087	out
RTD*	–30 to 170 °F 7 Day	265		х															1661-087	out
RTD*	80 to 180 °F 12 Hr	89		х															1903-001	in
RTD	–90 to 190 Even 24 Hr	120	°C																	in
RTD	–90 to 190 Even 7 Day	121	°F					•									•			in
RTD	–85 to 190 Even 24 Hr	119	°C														•		1660-179	in
RTD	–100 to 200 °F 24 Hr	29		х																in
RTD	–100 to 200 °F 7 Day	30		х																in
RTD	–100 to 200 Even 24 Hr	125	°C								-						-		1660-232	in
RTD	–100 to 200 Even 24 Hr	127	°F								-								1660-232	in
RTD	–100 to 200 Even 7 Day	128	°C																1661-178	in
RTD	–100 to 200 Even 7 Day	245	°F																1661-178	in
RTD*	–100 to 200 °C 7 Day	309		х	•															out
RTD	–40 to 200 Even 24 Hr	122	°C																	in
RTD	–40 to 200 Even 7 Day	123	°C																	in
RTD	0 to 200 °C 7 Day	33		х	-					•					•		•			in

NO CONFIG S	8 7 7 6 5 4 3 2 2 1 1 SWITCHES) marl All ot olumr	ked her	witl RT	Ds a	as are l	teris IEC	sk is Alp	ha :	C AI = 0.0	038	5					NPUT SWITCH	3 2 1
Input Type	Chart Type	Con- fig #	EU	Non- Lin		C	ON		Swit V1)	tche	s			INP	UT S (SV		hes		Chart Part Number	R56 ***
					1	2	3	4	5	6	7	8	1	2	3	4	5	6		
RTD	0 to 200 Even 24 Hr	to 200 Even																1660-010	in	
RTD	0 to 200 Even 24 Hr	to 200 Even 134 °C																1660-010	in	
RTD	0 to 200 Even 7 Day	4 Hr to 200 Even Day 137 °F ■ □ □ ■ □ □ □ ■ □ □ ■ □ ■ □ □ ■																1661-004	in	
RTD	0 to 200 Even 7 Day	Hr																1661-004	in	
RTD	0 to 200 Even 12 Hr	Day □																	1903-003	in
RTD	–90 to 210 Even 24 Hr	141	°C																	in
RTD	–90 to 210 Even 7 Day	142	°F																	in
RTD	–90 to 210 Even 7 Day	280	°C																	out
RTD	–90 to 210 Even 24 Hr	281	°F																	Out
RTD	–50 to 250 Even 24 Hr	194	°C																	In
RTD	–50 to 250 Even 7 Day	195	°C		•															In
RTD	0 to 250 °F 24 Hr	36		х															1660-068	In
RTD	0 to 250 Even 7 Day	251	°F																	in
RTD	50 to 250 Even 7 Day	208	°F																1661-003	in
RTD	50 to 250 Even 24 Hr	209	°F																1660-008	in
RTD*	–75 to 260°C 24 Hr	266		х																out
RTD*	–75 to 260°C 7 Day	267		х															1661-055	out
RTD	0 to 300 Even 24 Hr	144	°C												•		•		1660-050	in
RTD	0 to 300 Even 24 Hr	145	°F		•				•			•			-		•		1660-050	in
RTD	0 to 300 Even 7 Day	146	°C									-							1661-050	in
RTD	0 to 300 Even 7 Day	147	°F																1661-050	in
RTD	0 to 350 Even 24 Hr	218	°F			•			•		-	•			-		•		1660-037	in
RTD	0 to 350 Even 7 Day	278	°F																1661-037	out

NO CONFIG S	Any RTD marked with an asterisk is IEC Alpha = 0.00391 All other RTDs are IEC Alpha = 0.00385 in column for SW6 switch 2 = see Subsection 3.2.2															NPUT SWITCH				
Input Type	Chart Type	Con- fig #	EU	Non- Lin	CONFIG Switches (SW1)								INPUT Switches (SW6)						Chart Part Number	R56 ***
					1	2	3	4	5	6	7	8	1	2	3	4	5	6		
RTD	–125 to 375 Even 24 Hr	150	°F																	in
RTD	–125 to 375 Even 7 Day	151	°F																	in
RTD*	–125 to 375 °F 24 Hr	42		х		•		•							•				1660-020	in
RTD*	–125 to 375 °F 7 Day	43		х	•														1661-020	in
RTD	0 to 400 Even 24 Hr	154	°F									-							1660-011	in
RTD	0 to 400 Even 24 Hr	157	°C		•							-							1660-011	in
RTD	0 to 400 Even 7 Day	160	°F									-			•				1661-005	in
RTD	0 to 400 Even 7 Day	163	°C		-	•						-			•				1661-005	in
RTD	–130 to 410 Even 24 Hr	164	°F									-								in
RTD	–130 to 410 Even 7 Day	165	°F		•		•					-			•					in
RTD	730 to 780 Even 24 Hr (test) (factory configuration)	252	°F						•											in
RTD	0 to 800 Even 24 Hr	172	°F																1660-137	in
RTD	0 to 800 Even 7 Day	173	°F																	in
S t/c	0 to 1600 °C 7 Day	76		х										X					1660-066	in
S t/c	0 to 1600 Even 7 Day	182	°C											X					1661-109	in
S t/c	0 to 2000 Even 24 Hr	184	°F											X					1660-202	in
S t/c	0 to 3000 °F 24 Hr	87		х										X					1660-147	in
S t/c	0 to 3000 °F 7 Day	88		Х										X					1661-147	in

NO CONFIG S	8 7 6																			
Input Type	Chart Type	Con- fig #	EU	Non- Lin		C	ON		Swit N1)	che	s			INP	JT S (SV		hes	;	Chart Part Number	R56 ***
					1	2	3	4	5	6	7	8	1	2	3	4	5	6		
T t/c	0 to –400 Even 7 Day	284	°F											X						out
T t/c	0 to –400 Even 24 Hr	285	°F											X						out
T t/c	0 to –250 Even 7 Day	282	ç											X						out
T t/c	0 to –250 Even 24 Hr	283	ç											X						in
T t/c	75 to –200 °C 7 Day	107		х										X					1661-058	in
T t/c	–80 to 20 Even 7 Day	269	°C											X					1661-653 (dual range chart)	out
T t/c	–18 to 37 Even 7 Day	271	ç											X					1661-637 (dual range chart)	out
T t/c	–50 to 50 Even 24 Hr	210	°C											X						in
T t/c	–50 to 50 Even 7 Day	211	°C											×					1661-218	in
T t/c	–5 to 50 Even 24 Hr	243	°C											×					1660-022	in
T t/c	–5 to 50 Even 7 Day	244	°C											X					1661-197	in
T t/c	–30 to 70 Even 24 Hr	188	°C											×					1660-601 (dual range chart)	in
T t/c	–30 to 70 Even 7 Day	189	°C									-		X					1661-601 (dual range chart)	in
T t/c	–35 to 75 Even 24 Hr	204	°C									-		X					1660-023	in
T t/c	–35 to 75 Even 7 Day	205	°C											×					1661-023	in
T t/c	–35 to 75 Even 24 Hr	206	°F								•			×					1660-023	in
T t/c	–35 to 75 Even 7 Day	207	°F											×					1661-023	in
T t/c	–100 to 100 °C 7 Day	21		х	•									X					1661-069	in
T t/c	–100 to 100 °C 24 Hr	97		х	•						•			X					1660-069	in
T t/c	-100 to 100 Even 24 Hr	224	°F								•			X					1660-201	in
T t/c	-100 to 100 Even 24 Hr	225	°C		•						-			X					1660-201	in
T t/c	-100 to 100 Even 7 Day	249	°F		•			•			•			X						in
T t/c	0 to 100 Even 24 Hr	237	°F											X					1660-001	in

CONFIG S	8 7 □ = off ■ = on 4 Any RTD marked with an asterisk is IEC Alpha = 0.00391 3 All other RTDs are IEC Alpha = 0.00385 □ 1 □ 1 □ 1 □ 1 □ 1 □ 1 □ 1 □ 1 □ 1 □ 1																			
Input Type	Chart Type	Con- fig #	EU	Non- Lin		C	ON		Swit N1)	tche	s			INP	JT S (SV		hes	;	Chart Part Number	R56 ***
					1	2	3	4	5	6	7	8	1	2	3	4	5	6		
T t/c	0 to 100 Even 7 Day	238	°F											X					1661-001	in
T t/c	0 to 100 Even 24 Hr	239	°C											X					1660-001	in
T t/c	0 to 100 Even 7 Day	240	ç											X					1661-001	in
T t/c	–250 to 150 °F 7 Day	93		х					•					X					1661-042	in
T t/c	–250 to 150 °F 24 Hr	94		х										X					1660-042	in
T t/c	–40 to 150 Even 24 Hr	272	°C											X					1660-660 (dual range chart)	out
T t/c	–40 to 150 Even 7 Day	273	ç											X					1661-660 (dual range chart)	out
T t/c	0 to 150 °C 24 Hr	23		х										X					1660-103	in
T t/c	0 to 150 °C 7 Day	24		х										×						in
T t/c	–90 to 190 Even 24 Hr	270	°C											X						out
T t/c	–100 to 200 °C 24 Hr	31		х										X						in
T t/c	–100 to 200 °C 7 Day	32		х										X						in
T t/c	–100 to 200 Even 24 Hr	124	°F						•					X					1660-232	in
T t/c	–100 to 200 Even 24 Hr	126	°C						•					X					1660-232	in
T t/c	–100 to 200 Even 7 Day	241	°F											×					1661-178	in
T t/c	–100 to 200 Even 7 Day	242	°C									•		X					1661-178	in
T t/c	–90 to 210 °C 24 Hr	37		х										X					1660-034	in
T t/c	–90 to 210 °C 7 Day	38		х										X					1661-034	in
T t/c	–40 to 300 Even 24 Hr	274	°F											X					1660-661 (dual range chart)	out
T t/c	–40 to 300 Even 7 Day	275	°F											X			•		1661-661 (dual range chart)	out
T t/c	0 to 300 °C 7 Day	99		х										X					1661-079	in
T t/c	–125 to 375 Even 24 Hr	276	°F											X			•			out
T t/c	–125 to 375 Even 7 Day	277	°F		•		•		•					×			•			out

NO CONFIG S	□ = off ■ = on Any RTD marked with an asterisk is IEC Alpha = 0.00391 All other RTDs are IEC Alpha = 0.00385 I Sun column for SW6 switch 2 = see Subsection 3.2.2																			
Input Type	Chart Type	Con- fig #	EU	Non- Lin		C	CON		Swit W1)	tche	s			INP		wito V6)	hes	i	Chart Part Number	R56 ***
					1	2	3	4	5	6	7	8	1	2	3	4	5	6		
T t/c	–130 to 410 °F 24 Hr	52		х					•					X					1660-033	in
T t/c	–130 to 410 °F 7 Day	53		х										X					1661-033	in
W t/c	0 to 1800 °C 24 Hr	77		х										X					1660-157	in

^{*}IEC Alpha = 0.00391 {all RTDs without an asterisk: IEC Alpha = 0.00385]

^{**}If you set the switches in an ON/OFF combination that does not match any of the given configurations, the recorder will default to configuration #1.

^{***}Refer to Figure 3-1 for location of jumper R56.

3.2.2 Setting SW6 Switch 2

Off for RTD actuation

For thermocouple and mV inputs, the setting of SW6 switch 2 affects the displayed input in case of burnout or other input failure.

Burnout is always upscale on an instrument with no display. When an input fails, the pen is driven upscale. However, if the SW6-2 setting is ON, the pen may be driven downscale momentarily until the input circuit is driven underrange.

It is important, however, to set the switch to OFF in the case of RTD actuation.

ATTENTION

If SW6 switch 2 is ON for an RTD input, the recorder will not be able to process the input accurately, even when the input sensor is providing a valid signal.

3.3 Startup and Operation of Recorder without Display

3.3.1 Overview

Introduction

This subsection provides procedures and reference information for operating the recorder models that do not have a display. It assumes that the recorder has been properly mounted and wired in accordance with the instructions in Section 2, and prepared as described earlier in this section.



WARNING—SHOCK HAZARD



SET THE SWITCHES DESCRIBED IN THIS SECTION WITH THE UNIT POWER DISCONNECTED. DO NOT TOUCH POWER CONNECTIONS AT TB1. FAILURE TO OBSERVE THIS PRECAUTION CAN RESULT IN EXPOSURE TO A POTENTIALLY LETHAL SHOCK HAZARD. MORE THAN ONE SWITCH MAY BE REQUIRED TO DE-ENERGIZE UNIT.

3.3.2 Preparing the Recorder for Operation

Introduction

Before applying power to the recorder, complete these preparation tasks.

ATTENTION

Never move the pen arms when the unit is operating unless adjusting the pen alignment as described in Section 7.

WARNING



SHOCK HAZARD

When the unit is powered a potentially lethal shock hazard exists at the AC line connections at TB1 on each printed circuit assembly (behing the chart plate). Make sure the unit power is disconnected before starting the procedure. More than one switch may be required to de-energize the recorder.

Failure to observe this precaution can result in exposure to a potentially lethal shock hazard.

Procedure

Refer to Figure 3-3 to identify the basic chart plate components and follow the procedure in Table 3-3 to prepare the recorder for operation.

Table 3-3 Preparing the Recorder for Operation

Step		Action	
1	Open the door.		

Pull up on the pen lifter to raise the pen(s) from the chart plate and remove the protective cap 2 from each pen tip. Lift the locking clip on the chart hub. Slip the new chart under the pen lifter, pen and time index, and press it into place over the 3 chart hub. Turn the chart until the desired time line on the chart is aligned with the time index on the chart 4 plate and pen 1 before closing the locking clip on the hub. Push down on the lifter to return the pen(s) to the chart. CAUTION: Do not try to rotate the hub.

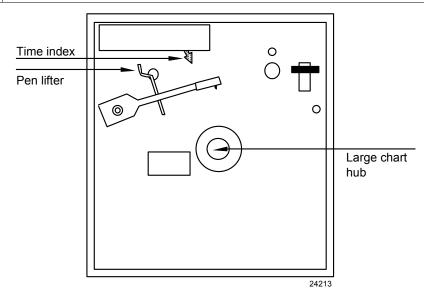


Figure 3-3 Basic Chart Plate Components

3.3.3 Running the Optional Step Test

Introduction

You can test the recorder's mechanical operation by running a "step test". This test is initiated by setting switches as described in Table 3-4.

This test prints a step pattern, which is independent of any chart settings, with horizontal lines drawn by both pens at each 10% increment on the chart (see Figure 3-4).

The test will run for one complete revolution of the chart before it returns to normal operation. The chart revolution for the test takes approximately three minutes, regardless of configured chart speed.

WARNING



SHOCK HAZARD

When the unit is powered a potentially lethal shock hazard exists at the AC line connections at TB1 on each printed circuit assembly (behing the chart plate). Make sure the unit power is disconnected before starting the procedure. More than one switch may be required to de-energize the recorder.

Failure to observe this precaution can result in exposure to a potentially lethal shock hazard.

Procedure

Use the procedure in Table 3-4 to run the step test.

Table 3-4 Procedure for Running the Step Test

Step	Action/Result	Graphic
1	Turn off the power to the recorder.	
2	Make sure the cap is removed from the tip of each pen and the chart is installed.	
3	Loosen captive screw and swing out the chart plate.	
4	Note the position of all eight switches on SW1 on the printed circuit assembly (PCA) for each pen.	See Figure 3-1.
5	Being careful of the shock hazard at TB1, set switches 1 and 2 in SW1 in the OFF position on each pen's PCA. All other SW1 switches should be ON (toward the edge of the board). This is configuration #252 in Table 3-2.	NO 8 7 6 6 5 4 4 3 3 2 2 1
6	Being careful of the shock hazard at TB1, place run switch SW5 to the setup position (toward the top of the board) on each pen's PCA.	
7	Apply power to the recorder.	
8	The recorder will begin the test. The duration of the test is approximately 3 minutes. (When the test has been completed the pens will move away from the test position, but the recorder cannot return to normal operation until the switches are returned to their correct non-test settings.)	

Step	Action/Result	Graphic
9	At the conclusion of the test turn off the power to the recorder.	
10	Being careful of the shock hazard at TB1, place run switch SW5 to the run position (toward the bottom of the board) on each PCA.	
11	Set configuration switches on the PCA for each pen back to the settings noted in Step 4.	
12	Secure the chart plate in the operational position.	
13	To resume normal operation leave SW5 in the run position and power up the recorder.	

Chart step pattern

Figure 3-4 is a typical chart step pattern generated by the recorder in the step test.

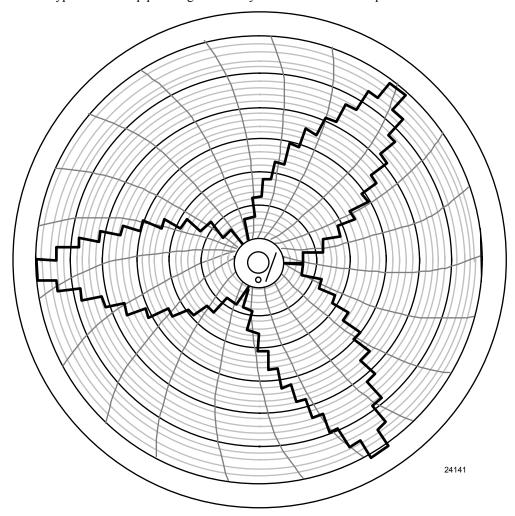


Figure 3-4 Typical Step Test Chart Patterns

3.3.4 Startup

Introduction

The recorder is almost ready for operation when you have:

- mounted and wired the recorder as described in Section 2
- set up the recorder as described in Subsection 3.2
- prepared the recorder as described in Subsection 3.3.2

The only remaining tasks are aligning the chart time and applying power.

Procedure

To set the chart time and apply power, follow the procedure in Table 3-5. (See also Figure 3-5.)

Table 3-5 Startup Procedure

Step	Action
1	Open the door.
2	Pull up the pen lifter to raise the pen(s) from the chart plate. Open the hub locking clip.
3	Turn the chart until the desired time line on the chart is aligned with the time index on the chart plate and pen 1 before closing the locking clip on the hub. Push down on the lifter to return the pen(s) to the chart.
	CAUTION: Do not try to rotate the hub.
4	Close the door and apply power.
5	The pen(s) will move into position and the recorder will start to track the input value.

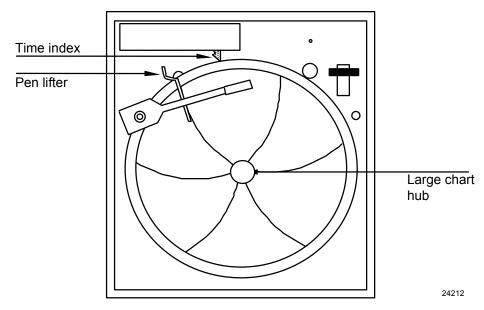


Figure 3-5 Setting Chart Time to Time Index

4. Configuration, Startup and Operation of Recorder with Display

4.1 Overview

Introduction

This section provides instructions for configuring, starting, and operating DR4300 recorder models having a display and keypad.

What's in this section?

The following is a list of topics covered in this section.

Topic	See Page
4.1 Overview	71
4.2 Operator Interface of Recorder with Display and Keypad	72
4.3 Configuration (Recording and Output Set Up)	74
4.4 Startup of Recorder with Display and Keypad	119
4.5 Operation of Recorder with Display and Keypad	128

4.2 Operator Interface on Recorder with Display and Keypad

Introduction

The DR4311, DR4312, DR4331 and DR4332 models include a display and keypad used to view real time values, change setpoints (if the recorder hardware supports outputs), and assign application-specific values to configuration parameters.

This subsection describes the operator interface, using the display and keypad to configure the recorder, and procedures for starting up and operating the recorder.

Displays and indicators

The indicators and text displayed let you see what is happening to your process and how the recorder is responding.

Figure 4-1 is a view of the operator interface. A description of the displays and indicators is included.

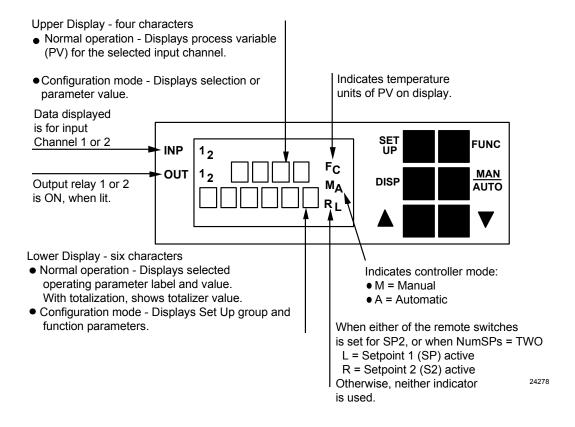


Figure 4-1 Operator Interface

Key functions

Table 4-1 shows each key on the operator interface and defines its function.

Table 4-1 Key Functions

Key	Function
	Places the recorder in the configuration set up group select mode. Sequentially displays
SET UP	set up groups and allows the FUNC key to display function parameters within set up group.
FUNC	 Used in conjunction with the SET UP key to select the individual functions of a selected configuration set up group. Used to toggle between input channel selection for display (2-pen recorder models only). Used during field calibration procedure.
DISP	 Pressing this key repeatedly cycles through the operating parameters displayed on the lower display. (Only those parameters required by the supported features will be included in the display cycle.) The input PV for the currently displayed channel is always on the upper display during normal operation. With the exception of "INP", the label shown below will be displayed at the left of the lower display, its value to the right. INP = Input; if the recorder does not support any optional features, then this label is always displayed on the lower display. In this case, the other parameters listed below are not applicable. OT = Output SP = Setpoint 1 S2 = Setpoint 1 S2 = Setpoint 2* UseSPn = Setpoint Select (Only appears if Control group NumSPs = TWO) DE = PV Deviation from Setpoint XXXXXX = Totalizer Value □ □ □ = Time Remaining on Optional Timer (Hrs:Min)
MAN AUTO RESET	For recorder model with control: MAN/AUTO: • Alternately selects: AUTO Controller is in Automatic mode. MAN Controller is in Manual mode. RESET does not apply. RESET:
	On Limit Controllers this key functions as RESET , used to take the recorder out of the limit state (once the cause of the limit state has been corrected) and to cause it to resume normal operation, monitoring the value of the input and comparing it to the configured limit value.

Key	Function
	Increases the setpoint, output, or configuration values displayed. ***
	Decreases the setpoint, output, or configuration values displayed. ***

^{*}The second setpoint is available if one of the digital inputs is configured to use this alternate setpoint in case an external event triggers the "remote switch", or if Control group parameter NUMSPs = TWO.

***If the timer is enabled (TIMER = ENAB) and Timer group parameter START = KEY, then this key can be used to start the timer. To stop the timer before its timeout period has expired, set TIMER = DIS. Once the timer has expired, use the Increment or Decrement key to reset the timer. Relay 2, which was energized when the timer expired, will be de-energized when the timer is reset.

4.3 Configuration (Recording and Output Set Up)

4.3.1 Overview

Introduction

The display and keypad on the DR4311, DR431, DR4331, and DR4332 models are used for setting up recording and output options in Set Up (configuration) mode, as well as for displaying real-time values during normal operation. (Instructions for using the user interface are in Subsection 4.2.)

When the recorder is in configuration mode, setup parameters are displayed, grouped by function. Designate site-specific values by selecting them from a list of choices, or entering them as numeric values.

If your recorder is equipped with two pens, function parameters are configured separately for each pen, and stored on the printed circuit assembly (PCA) associated with that pen. The PCA on the right (when facing recorder) is for pen 1 (purple); the PCA on the left is for pen 2 (red).

If the hardware supports optional relay outputs for each pen, parameters are available for configuring control and/or alarms using these outputs. If an optional relay is used, then it can be wired for Normally Open and Normally Closed action.

Hardware switches must be set to match the input type, and to specify input state in case of input failure.


^{**}Displayed only when a setpoint program is being executed. REC cycles remaining will be displayed only if the program was set to run more than 1 cycle, and if the program is not executing the last of multiple cycles. See *Appendix C* for detailed instructions for executing a setpoint program.

4.3.2 Configuration Prompts

Diagram: prompt hierarchy

Figure 4-2 is an overview of the hierarchy of set up groups and their associated function prompts. Read the diagram from left to right. (Some prompts may not be displayed, depending on the configuration and lock status of the recorder.)

Figure 4-2 Prompt Hierarchy

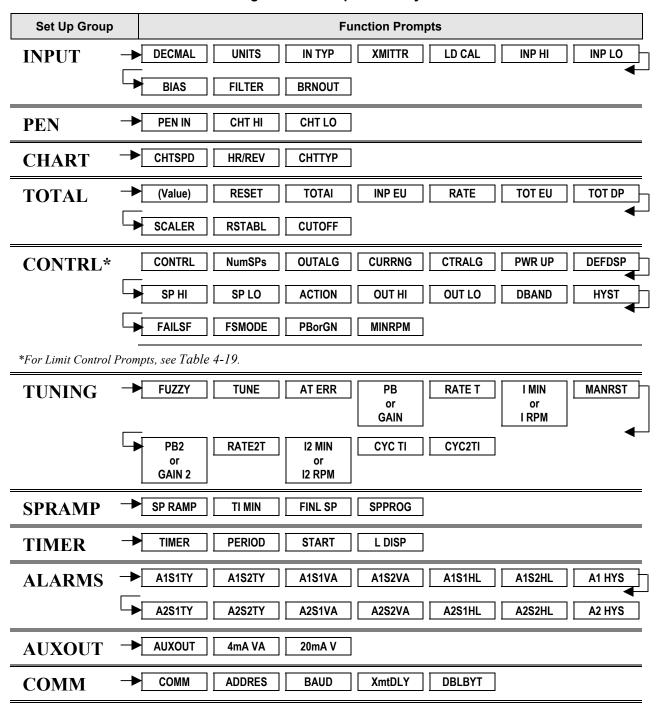

Set Up Group	Function Prompts				
REM SW	REMSW1 REMSW2				
DSPLAY	BLANK TOGGLE				
LOCK	LOCK				
ALIN	For pen alignment—see Section 8 of manual				
CAL	For field calibration—see Section 5 of manual				
STATUS	For status displays—see Section 8 of manual				

4.3.3 How to Get Started

Read the configuration tips

Read Subsection 4.3.4 "Configuration Tips". These tips will help you configure your recorder quickly and easily.

Set the hardware switches

Refer to Subsection 4.3.5 "Switch Settings" for required hardware switch settings on the printed circuit assembly associated with each pen. The hardware switches should be set before specifying values for function parameters.

Install recorder

Connect the recorder to ac power as described in Section 2 so that you will be able to configure the unit using the display.

Become familiar with the configuration procedure

Read Subsection 4.3.6 "Configuration Procedure" to learn how to access the set up groups, and the function parameters within each of these groups (shown in the prompt hierarchy in Figure 4-2).

Assign application-specific values to the set up parameters

The set up groups and function parameters are listed in this section in the order of their appearance on the display. The list includes the name of the prompt, the range of setting or selections available, the definition of each parameter, and the factory setting. It allows you to quickly find a parameter and determine the appropriate value or selection for your application.

Complete configuration record sheet

Subsection 4.3.21 contains a "Configuration Record Sheet". It is good practice to record your instrument's configuration for future reference.

4.3.4 Configuration Tips

Introduction

Table 4-2 contains tips that will help you enter the configuration data more quickly. If you can not change configuration parameters, check the status of the "LOCK" parameter (see Subsection 4.3.19).

Table 4-2 Configuration Tips

Function	Тір
Displaying Groups	Use the SET UP key to display the set up groups. The group titles are listed in this section in the order that they appear in the recorder.
Displaying Functions	Use the FUNC key to display the individual function parameters under each group. The prompts are listed in the order of their appearance in each group.
Scrolling	Holding the SET UP key in will scroll through the set up groups. However, when any set up group is displayed, you can scroll through the set up groups twice as fast using the ▲ or ▼ key. When in any set up group, hold the FUNC key in to scroll through the prompts within that group.
Changing values quickly	When changing the value of a parameter, you can adjust a more significant digit in the upper display by holding in one key [▲] or [▼], and pressing the other [▲] or [▼] at the same time. • The adjustment will move one digit to the left. • Press the key again and you will move one more digit to the left.
Exiting Set Up mode	To exit Set Up mode, press the DISP key. This returns the display to the same state it was in immediately preceding entry into the Set Up mode.
Timing out from Set Up mode	If you are in Set Up (configuration) mode and do not press any keys for one minute, the recorder will time out and revert to the mode and display that was being used prior to entry into Set Up mode.

4.3.5 Switch Settings

4.3.5.1 Introduction

Significance of hardware switches in models with display

SW6 input switches: The display and keypad are used to configure the software on each pen channel's printed circuit assembly (PCA). In addition, the input hardware switches 1, 3, 4, 5 and 6 in SW6 must be set to match the input type as described in Subsection 4.3.5.2. This is required so that the recorder hardware will provide an appropriate value to the recorder software.

SW6 burnout switch 2: This burnout switch should be set to specify whether the input used by the recorder for the channel should be sent over range or under range if the input to the recorder fails while the "BRNOUT" parameter value is "NONE". Alternatively, if the "BRNOUT" parameter has a value of "UP" or "DOWN" switch 2 should be set to match. Details are provided in Subsection 4.3.5.3.

SW1 configuration switches: In a recorder model having a display and keypad all switches in SW1 will be ignored if the cable from the display and keypad assembly is plugged into J4 on the PCA associated with the pen channel. (SW1 switches are used to configure recorder models that do not have a display and keypad as described in Section 3.)

ATTENTION

If the display cable is disconnected after the software has been configured using the display and keypad, the recorder's behavior will depend on the settings of the SW1 switches. If all SW1 switches are in the OFF position when the cable is disconnected, the recorder will continue to use the software configuration entered with the display and keypad. However, if all SW1 switches are not OFF when the cable is disconnected, the recorder will use the configuration in Table 3-2 that matches the SW1 switch settings. (If the switch setting combination does not match any configuration in Table 3-2, the recorder will use configuration #1.)

Safety precautions

Exercise appropriate safety precautions when setting switches.



WARNING—SHOCK HAZARD



SET THE SWITCHES DESCRIBED IN THIS SECTION WITH THE UNIT POWER DISCONNECTED. DO NOT TOUCH POWER CONNECTIONS AT TB1. FAILURE TO OBSERVE THIS PRECAUTION CAN RESULT IN EXPOSURE TO A POTENTIALLY LETHAL SHOCK HAZARD. MORE THAN ONE SWITCH MAY BE REQUIRED TO DE-ENERGIZE UNIT.

4.3.5.2 Setting SW6 Input Switches

SW6 switches 1, 3, 4, 5, 6 define input type

In a recorder model having a display and keypad the input switches at SW6 must be set to match the type of input to be used. The location of SW6 is shown in Figure 4-3. The appropriate switch settings for the various input types are shown in Table 4-3.

Note that the setting of switch 2 in SW6 is not related to input type. It is used, along with the "BRNOUT" parameter in the input group, to specify the effects of an input failure as described in Subsection 4.3.5.3.

ATTENTION


The ON position for SW6 switches is toward the left side of the printed circuit assembly (when facing recorder.)

Table 4-3 SW6 Input Switch Settings for Models Having Display and Keypad

Input Type	SW6 Input Switch Settings			s		
	1	2	3	4	5	6
0 V to 1 V	off	*	off	ON	off	off
0 V to 2 V	off	*	off	ON	off	off
0 V to 5 V	off	*	off	ON	off	off
0 V to 10 V	off	*	off	ON	off	off
2 V to 10 V	off	*	off	ON	off	off
1 V to 5 V	off	*	off	ON	off	off
0 mV to 10 mV	off	*	off	off	ON	off
0 mV to 100 mV	off	*	off	off	ON	off
0 to 200 mV	ON	*	off	off	off	off
0 mA to 20 mA	off	*	off	ON	off	ON
4 mA to 20 mA	off	*	off	ON	off	ON
all thermocouples	off	*	off	off	ON	off
all RTDs	off	off	ON	off	ON	off

[★] This switch is used to select whether the input value used by the recorder should be driven over range or under range in case of input failure. See Subsection 4.3.5.3.

SW6 Input Switch

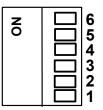

4.3.5.3 Setting SW6 Burnout Switch

Overview

What happens to the displayed input value when the input signal to the recorder fails depends on several factors: the input type, the setting of SW6 switch 2, and the value of the "BRNOUT" parameter in the input set up group.

SW6 switch 2 OFF for RTD

If the input to the pen channel is from an RTD, SW6 switch 2 must always be set to OFF.

CAUTION

If SW6 switch 2 is ON for an RTD input, the recorder will not be able to process the input correctly, even when the input sensor is providing a valid input signal.

SW6 switch 2 setting unimportant for Volt, mV, and mA inputs

It does not matter whether SW6 switch 2 is ON or OFF if the pen channel uses a Volt, mV, or mA input signal. In case of input failure, the displayed input value will show little change, regardless of the setting of SW6 switch 2 or the value assigned to the "BRNOUT" parameter. (However, the value of "BRNOUT" is still important to implementing your control strategy because the value of "BRNOUT" affects the **output** used in case of input failure. See Subsection 4.3.11 for details.)

SW6 switch 2 setting determines displayed thermocouple input if BRNOUT = NONE

If the value of "BRNOUT" is "NONE" when a thermocouple input fails, then the setting of SW6 switch 2 determines whether the displayed input value will be under range or over range. The recorder can display 1 % over or under range for thermocouples.

- If SW6 switch 2 is ON, the displayed value will be under range.
- If SW6 switch 2 is OFF, the displayed value will be over range.

If the pen is configured to trace the input value ("PENIN" pen set up parameter value is "INP"), then the pen will also be driven over or under range.

Note that the over range or under range input will have no effect on **output**. When "BRNOUT" = "NONE", the recorder uses the configured failsafe value as the output in case of input failure, rather than a calculated value based on input.

SW6 switch 2 setting for thermocouple inputs should match BRNOUT if BRNOUT = UP OR DOWN

We recommend that, in the case of thermocouple inputs, SW6 switch 2 be set to OFF if "BRNOUT" = "UP" and ON if "BRNOUT" = "DOWN".

When the input failure first occurs, the displayed input for a thermocouple input will briefly be driven according to the hardware switch setting. However, as soon as the software recognizes that it has received an out-of-range input signal, the displayed input will be driven according to the value, "UP" or "DOWN", configured for "BRNOUT". The displayed value (over range or under range) as configured in "BRNOUT", will remain on the display until a valid input is restored.

If the switch and the set up parameter do not match, operator confusion may result. For example, in case of mismatch the displayed value could first go under range, then quickly go over range. However, except for the brief period before the software reacts to the out-of-range value, the effect of the mismatch is insignificant.

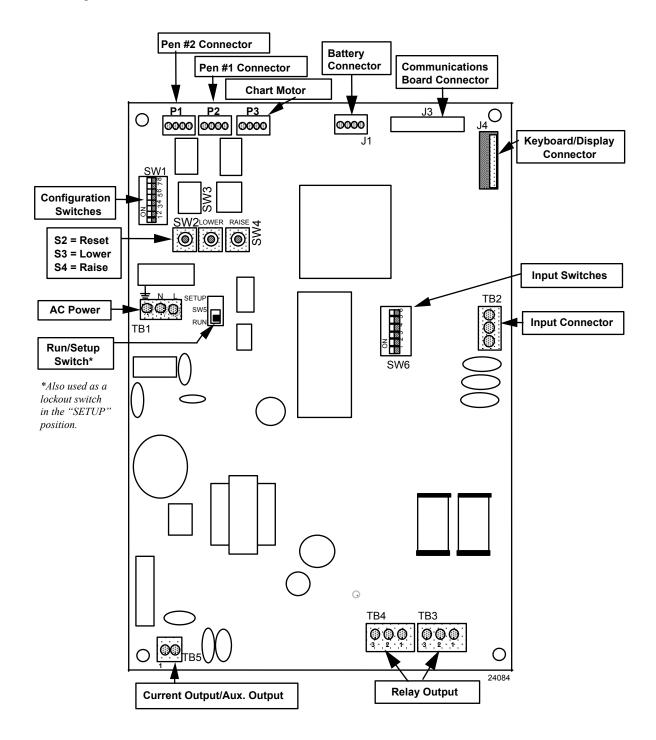


Figure 4-3 Location of Switches and Relays

4.3.6 Configuration Procedure

Introduction

The configuration prompts are sequenced in a group/function hierarchy as shown in Figure 4-2. Once you have set the input switches in SW6 as described in Subsection 4.3.5, configure all the function parameters that are applicable for your recorder model and application. During configuration some function parameters will not be displayed if they do not apply to your application. For example, if you set the control group function "CONTRL" to "DIS", disabling control, then no other control group prompts will be displayed.

To enter your selections or values, follow the procedure in Table 4-4 and fill in the values or selections on the worksheet in Subsection 4.3.21. Keep this worksheet as a record of how your recorder was configured.

This procedure tells you the keys to press to get to any set up group (and any associated function parameters prompt).

Procedure

Follow the procedure listed in Table 4-4 to access the set up groups and function prompts. If you have a 2-pen recorder, be sure to identify individual parameters for each pen and control loop as applicable.

Make sure lock set up group "LOCK" function is set to "NONE" or "CAL." See Subsection 4.3.19.

Press Result Step Operation 1 Upper Display Select Set Up mode **SET** SET Lets you know you are in the UP configuration mode and a set up group title is being displayed in the lower display. Lower Display INPUT This is the first set up group title. 2 Select any set up group • Successive presses of the SET UP key will display SET UP the other set up group titles shown in the prompt hierarchy in Figure 4-2. You can also use the [▲] [▼] keys to scan the set up groups in both directions. Stop at the set up group title which describes the group of parameters you want to configure. Then proceed to the next step. Upper Display 3 Select a function parameter

XXXX

Lower Display
DECMAL

FUNC

Table 4-4 Configuration Procedure

Shows the current value or selection for the first function prompt of the set up group that you have selected.

Shows the first function prompt within

the selected set up group.

Example displays show Input group function prompt

"DECMAL" and the value selected.

Step	Operation	Press	Result
4	Select other function parameters	FUNC	 Successive presses of the FUNC key will sequentially display the other function prompts of the set up group you have selected. Stop at the function prompt that you want to change, then proceed to the next step.
5	Change the value or selection		These keys increment or decrement the value or selection that appears for the function prompt you have selected.
		or	See Subsection 4.3.4 Configuration Tips for instructions to increase or decrease value quickly.
			Change the value or selection to meet your needs.
			If the display flashes, you are trying to make an unacceptable entry.
6	Enter the value or selection	FUNC	This key selects another function prompt.
		or	This key selects another set up group.
		SET UP	The value or selection you have made will be entered into memory after another key is pressed.
7	Exit Configuration	DISP	This exits configuration mode and returns the recorder to the same state it was in immediately before you entered configuration mode. Any changes made during the configuration session are stored when configuration mode is exited.
8	2-Pen Recorders	FUNC	For 2-pen recorders, press FUNC key to select INP 2 for display and return to step 1 to configure the parameters for pen 2.

4.3.7 Input Parameters Set Up Group

Introduction

These are the parameters required to configure the temperature units, decimal location, actuation, high and low range values in engineering units, bias, filter, and burnout. For a 2-pen recorder, the desired input channel is displayed on the left side of the operator interface.

Press FUNC key to select channel.

Input group prompts

Table 4-5 lists all the function prompts in the input set up group.

Press SETUP key until "INPUT" appears in the lower display.

Press FUNC key to display the parameters.

Table 4-5 Input Parameter Definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
DECMAL		DECIMAL POINT LOCATION —This selection determines where the decimal point appears in the display.
	XXXX [factory setting] XXX.X XX.XX	None One Place Two Places
		NOTE: Be sure the selection agrees with the value to be displayed. If PV requires 4 whole digits, the decimal will not show. Value of "IN TYP" parameter must be for a linear input type for two decimal places to be displayed.
UNITS		TEMPERATURE UNITS —This selection will be indicated on the PV display.
	NONE F [factory setting] C	No units Degrees Fahrenheit Degrees Celsius

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
IN TYP		INPUT ACTUATION TYPE —This selection specifies what actuation you are going to use for the input. Be sure that the values configured for the high and low chart range, alarm setpoint, etc. are within the measuring range for the selected actuation type.
* IEC Alpha = 0.00385 **IEC Alpha = 0.00391 ***These input selections are not available on Limit Control units.	B EH EL JH JL KH KL NNM NIC R S TH TL W 100 H*[factory setting] 100 L* 100 T** 4-20*** 0-20*** 10m*** 200m*** 0-1*** 0-2*** 1-5*** 0-10*** 2-10***	B thermocouple 105 to 3300°F
XMITTR		Transmitter Input Type —Use this parameter to specify whether the input should be used as the PV without characterization (linear) or the square root of the input should be used as the PV.
	Lin [factory setting]	Linear—No characterization applied to input.
	Srt	Square Root —PV is the square root of input. For example: suppose the linear input range is 0 to 5000 and the input type is 0 to 5 volts. Then if input = 2.5 V = 50 %,
		$\sqrt{.50} = .7071 = 70.71\%$
		.7071 x 5000 = 3535 = PV

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
LD CAL		LOAD CALIBRATION VALUES —This parameter is used to specify which set of calibration values you want to use.
	FAC [factory setting]	Factory—Uses built-in calibration values (stored in read-only memory).
	FLD	Field —Uses calibration values stored as a result of the field calibration procedure described in Section 5.
		ATTENTION Until field calibration has been done, FLD uses the same calibration values as FAC. When field calibration is performed, the value of LD CAL is automatically set to FLD at the completion of the field calibration operation.
INP HI	-999 to 9999	INPUT HIGH RANGE VALUE in engineering units is displayed but can only be configured for linear input type.
	[factory setting = 900]	Otherwise, this is a read-only display of the higher range value for the selected T/C or RTD input type.
		Scale the input signal to the display value you want for 100 %.
		• EXAMPLE: Actuation (Input) = 4 to 20 mA Process Variable = Flow Range of Flow = 0 to 250 Gal/Min High Range display value = 250 Then 20 mA = 250 Gal/Min
INP LO	–999 to 9999 in Engineering Units	INPUT LOW RANGE VALUE in engineering units is displayed but can only be configured for linear input type.
	[factory setting = -300]	Otherwise, this is a read-only display of the low range value for the selected T/C or RTD input type.
	•	Scale the input signal to the display value you want for 0 %. See example in "INPHI".
BIAS	-99.9 to 999.9 [factory setting = 0]	INPUT BIAS —Used to compensate the input for drift of an input value due to deterioration of a sensor, or some other cause; select the value you want on the input.
FILTER	0 to 120 seconds No filter = 0	FILTER FOR INPUT—A software digital filter is provided for the input to smooth the input signal. You can configure the first order lag time constant from 1 to 120 seconds. If you do not want filtering,
	[factory setting = 0]	enter 0.

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
BRNOUT		BURNOUT PROTECTION (INPUT FAILURE) provides most input types with upscale or downscale protection if the input fails. Note that if the input fails, error message "INP FL" will be on the lower display. ATTENTION Refer to Subsection 4.5 for information about the interaction of the value of this parameter and the setting of switch 2 on SW6.
	NONE [factory setting]	NO BURNOUT—Failsafe output applied for failed input.
	UP	UPSCALE BURNOUT will make the indicated PV signal go to overrange value when input fails. Control algorithm will use overrange value when calculating output.
	DOWN	DOWNSCALE BURNOUT will make the indicated PV signal go to underrange value when input fails. Control algorithm will use underrange value when calculating output.

NOTE: For recorders with the FM Limit Approved Option the INPUT configuration does not provide a burnout selection. However, if a HI limit is configured and the input opens, the input reading will go Upscale and the lower display will alternate between: INP#, Limit, and INP FL.

If a LO limit is configured and the input opens, the input reading will go down scale and the lower display will alternate between: INP#, Limit, and INP FL.

4.3.8 Pen Parameters Set Up Group

Introduction

The functions in this group are used to configure the pen(s). The procedure for configuring each pen is the same. For a 2-pen recorder, the desired input channel is displayed on the left side of the operator interface.

Press FUNC key to select channel.

Pen group prompts

Table 4-6 lists all the function prompts in the pen set up group.

Press the SET UP key until "PEN" appears in the lower display.

Press FUNC key to display parameters.

Table 4-6 Pen Parameter Definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
PEN IN		PEN INPUT—What do you want the pen to record?
	INP [factory setting]	INPUT —Records the input for given channel.
	REM1	REMOTE SWITCH 1 EVENT —Records the digital input event for given channel. (Event toggles pen between 90 % and 95 % on chart.)
	REM2	REMOTE SWITCH 2 EVENT —Records the digital input event for given channel. (Event toggles pen between 80 % and 85 % on chart.)
	OUT*	OUTPUT —Records the output for the channel.
	SP*	SETPOINT—Records setpoint for given channel.
		*Only selectable if hardware supports outputs and function prompt "CONTRL" in Control group is set to "ENAB" (enabled).
CHT HI	-999 to 9999 [factory setting = 780]	CHART HIGH RANGE VALUE—Enter a value that corresponds with the chart high range value for the pen. (This is the value that prints at the outer edge of the chart. If you had a range of 0 °C to –400 °C, –400 would be the chart high range value.)
CHT LO	-999 to 9999 [factory setting = 730]	CHART RANGE LOW VALUE—Enter a value that corresponds with the chart low range value for the pen.

4.3.9 Chart Parameters Set Up Group

Introduction

The functions in this group are used to specify proper chart function. For a 2-pen recorder the desired input channel is displayed on the left side of the operator interface.

Press FUNC key to select channel.

Chart group prompts

Table 4-7 lists all the function prompts in the chart parameters set up group.

Press SET UP key until "CHART" appears in the lower display.

Press FUNC key to display parameters.

Table 4-7 Chart Parameter Definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
CHTSPD		CHART SPEED—This is the time it will take to drive the chart one complete revolution. ATTENTION This prompt only appears for pen 1 configuration of a two-pen recorder.
	8HR 12HR 24HR [factory setting] 7DAYS – HR	8 hour revolution 12 hour revolution 24 hour revolution 7 day revolution – hour revolution—specify Hours per Revolution selection at prompt "HR/REV".
HR/REV	1 to 744 Hours	HOURS PER REVOLUTION —Set the desired chart speed. Appears only if – HR was selected at prompt "CHTSPD".
СНТТҮР	LIN [factory setting] NLIN	CHART TYPE—Selection is based on the type of chart. Linear (even) or Non-Linear (i.e., J T/C or RTD) ATTENTION LIN chart type is automatically selected when input type is linear (as defined by value of input set up parameter "INTYP").

4.3.10 Totalizer Parameters Set Up Group

Introduction

If the recorder hardware supports totalizer functions, the functions in this group are used to calculate and display the total flow volume as measured by the input. The displayed value is six digits with a configurable scale factor.

The totalized value can be in engineering units different from the input, by setting INP EU (engineering units of input) and TOT EU (engineering units of totalized value).

The total can be displayed with one or two decimal places to provide more resolution for selections that produce smal values (e.g., Acre-Feet). A Scaler configuration other than one will override the decimal display.

Control group prompts

Table 4-8 lists all the function prompts in the totalizer function group.

For a 2-pen recorder, the desired input channel is displayed on the left side of the operator interface. Press FUNC to select channel.

Press SETUP key until "TOTAL" appears in the lower display.

Press FUNC key to select the parameters.

Table 4-8 Totalizer Function Definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
(actual current totalized value)	(current scale factor) Example: E1	VIEW CURRENT TOTALIZED VALUE—This selection lets you view the current totalized value. In the example shown, E1 represents the exponential value that applies to the total (total times 10 ¹). See "SCALER" function prompt in this group for choices.
RESET	YES NO [factory setting]	RESET TOTALIZER TO ZERO—This parameter is used to reset the totalizer to zero. Selecting YES will reset the totalizer to zero. When the reset action has been performed, the parameter will be set to NO automatically. ATTENTION In order for this prompt to appear, the "RSTABL" function (described later in this table) must be set to "KEY".
TOTAL	ENAB DIS [factory setting]	TOTALIZATION FOR INPUT—This parameter is used to enable or disable the totalizer function. This prompt appears first if "DIS" is the current choice. ENABLE allows configuration of the rest of the prompts associated with totalization.

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
INP EU		ENGINEERING UNITS OF INPUT SIGNAL
	NONE [factory setting] CuFt GAL CuMt LITR AcFt HMTR	NONE—Disables EU conversions and disables TOT EU and TOT DP functions. Cubic Feet Gallons Cubic Meters Liters Acre-Feet Hectare-Meters
RATE		RATE OF INTEGRATION —This parameter is used to select the desired rate of integration.
	SEC [factory setting] MIN HOUR DAY MDAY	SECOND—EU (Engineering Units) per second MINUTE—EU per minute HOUR—EU per hour DAY—EU per DAY MDAY—Millions of units per day
TOT EU		ENGINEERING UNITS OF TOTALIZED VALUE
	NONE [factory setting] CuFt GAL CuMt LITR AcFt HMTR	NONE—Disables EU conversions. Cubic Feet Gallons Cubic Meters Liters Acre-Feet Hectare-Meters
TOT DP	8888 [factory setting] 888.8 88.88	TOTALIZED VALUE DECIMAL PLACES —This parameter is used to select the number of decimal places of the displayed TOTAL value. This selection will be overridden if the SCALER selection is not equal to 1.
SCALER		TOTALIZER SCALE FACTOR—The totalizer displays the current totalized flow value (up to six digits maximum). The scaling factor selected here is applied to the totalized value when it is displayed.
	1 (displays as E0) [factory setting] 10 (displays as E1) 100 (displays as E2) 1000 (displays as E3) 1E4 (displays as E4) 1E5 (displays as E5) 1E6 (displays as E6) 1E7 (displays as E7) 1E8 (displays as E8)	1E4 equals 1 times 10 ⁴ (10,000) 1E5 equals 1 times 10 ⁵ (100,000) 1E6 equals 1 times 10 ⁶ (1,000,000) 1E7 equals 1 times 10 ⁷ (10,000,000) 1E8 equals 1 times 10 ⁸ (100,000,000)

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
RSTABL		TOTALIZER RESETABLE —This parameter is used to specify whether and how the totalizer value can be reset.
	NO [factory setting]	NO—Totalizer value cannot be reset.
	KEY	KEY —Totalizer can be reset from the keypad by setting the "RESET" parameter to "YES".
	REM1*	REM1 —Totalizer will be reset when remote (external) switch (digital input 1) goes to ON (contact closure). This totalizer reset is independent of any set up of "REMSW1" in the remote switch set up group.
	REM2*	REM2 —Totalizer will be reset when remote (external) switch (digital input 2) goes to ON (contact closure). This totalizer reset is independent of any set up of "REMSW2" in the remote switch set up group.
CUTOFF	0 % to 100 %	LOW CUTOFF VALUE—Input % of range below which the totalizer stops accumulating.

^{*}Digital input card must be installed.

4.3.11 Control Parameters Set Up Group

Introduction

If the recorder hardware supports outputs, the functions in this group are used to configure how the recorder will control the process. (If configuring a limit controller, see Subsection 4.3.22 for special limit control configuration parameters.)

Control group prompts

Table 4-9 lists all the function prompts in the control set up group. For a 2-pen recorder, the desired input channel is displayed on the left side of the operator interface. Press FUNC to select channel. Press

SETUP key until "CONTRL" appears in the lower display. Press FUNC key to select the parameters.

Table 4-9 Control Parameter Definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
CONTRL	ENAB DIS [factory setting]	Enables control. Disables control. If control is disabled here, the rest of the functions in this group will not be displayed. All alarm group functions will be displayed.
NumSPs	ONE [factory setting] TWO	NUMBER OF SETPOINTS—If this is set to TWO, then the operator will be able to select the setpoint using the UseSPn operating parameter prompt.
OUTALG		OUTPUT ALGORITHM —Use to specify the type of output.
	RLY [factory setting]	RELAY SIMPLEX —Type of output using one SPDT relay. Its contacts can be wired for normally open (NO) or normally closed (NC) action.
		Control group function "HYST" is affected. The second relay is available for alarming, and alarm group functions will be displayed for Alarm 2.
	RLYD	RELAY DUPLEX —Type of output using two SPDT relays. Its contacts can be wired for normally open (NO) or normally closed (NC) action.
		Control group function "DBAND" is affected. No relay is available for alarming, and no alarm group functions will be displayed.
	CUR	CURRENT SIMPLEX—Type of output using one 4 mA to 20 mA signal that can be fed to a positive or negative grounded load of 0 to 600 ohms. The current output signal can be recalibrated as described in Section 5 to use any range within 4 mA to 20 mA to represent 0 to 100 % output.
	CurT	CURRENT/TIME DUPLEX (Relay = Heat)—Variation of duplex with current active for 0 % to 50 % output (tuning set 2) and relay active 50 % to 100 % output (tuning set 1). Control group functions "CURRNG" and "DBAND" are affected.

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
OUTALG (continued)	Tcur	TIME/CURRENT DUPLEX (Relay = Cool)—Similar to CurT, except that current is active for 50 % to 100 % (tuning set 1) and relay is active for 0 % to 50 % (tuning set 2). Control group functions "CURRNG" and "DBAND" are affected.
CURRNG		CURRENT RANGE—This parameter appears if "OUTALG" is set to "CurT" or "Tcur".
	FULL [factory setting]	FULL —Current output is calculated over the full range 0 % to 100 %. For example, a control output of 50 % would result in a 12 mA current output.
	HALF	HALF —Current output is calculated over half the range (50 % to 100 %). For example, a control output of 50 % would result in a 4 mA current output.
CTRALG		CONTROL ALGORITHM —Use this to specify the type of control appropriate for your application.
	ON/OFF [factory setting]	ON/OFF is the simplest type of control. The output can be either ON (100 %) or OFF (0 %). The process variable (PV) is compared with the setpoint (SP) to determine the sign of the error (ERROR = PV–SP). The ON/OFF algorithm operates on the sign of the error.
		In direct-acting control (set with parameter "ACTION" described below), when the error is positive, the output is 100 %. When the error is negative, the output is 0 %. If the control action is reverse, the opposite is true. An adjustable overlap is provided between the ON and OFF states. (See "HYST" below.)
		DUPLEX ON/OFF is an extension of this algorithm that applies when the "OUTLAG" is set for "RLYD" (relay duplex). It allows for the operation of a second ON/OFF output. There is a configurable deadband (see "DBAND" below) between the operating ranges of the two inputs, and a separately configurable overlap ("HYST") of the ON and OFF states of each output. With no relay action the controller output will read 50 %.

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
CTRALG (continued)	PID A NOTE: PID A should not be used for proportional only action (that is, no integral (reset) action). Instead, use PDMR with "RATE T" set to 0.	PROPORTIONAL-INTEGRAL-DERIVATIVE— PID A is normally used for three-mode control. Unlike ON/OFF control, with PID A the output can be somewhere between 100 % and 0 %. PID A applies all three control actions (Proportional, Integral, and Derivative) to the error. This control can be tuned using the parameters in the tuning group. Proportional (gain) regulates the controller's output in proportion to the size of the error (difference between setpoint and process variable). Integral (reset) regulates the controller's output in proportion to the size of the error and time the error has existed (duration). The amount of corrective action depends on the value of the proportional gain.
		Derivative (rate) regulates the controller's output in proportion to the rate of change of the error. Again, the amount of correction depends on the gain setting.
	PDMR	PROPORTIONAL-DERIVATIVE with MANUAL RESET—Use PDMR whenever integral action is not needed during automatic control. The output is calculated with no integral contribution. Then the value specified using the tuning parameter "MANRST" (manual reset) is added to the computed output to determine the controller output. Switching between manual and auto modes will not be bumpless in PDMR.
		PDMR variations: If you select PDMR you can configure the following variations:
		PD (proportional-derivative) control, by setting MANRST to 0.
		P (proportional only) control, by setting MANRST (integral term) to 0 <i>and</i> rate (derivative term) to 0 (tuning parameter "RATE T").
PWR UP		POWER UP CONTROLLER MODE RECALL—This selection determines which mode the recorder will use when it restarts after a power loss.
	MAN [factory setting]	MANUAL—At power-up, the recorder will use manual mode with the output value displayed.
	AUTO	AUTOMATIC —At power-up, the recorder will return to the automatic mode.
DEFDSP	INP [factory setting] SP	DEFAULT DISPLAY —This selection determines the default display (input or active setpoint) on power up.

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
SP HI	-999 to 9999 [factory setting = 100]	SETPOINT HIGH LIMIT* —This selection prevents the setpoint from going above the value selected here. The setting must be equal to or less than the upper range of the input.
SP LO	-999 to 9999 [factory setting = 0]	SETPOINT LOW LIMIT* —This selection prevents the setpoint from going below the value selected here. The setting must be equal to or greater than the lower range of the input.
*The setpoint will automat is changed to 1200, the ne		e setpoint limit range. For example, if SP = 1500 and SP HI
ACTION		CONTROL OUTPUT DIRECTION —In what direction do you want the recorder output to go when the process variable increases.
	DIR [factory setting]	DIRECT ACTING CONTROL —The recorder's output is ON or increasing when the difference between setpoint and PV (PV–SP) is positive.
	RE	REVERSE ACTING CONTROL —The recorder's output is OFF or decreasing when the difference between setpoint and PV (PV–SP) is negative.
OUT HI	0 % to 100.0 % of output for relay output	HIGH OUTPUT LIMIT—This parameter is used to specify the highest output to be used in Auto mode.
	-5 % to 105 % for current output	This prompt is displayed only if the "CTRALG" (control algorithm) is set to "PIDA" or "PDMR".
	[factory setting = 100]	
OUT LO	0 % to 100.0 % of output for relay output	LOW OUTPUT LIMIT—This parameter is used to specify the lowest output to be used in Auto mode.
	-5 % to 105 % for current output	This prompt is displayed only if the "CTRALG" (control algorithm) is set to "PIDA" or "PDMR".
	[factory setting = 0]	
DBAND	-5.0 % to 25.0 %	DEADBAND— Use this parameter to specify an
	[factory setting = 0]	adjustable gap between the operating ranges of relay 1 and relay 2 in which neither relay operates (positive
		value) or both relays operate (negative value). It is the difference between the nominal trip points of relay 1 and relay 2.
		This prompt appears only if control group function prompt "OUTALG" is set to "RLYD", "CurT", or "Tcur".
HYST	0.0 % to 5.0 % of PV span [factory setting = 0]	HYSTERESIS (OUTPUT RELAY ONLY) is an adjustable overlap of the ON/OFF states of each control relay. This is the difference between the value of the process variable at which the control relays energize and the value at which they de-energize. Only applicable for ON/OFF control.

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
FAILSF	0 % to 100 % [factory setting = 0]	FAILSAFE OUTPUT VALUE —Select the value you want the output to be when power is restored after a power down. The value used here will also be used as the output level if the input fails when input group "BRNOUT" parameter is set to "NONE".
FSMODE		FAILSAFE MODE
	AUTO	Failsafe Latching Disabled – When the recorder goes into "Failsafe", the control mode does not change. The output assumes the failsafe value if the recorder is in auto mode. When the cause of failsafe is removed, normal automatic control action resumes.
	MAN	Failsafe Latching Enabled – When the recorder goes into "Failsafe", the control mode changes to Manual. If the recorder was in Auto mode, the output assumes the failsafe value. When the cause of failsafe is removed, the recorder remains in manual mode.
PBorGN		PROPORTIONAL BAND or GAIN—Use this parameter to choose whether you want to specify the proportional term in the PIDA or PDMR algorithms in terms of percent proportional band or of gain. Your choice here affects which tuning prompt, "PB" or "GAIN", is displayed. This parameter is displayed only if the "CTRALG" (control algorithm) is set to "PIDA" or "PDMR".
	РВ	Percent proportional band is the percent of the range of the measured variable for which a proportional-only controller will produce a 100 % change in its output.
	GAIN [factory setting]	Gain is the ratio of output change (%) over the measured variable change (%) that caused it.
		The relationship between %PB and gain can be expressed as: GAIN = 100 %PB
		For example, setting PB = 20 % will have the same effect on control as setting GAIN = 5. Therefore, if the change in the PV input were 3 % of the whole range of possible input values, then the resulting change in the output due to proportional only control would be 15 % of the output's range, regardless of whether PBorGN = PB and PB = 20, or PBorGN = GN and GAIN = 5.
		Another example: Setting PB = 50 % will have the same effect as setting GAIN = 2. In this case, if the change in input were again 3 % of range, then the resulting output change would be 6 %.
		ATTENTION If the setting of PBorGN is changed, you must change the value of the associated tuning parameter ("PB" or "GAIN") if you want to maintain the same control action. For example, suppose PBorGN = PB and the value of tuning parameter "PB" = 20. If you change PBorGN to GAIN, the value of tuning parameter "GAIN" will now be 20 (the value formerly assigned to "PB"). If you want the same control action you had before, you must change the value of "GAIN" to 5.

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
MINRPM	RPM MIN [factory setting]	MINUTES PER REPEAT or REPEATS PER MINUTE— Use this parameter to choose whether you want to specify the integral term (reset) in the PIDA algorithm in terms of length (minutes per repeat) or frequency (repeats per minute). Your choice here affects which tuning prompt, "I MIN" or "I RPM", is displayed.
		The relationship between the two ways of thinking about reset is demonstrated by this example: 20 repeats per minute = 0.05 minutes per repeat.
		This parameter is displayed only if the "CTRALG" (control algorithm) is set to "PIDA".
		ATTENTION If the setting of MINRPM is changed, you must change the value of the associated tuning parameter ("I MIN" or "I RPM") if you want to maintain the same control action. For example, suppose MINRPM = I RPM and the value of tuning parameter "I RPM" = 2. If you change MINRPM to I MIN, the value of "I MIN" will now be 2 (the value formerly assigned to "I RPM"). If you want the same control action you had before, you must change the value of "I MIN" to 0.5.

4.3.12 Tuning Parameters Set Up Group

Introduction

Tuning consists of establishing the appropriate values for tuning constants so that your recorder responds correctly to changes in process variable and setpoint. You can start with estimated values, but you will have to watch the system to judge how to modify the values. The tuning group parameters described in this subsection are available only if:

- your recorder supports control and
- the control type specified in the control setup group using the "CTRALG" (control algorithm) parameter is "PIDA" or "PDMR".

Two sets of PID constants

Two sets of PID constants are provided for duplex control. When the recorder is used in a heat/cool application, the first set ("PB" or "GAIN", "RATE T", and "I MIN" or "I RPM") apply to heat control. The second set ("PB2" or "GAIN 2", "RATE2T", and "I2 MIN" or "I2 RPM") are used for cooling control.

Accutune II

Accutune II provides foolproof, trouble-free on-demand tuning in the recorder. No knowledge of the process is required at start-up. The operator simply enters the desired setpoint and initiates the tuning. The recorder immediately starts controlling to the setpoint while it identifies the process, calculates the tuning constants and enters them into the tuning set up group, and begins PID control with the correct tuning parameters. This works with any process, including integrating type processes, and allows retuning at a fixed setpoint. The tuning sequence will cycle the recorder's output two full cycles between 0 % and 100 % (or low and high output limits) while allowing only a very small process variable change above and below the setpoint during each cycle.

Detailed instructions for using Accutune are provided in *Appendix D*.

Fuzzy overshoot suppression

A parameter is provided to enable/disable fuzzy overshoot suppression. When enabled, fuzzy overshoot suppression minimizes process variable overshoot following a setpoint change or a process disturbance. This is especially useful in processes which experience load changes or where even a small overshoot beyond the setpoint may result in damage or lost product.

The fuzzy logic observes the speed and direction of the PV signal as it approaches the setpoint and temporarily modifies the internal controller response action as necessary to avoid an overshoot. There is no change to the PID algorithm, and the fuzzy logic does not alter the PID tuning parameters.

Tuning group prompts

Table 4-10 lists all the parameters in the tuning set up group.

For a 2-pen recorder, the desired input channel is displayed on the left side of the operator interface. Press FUNC to select channel.

Press SETUP key until "TUNING" appears in the lower display.

Press FUNC key to select the parameters.

ATTENTION

Appendix D contains instructions for using Accutune II for automatic tuning.

Table 4-10 Tuning Parameter Definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
FUZZY	DIS [factory setting] ENAB	FUZZY OVERSHOOT SUPPRESSION FEATURE DISABLE—Disables fuzzy overshoot suppression ENABLE—The recorder will use fuzzy logic to suppress or mimimize any overshoot that may occur as a result of the existing tuning parameters. It does NOT change the parameters.
TUNE	DIS [factory setting] ENAB	ACCUTUNE II—On demand tuning algorithm DISABLE—Disables ACCUTUNE II ENABLE—TuneOF will be displayed as a status message. Use the Increment or Decrement key to toggle status to TuneON. New PID parameters will be entered automatically when tuning is complete.
AT ERR	no message under normal circumstances AbRT read only message displayed if tuning has been manually aborted	ACCUTUNE II Error Code—Displays AbRT if "TUNE" has been aborted manually. See Appendix D.
PB or GAIN	0.1 % to 999.9 % or 0.1 to 999.9 [factory setting = 1.0]	PROPORTIONAL BAND or GAIN—Which of these prompts is displayed depends on the selection made for control group parameter "PBorGN" (proportional band or gain). Both proportional band and gain are ways of expressing the proportional component of control. See the description of control group parameter "PBorGN" for details concerning the two terms. ATTENTION If control group parameter "OUTALG" is "RLYD" (relay duplex), "Tcur" (time/current duplex), or "CurT" (current/time duplex), and you are using the recorder in a heat/cool application, PB or GAIN is used for heat control. Cooling control would use PB2 or GAIN 2 described later in this table.

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
RATE T	0.08 to 10.00 minutes 0.08 or less = OFF [factory setting = 0.0]	RATE—Rate action affects the recorder's output whenever the deviation between setpoint and process variable is changing. It affects it more when the deviation is changing faster. (This is the "derivative" component of control.) ATTENTION If control group parameter "OUTALG" is "RLYD" (relay duplex), "Tcur" (time/current duplex), or "CurT" (current/time duplex), and you are using the recorder in a heat/cool application, RATE T is used for heat control. Cooling control would use RATE2T described later in this table.
I MIN or I RPM	0.02 to 50.00 [factory setting = 0.02]	RESET IN MINUTES PER REPEAT or RESET IN REPEATS PER MINUTE—Which of these prompts is displayed depends on the selection made for control group parameter "MINRPM".
		Reset adjusts the recorder's output taking into consideration both the size of the deviation (SP-PV) and the duration of the deviation. (This is the "integral" component of control.) The amount of corrective action depends on the value of PB or GAIN.
		The reset value specified here determines how many times proportional action is repeated per minute (I RPM) or the length (in minutes) of the reset action (I MIN). For example, if I MIN = .5, it is the same as if I RPM = 2. The result is the same; two resets are performed in every minute.
		is "RLYD" (relay duplex), "Tcur" (time/current duplex), or "CurT" (current/time duplex), and you are using the recorder in a heat/cool application, I MIN or I RPM is used for heat control. Cooling control would use I2 MIN or I2 RPM described later in this table.
MANRST	-100 to +100 (in % output) [factory setting = 0]	MANUAL RESET—This parameter is only applicable if control group parameter "CTRALG" is "PDMR" (PD with manual reset). Because a proportional recorder will not necessarily line out at setpoint, there will be a deviation (offset) from setpoint. This reset value can be used to eliminate the offset and lets the PV line out at setpoint. The controller output is the computed output plus the value of MANRST.

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
PB2 or GAIN 2	0.1 % to 999.9 % or 0.1 to 999.9 [factory setting = 1.0]	PB2 or GAIN 2, RATE2T, and I2 MIN or I2 RPM— These parallel their counterparts already described. ATTENTION If control group parameter "OUTALG" is "RLYD" (relay duplex), "Tcur" (time/current duplex), or
RATE2T	0.08 to 10.00 minutes 0.08 or less = OFF [factory setting = 0.0]	"CurT" (current/time duplex), and you are using the recorder in a heat/cool application, these parameters are used for cooling control.
I2 MIN or I2 RPM	0.02 to 50.00 [factory setting = 0.02]	

The following parameters are used for time proportional control, and are available only if:

 the control type specified in the control set up group using the "CTRALG" (control algorithm) parameter is "PIDA" or "PDMR"

and

• the output algorithm specified in the control set up group using the "OUTALG" parameter is "RLY", "RLYD", "CurT", or "Tcur". In the case of "CurT" and "Tcur", the cycle parameters apply only to the time-proportioned output.

СҮС ТІ	0 seconds to 120 seconds [factory setting = 4]	CYCLE TIMER FOR RELAY 1—Use this to specify length of total cycle time for time proportional control (proportional control using relay action rather than current output). In time proportional control the output (0 % to 100 %) signifies the portion of the cycle for which the relay is on ("duty cycle") to achieve the desired setpoint. For example, with a 10-second cycle time and an output value of 10 %, the relay would be on for 1 second and off for 9 seconds. ATTENTION If control group parameter "OUTALG" is "RLYD" (relay duplex), and you are using the recorder in a heat/cool application, CYC TI is used for heat control. Cooling control would use CYC2TI.
СҮС2ТІ	0 seconds to 120 seconds [factory setting = 4]	CYCLE TIMER FOR RELAY 2—This prompt will be displayed only if the control group parameter "OUTALG" is set to RLYD (relay duplex). ATTENTION If you are using the recorder in a heat/cool application, CYC2TI is used for control of cooling.

4.3.13 Setpoint Ramp/Program Set Up Group

Introduction

All models supporting control can be configured to ramp the setpoint between the current local setpoint and a final local setpoint over a timer interval of from 1 minute to 255 minutes.

If the optional Setpoint Program feature is specified at time of purchase, then in addition to this single ramp capability, you can also configure a ramp/soak profile containing up to twelve segments, each with its own time interval.

Setpoint ramp/program group prompts

Table 4-11 lists all the function prompts in the setpoint ramp group. The additional prompts associated with the optional twelve-segment Setpoint Program are described in *Appendix C*.

For a 2-pen recorder, the desired input channel is displayed on the left side of the operator interface. Press FUNC to select channel.

Press SETUP key until "SPRAMP" appears in the lower display.

Press FUNC key to select the parameters.

Table 4-11 Setpoint Ramp Parameter Definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition	
SP RAMP		SINGLE SETPOINT RAMP — Make selection to enable or disable the setpoint ramp function. Make sure you configure a ramp time and a final setpoint value. "SP PROG" must be disabled.	
	ENAB	ENABLE SETPOINT RAMP — Allows the single setpoint ramp prompts to be shown.	
	DIS [factory setting]	DISABLE SETPOINT RAMP — Disables the setpoint ramp. Allows "SPPROG" option to be selected.	
TI MIN	0 minutes to 255 minutes [factory setting = 0]	SINGLE SETPOINT RAMP TIME — Enter the number of minutes desired to reach the final setpoint or a single setpoint ramp. A ramp time of "0" implies and immediate change of setpoint to the final setpoint.	
FINL SP	Within SP limits [factory setting = 0]	SETPOINT RAMP FINAL SETPOINT — Enter the value desired for the final setpoint. The controller will operate at the setpoint set here when ramp is ended.	
SP PROG	ENAB DIS [factory setting]	SETPOINT RAMP/SOAK PROGRAM Available only with controllers that contain this option. For reasons of convenience, the information for the prompts when SPPROG is enabled are included in Appendix C. ATTENTION "SP RAMP" must be disabled for SPPROG to be available.	

4.3.14 Timer Set Up Group

Introduction

The timer option allows you to configure a timeout period and to select the timer start by either the keyboard (Increment or Decrement key) or Alarm 1. The optional digital input can also be configured to the start the timer. The timer display is selectable as either "time remaining" or "elapsed time".

Alarm 2 is activated at the end of the timeout period. When the timer is enabled, it has exclusive control of the Alarm 2 relay; any previous Alarm 2 configuration is ignored. At timeout, the timer is ready to be activated again by whatever action has been configured. Relay 2 will remain energized until the timer is reset.

See Subsection 4.5.2.7 for operation of timer.

Timer group prompts

Table 4-12 lists all the function prompts in the timer setup group and their definitions.

Press SET UP key until "TIMER" appears in the lower display.

Press FUNC key to display parameters.

Table 4-12 Timer Parameter Definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
TIMER	ENAB DIS [factory setting]	TIMER - Use this to enable or disable the timer option.
PERIOD	0:00 to 99:59 [factory setting = 0]	PERIOD - Configure the length of the timeout period (from 0 to 99 hours, 59 minutes).
START	KEY [factory setting] AL1	START - Select whether the Timer starts with the keyboard (Increment or Decrement key) or Alarm 1.
L DISP		L DISP - Select whether time remaining (TREM) or elapsed time (ET) is displayed for the timer option. <i>r</i> The time is shown on the lower display in hh:mm format along with a rotating "clock" character.
	TREM [factory setting]	Time remaining: If the "clock" rotation is clockwise, elapsed time is indicated. $\begin{tabular}{l} \hline \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ $
	ET	Elased time: If the "clock" rotation is counterclockwise, time left is indicated. † \(\begin{align*} \Pi & \Pi & \Pi \end{align*}

4.3.15 Alarms Set Up Group

Introduction

If the recorder hardware supports outputs, one or both relays can be used for alarming. An alarm is an indication that an event that you have selected during configuration (process variable, for example) has exceeded one or more alarm limits. There are two alarms available for each pen (assuming no relay is being used for control). Each alarm has two setpoints. There are two alarm output selections, high and low. You can configure each setpoint to alarm either high or low. Each alarm has an adjustable hysteresis of 0.0 % to 100.0 % that is configurable for that alarm's setpoint.

If the "OUTALG" function in the control group is set to "RLYD", both relays on the printed circuit assembly for the pen being configured are used for control, and the prompts in the alarm group will not be displayed. If "OUTALG" is "RLY", or if the recorder is a limit controller, then Relay 1 is used for control. In these cases only the prompts for the second alarm (Relay 2) will be displayed.

If "TIMER" is set to "ENAB", then Relay 2 is used by the timer and prompts for the second alarm will not be displayed.

Alarms group prompts

Table 4-13 lists all the function prompts in the alarms set up group and their definitions.

For a 2-pen recorder, the desired input channel is displayed on the left side of the operator interface.

Press FUNC to select channel.

Press SETUP key until "ALARMS" appears in the lower display.

Press FUNC key to select the parameters.

Table 4-13 Alarm Parameter Definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
A1S1TY*		ALARM 1 SETPOINT 1 TYPE—Select what you want Setpoint 1 of Alarm 1 to represent.
	NONE [factory setting] INP DEV	NO ALARM INPUT PV DEVIATION of input from setpoint
A1S2TY*	Same as A1S1TY	ALARM 1 SETPOINT 2 TYPE —Select what you want Setpoint 2 of Alarm 1 to represent. The selections are the same as A1S1TY.
*For Deviation Alarm to fu	unction: control must be enabled. If O	n/Off control is selected, only alarm #2 is available for Deviation.
A1S1VA	-999 to 9999 [factory setting = 100]	ALARM 1 SETPOINT 1 VALUE—This is the value at which you want the alarm type chosen in prompt "A1S1TY" to actuate. The appropriate value depends on what the setpoint has been configured to represent.
A1S2VA	-999 to 9999 [factory setting = 100]	ALARM 1 SETPOINT 2 VALUE—This is the value at which you want the alarm type chosen in prompt "A1S2TY" to actuate. The appropriate value depends on what the setpoint has been configured to represent.

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
A1S1HL	HI LO [factory setting]	ALARM 1 SETPOINT 1 STATE—Select whether you want the alarm type chosen in prompt "A1S1TY" to alarm high or low. HI ALARM—Relay coil is de-energized when the PV is above the setpoint. LO ALARM—Relay coil is de-energized when the PV is below the setpoint.
A1S2HL	HI [factory setting]	ALARM 1 SETPOINT 2 STATE—Select whether you want the alarm type chosen in prompt "A1S2TY" to alarm high or low. HI ALARM—Relay coil is de-energized when the PV is above the setpoint. LO ALARM—Relay coil is de-energized when the PV is below the setpoint.
A1 HYS	0.0 % to 100.0 % of input span [factory setting = 0]	ALARM 1 HYSTERESIS—This is an adjustable hysteresis provided on alarm 1 that activates at exactly the alarm setpoint when the alarm is OFF. When the alarm is ON, it will not deactivate until the variable is away from the alarm setpoint by a value equal to A1 HYS. Configure the hysteresis as a percent of input range span.
A2S1TY	Same as A1S1TY	ALARM 2 SETPOINT 1 TYPE—Select what you want Setpoint 1 of Alarm 2 to represent. The selections are the same as "A1S1TY".
A2S2TY	Same as A1S1TY	ALARM 2 SETPOINT 2 TYPE —Select what you want Setpoint 2 of Alarm 2 to represent. The selections are the same as "A1S1TY".
A2S1VA	-999 to 9999 [factory setting = 100]	ALARM 2 SETPOINT 1 VALUE—This is the value at which you want the alarm type chosen in prompt "A2S1TY" to actuate. The appropriate value depends on what the setpoint has been configured to represent.
A2S2VA	-999 to 9999 [factory setting = 100]	ALARM 2 SETPOINT 2 VALUE—This is the value at which you want the alarm type chosen in prompt "A2S2TY" to actuate. The appropriate value depends on what the setpoint has been configured to represent.
A2S1HL	HI LO [factory setting]	ALARM 2 SETPOINT 1 STATE—Select whether you want the alarm type chosen in prompt "A2S1TY" to alarm high or low. HI ALARM—Relay coil is de-energized when the PV is above the setpoint. LO ALARM—Relay coil is de-energized when the PV is below the setpoint.
A2S2HL	HI [factory setting]	ALARM 2 SET POINT 2 STATE—Select whether you want the alarm type chosen in prompt "A2S2TY" to alarm high or low. HI ALARM—Relay coil is de-energized when the PV is above the setpoint. LO ALARM—Relay coil is de-energized when the PV is below the setpoint.

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
A2 HYS	0.0 % to 100.0 % of input span [factory setting = 0]	ALARM 2 HYSTERESIS—This is an adjustable hysteresis provided on alarm 2 that activates at exactly the alarm setpoint when the alarm is OFF. When the alarm is ON, it will not deactivate until the variable is away from the alarm setpoint by a value equal to A2 HYS. Configure the hysteresis as a percent of input range span.

4.3.16 Auxiliary Output Set Up Group

Introduction

The auxiliary output set up group lets you enable or disable the auxiliary output selection which provides a milliampere output representing one of four control parameters: Input, Output, Setpoint, or Deviation. You can also set the auxiliary output low and high scaling factors.

Auxiliary output group prompts

Table 4-14 lists all the function prompts in the auxiliary output set up group and their definitions.

For a 2-pen recorder, the desired input channel is displayed on the left side of the operator interface.

Press FUNC to select channel.

Press SETUP key until "AUX OUT" appears in the lower display.

Press FUNC key to select the parameters.

Table 4-14 Auxiliary Output Parameter Definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
AUXOUT		AUXILIARY OUTPUT SELECTION provides an mA output representing any of four control parameters. The display for Auxiliary Output viewing will be in engineering units for all but output. Output will be designated in percent (%).
		The Auxiliary Output is the same output as the Current Output and is <i>not</i> available if the control output algorithm = CUR, CurT, or Tcur.
		Other prompts affected by these selections: "4 mA VAL" and "20mA VAL".
	NONE [factory setting]	NO AUXILIARY OUTPUT
	INP	INPUT—This represents the configured range of input. FOR EXAMPLE: Type "J" Thermocouple (0 °F to 1600 °F) 0 °F display = 0 % output 1600 °F display = 100 % output
	OUT	OUTPUT —Represents the displayed controller output in percent (%).
	SP	SETPOINT —Represents the value of the setpoint in units of PV.

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition		
AUXOUT (continued)	DE	DEVIATION (Process Variable minus Setpoint)— Represents –100 % to +100 % of the selected PV span in engineering units. FOR EXAMPLE: Type "T" Thermocouple PV range = -300 °F to +700 °F PV span = 1000 °F Deviation range = -1000 °F to +1000 °F If PV = 500 °F and SP = 650 °F then Deviation Display = -150 °F Auxiliary Output = 42.5 % NOTE: A deviation of 0°F yields an auxiliary output of 50 %.		
4mA VA	Low Scale Value within the range of the selected variable to represent 4 mA	AUXILIARY OUTPUT LOW SCALING FACTOR—Use a value in engineering units for all selections above except Output.		
	[factory setting = 0]	Use value in percent (%) for Output. (Output can be between –5 % and +105 %.)		
20mA V	High Scale Value within the range of the selected variable to represent 20 mA	AUXILIARY OUTPUT HIGH SCALING FACTOR—Use value in engineering units for all selections above excep Output.		
	[factory setting = 100]	Use a value in percent (%) for Output. (Output can be between –5 % and +105 %.)		
		*When Deviation is selected, only one operating parameter will be entered. This value represents the deviation level that will produce 20 mA output. Zero deviation will produce a center scale (12 mA) output. A negative deviation equal in magnitude to the Auxiliary Output High Value will provide a low end (4 mA) output.		

4.3.17 Communication Set Up Group

Introductions

If the hardware supports the Modbus communication option, use the prompts in the communication set up group to configure communication parameters.

Communication group prompts

Table 4-15 lists the function prompt in the communication set up group.

For a 2-pen recorder, the desired input channel is displayed on the left side of the operator interface. Press FUNC to select channel.

Press SETUP key until "COMM" appears in the lower display.

Press FUNC key to select the parameter.

ATTENTION

Each pen channel must have its own unique address. However, set the same baud rate and transmitter delay for both pens.

Table 4-15 Communication Parameter Definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
СОММ	DIS [factory setting] ENAB	COMMUNICATION ENABLE—Enable/disable communication.
ADDRES	1 to 99 [factory setting = 0]	ADDRESS—Specify the pen channel's address on the network.
BAUD	300 600 1200 2400 4800 9600 [factory setting] 192K	BAUD RATE —Specify the baud rate used by all devices on the network.
XmtDLY	NONE [factory setting] 10ms 20ms 30ms 40ms 50ms	TRANSMITTER DELAY —Specify the minimum delay between the end of a received message and the start of the response message.
DBLBYT		DOUBLE BYTE ORDER —Determines Floating Point Byte order in Modbus queries.
	FP B FP BB FP L FP LB	Big Endian Big Endian – Byte Swapped Little Endian Little Endian – Byte Swapped

4.3.18 Remote Switch (Digital Inputs) Set Up Group

Introduction

If the hardware supports optional digital inputs, the parameters in this group are used to specify what action the recorder will take if these "remote switches", triggered by some external event, are closed.

Remote switch group prompts

Table 4-16 lists all the function prompts in the remote switch set up group and their definitions. For a 2-pen recorder, the desired input channel is displayed on the left side of the operator interface.

Press FUNC to select channel.

Press SETUP key until "REM SW" appears in the lower display.

Press FUNC key to select the parameters.

Table 4-16 Remote Switch Parameter Definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
REMSW1		REMOTE SWITCH 1 —Use this parameter to specify what action the recorder should take if digital input 1 for this channel goes to ON (switch contact closed).
	NONE [factory setting]	NONE—No remote switching action.
	SP2	SETPOINT2 —Controller setpoint used in Auto will go to the value of the second setpoint (operating parameter "S2" for the channel) when the digital input goes ON. (When it goes OFF, the recorder will resume using "SP" for the channel.)
		Use of the second setpoint with a remote switch is independent of the number of setpoints specified with control group parameter "NumSPs".
	MAN	MANUAL —Controller will be switched to Manual mode when the digital input goes ON. Output will not change until the operator changes it. (When the digital input goes OFF, the controller will go back to Auto, using operating parameter "SP" as the basis of computing output.)
	MNFS	MANUAL WITH FAILSAFE—Controller will be switched to Manual mode <u>and</u> the output will be changed to the value of control group parameter "FAILSF" for the channel when the digital input goes ON. (When the digital input goes OFF, the controller will go back to Auto, using operating parameter "SP" as the basis of computing output.)
	HOLD	HOLD —When the digital input goes ON, the recorder will hold execution of the single setpoint ramp or the optional setpoint program.
	RUN	RUN —When the digital input goes ON, the recorder will start execution of the single setpoint ramp or the optional setpoint program.
	TIMR	TIMER —When the digital input goes ON, the optional timer will start.
REMSW2	NONE [factory setting] SP2 MAN MNFS HOLD RUN TIMR	REMOTE SWITCH 2 —This parameter is used to specify what action the recorder should take if digital input 2 for this channel goes ON (switch contact closed). The choices are the same as for REMSW1.

4.3.19 Display Parameter Set Up Group

Introduction

Using the BLANK function, the display can be set to turn off a configured number of seconds after the last press of any key. Pressing any key while the display is blank will restore it.

When the TOGGLE function is enabled, the pen currently driving the display will switch control to the other pen after a configured timeout period. If the other pen has its TOGGLE function enabled, it will switch back after its configured timeout period.

Lockout group prompts

Table 4-17 lists the function prompt in the lock out set up group.

For a 2-pen recorder, the desired input channel is displayed on the left side of the operator interface. Press FUNC to select channel.

Press SETUP key until "DSPLAY" appears in the lower display.

Press FUNC key to select the parameter.

Table 4-17 Display Parameter Definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
BLANK	OFF [factory setting] 2s 4s 30s	BLANKING FUNCTION —Use this parameter to set timeout period after which the display goes blank. OFF disables the function.
TOGGLE OFF [factory setting] 2s 4s		TOGGLE FUNCTION—Use this parameter to set the timeout period after which control the display is passed to the other board (pen).

4.3.20 Lock Out Parameter Set Up Group

Introduction

This is the parameter used to lockout any unauthorized changes to the recorder's configuration, calibration, and pen alignment parameters. Calibration group functions are described in *Section 5 – Input and Output Calibration for Recorder with Display*. Pen alignment group functions are described in *Section 8 – Troubleshooting and Pen Alignment for Recorder with Display*.

Set this group last

Because this group contains functions that have to do with security and lockout, we recommend that you configure this group last, after all the other configuration data has been entered.

Lockout group prompts

Table 4-18 lists the function prompt in the lock out set up group.

Press SETUP key until "LOCK" appears in the lower display.

Press FUNC key to select the parameter.

Table 4-18 Lockout Parameter Definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
LOCK		LOCK limits access to one or more types of set up groups. Do not configure until all configuration is complete.
	NONE [factory setting]	NO LOCKOUT—All groups read/write.
	CAL	CAL—Locks out calibration and pen alignment groups; they will not even be displayed. All other groups are available for read/write.
	CONF	CONF—Tuning and cycle parameters are read/write. All other configuration groups (except lock) are read only. Calibration and pen alignment groups are not displayed.
	FULL	FULL — All configuration groups (except lock) are read only. Calibration and pen alignment groups are not displayed.

ATTENTION

The Lock function cannot be changed when the RUN/SETUP switch is in the "SETUP" position, making it usable as a physical lockout. Whatever lockout level is selected, it is protected as long as the switch is in the SETUP position.

4.3.21 Configuration Record Sheet

Keep a record

Enter the value or selection for each prompt on the configuration record sheet so you will have a record of how your instrument was configured. Remember that not all function parameters apply to every recorder and configuration.

The prompts for the optional 24-segment setpoint program option are not included on this record sheet. See *Appendix C* for a special worksheet used for this feature.

RECORDER TAG NAME_____

Group Prompt	Function Prompt	Pen 1 Value or Selection	Pen 2 Value or Selection	Group Prompt	Function Prompt	Pen 1 Value or Selection	Pen 2 Value or Selection
INPUT	DECMAL			TUNING	I MIN or I RPM		
	UNITS			(cont'd)	MANRST		
	IN TYP			` ′	PB2 or GAIN 2		
	XMITTR				RATE2T		
	LD CAL				I2 MIN or I2 RPM		
	INP HI				CYCTI		
	INP LO				CYCTI2		
	BIAS				010112		
	FILTER			SPRAMP	SPRAMP		
	BRNOUT			SFRAINF	TI MIN		
	BRINOUT						
DEN	DENIN				FINLSP		
PEN	PEN IN				SPPROG		
	CHT HI						
	CHT LO			TIMER	TIMER		
					PERIOD		
CHART	CHTSPD		n/a		START		
	HR/REV		n/a		L DISP		
	CHTTYP		n/a				
				ALARMS	A1S1TY		
TOTAL	[value]				A1S2TY		
	RESET				A1S1VA		
	TOTAL				A1S2VA		
	INP EU				A1S1HL		
	RATE				A1S2 HL		
	TOT EU				A1 HYS		
	TOT DP				A2S1TY		
	SCALER				A2S2TY		
	RSTABL				A2S1VA		
	TTO IT IDE				A2S2VA		
CONTROL	CONTRL				A2S1HL		
33	NumSPs				A2S2HL		
	OUTALG				A2 HYS		
	CURRNG				AZIIIO		
	CTRALG			AUXOUT	AUXOUT		
				AUXUUI			
	PWR UP				4mA VA		
	DEFDSP				20mA V		
	SP HI						
	SP LO			сомм	COMM		
	ACTION				ADDRES		
	OUT HI				BAUD		
	OUT LO				XmtDLY		
	DBAND				DBLBYT		
	HYST						
	FAILSF			REM SW	REMSW1		
	PBorGN				REMSW2		
	MINRPM						
				DSPLAY	BLANK		
TUNING	FUZZY				TOGGLE		
	TUNE						
	AT ERR			LOCK	LOCK		
	PB or GAIN						
	RATE T						

4.3.22 Limit Control Configuration

Special configuration for control and alarms

The DR4300 is available as a limit controller. Most set up groups described in Subsections 4.3.7 through 4.3.20 apply to limit control, and are configured for the limit controller the same way they are for other recorders.

The exceptions are:

- Control set up group contains special parameters for limit control in place of those described in Subsection 4.3.11. The limit control set up parameters that replace those in Subsection 4.3.11 are listed in Table 4-19.
- Alarm 1 is not available.

Table 4-19 Limit Control Parameter Definitions

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition		
LIMIT		TYPE OF LIMIT CONTROL		
	HI [factory setting]	HI — Limit action occurs when PV exceeds SP. LO — Limit action occurs when PV is less than SP.		
POWRUP		POWER UP STATE		
	NORM	NORM — Normal limit control on power up.		
	RST [factory setting]	RST — Powers up in limit state. Recorder will not begin normal limit control until RESET key is pressed.*		
SP HI	-999 to 9999 [factory setting = 100]	SETPOINT HIGH RANGE LIMIT —This parameter prevents the local setpoint from going above the value specified here. The setting must be equal to or less than the upper range of the input.		
SP LO	-999 to 9999 [factory setting = 0]	SETPOINT LOW RANGE LIMIT —This parameter prevents the local setpoint from going below the value specified here. The setting must be equal to or greater than the lower range of the input.		
XRSET		EXTERNAL RESET —Use this parameter to enable or disable resetting the limit controller (taking it out of the limit state) using Remote Switch 1 (digital input 1).		
	DIS [factory setting]	DIS — When external reset is disabled, the limit controlle can be reset only by pressing the MAN/AUTO/RESET key on the recorder.		
	ENAB	ENAB — When external reset is enabled, the limit controller can be reset two ways: by pressing the MAN/AUTO/RESET key on the recorder, or by turning on digital input 1 (contact closed).		

4.4 Startup of Recorder with Display and Keypad

4.4.1 Overview

Introduction

This subsection provides procedures and reference information for startup and operation of a recorder having a display and keypad. (For information on operating a recorder that does not have a display and keypad, see Section 3.) This subsection assumes that the recorder has been properly prepared, mounted, and wired in accordance with the instructions in Section 2, and configured as described earlier in this section.

Some of the procedures in this subsection are required only initially; some are required during use. Once the recorder is up and running, operator actions are required infrequently.



WARNING—SHOCK HAZARD



STARTUP AND MAINTENANCE MAY REQUIRE ACCESS TO HAZARDOUS LIVE CIRCUITS, AND SHOULD ONLY BE PERFORMED BY QUALIFIED SERVICE PERSONNEL. MORE THAN ONE SWITCH MAY BE REQUIRED TO DE-ENERGIZE UNIT BEFORE SERVICING.

4.4.2 Preparing the Recorder for Startup

Introduction

Before applying power to the recorder, complete these preparation tasks.

ATTENTION

Never move the pen arms when the unit is operating unless adjusting the pen alignment as described in Section 8.

WARNING



SHOCK HAZARD

When the unit is powered a potentially lethal shock hazard exists at the AC line connections at TB1 on each printed circuit assembly (behing the chart plate). Make sure the unit power is disconnected before starting the procedure. More than one switch may be required to de-energize the recorder.

Failure to observe this precaution can result in exposure to a potentially lethal shock hazard.

Procedure

Refer to Figure 4-4 to identify the basic chart plate components and follow the procedure in Table 4-20 to prepare the recorder for operation.

Table 4-20	Preparing the Recorder for Operation
	Action

Step	Action
1	Open the door of the recorder.
2	Pull up on the pen lifter to raise the pen(s) from the chart plate and remove the protective cap from each pen tip. Lift the locking clip on the chart hub.
3	Slip the new chart under the pen lifter, pen and time index, and press it into place over the chart hub.
4	Turn the chart until the desired time line on the chart is aligned with the time index on the chart plate and pen 1 before closing the locking clip on the hub. Push down on the lifter to return the pen(s) to the chart.
	CAUTION: Do not try to rotate the hub

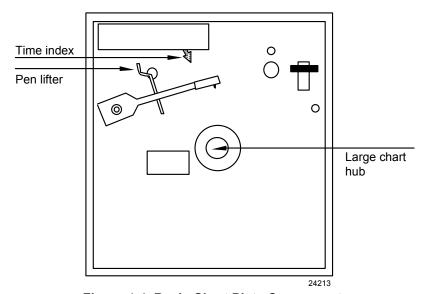


Figure 4-4 Basic Chart Plate Components

4.4.3 Running the Optional Step Test

Introduction

You can test the recorder's mechanical operation by running a step test. This test is initiated using the keypad as described in Table 4-21.

This test prints a step pattern, which is independent of any chart settings, with horizontal lines drawn by both pens at each 10 % increment on the chart (see Figure 4-5).

WARNING



SHOCK HAZARD

When the unit is powered a potentially lethal shock hazard exists at the AC line connections at TB1 on each printed circuit assembly (behing the chart plate). Make sure the unit power is disconnected before starting the procedure. More than one switch may be required to de-energize the recorder.

Failure to observe this precaution can result in exposure to a potentially lethal shock hazard.

The test will run for one complete revolution of the chart before it stops itself. The chart revolution for the test takes approximately 2 minutes, regardless of configured chart speed. However, the test can be terminated at any time by pressing the DISP key.

Additional automatic self-tests

At power-up the recorder runs self-diagnostics on the printed circuit assembly for each pen. See Section 4.5.1.4 and *Section 8 – Troubleshooting and Pen Alignment of Recorder with Display* for more information about these diagnostic tests.

Procedure

Use the procedure in Table 4-21 to run the step test.

Table 4-21 Procedure for Running the Step Test

Step	Press	Action/Result
1		Make sure the cap is removed from the tip of each pen and the chart is installed. (If you plan to store or ship the recorder, save the protective caps for the pen tips. Replace them if the recorder is taken out of operation.)
2		Being careful of the shock hazard at TB1, swing out the chart plate and set SW5 on the printed circuit assembly on the right (pen 1) to the setup position, toward the top of the board. Be certain that the Lockout level is "CAL" or "NONE". The self-test will not run otherwise.
3		Apply power to the recorder.
4	FUNC	Until INP 1 indicator is lit on the left side of the operator interface.

Step	Press	Action/Result	
5	and MAN AUTO RESET together	and Upper Display PASS Lower Display SLF TST AUTO RESET Refer to Section 8 if step test fails.	
6		Check to see that the recorder is generating a step pattern on the chart as shown in Figure 4-5. At the completion of the test (after one revolution of the chart), the recorder will automatically return to normal operation.	
7	FUNC	Lights INP 2 indicator (if recorder has 2 pens) You will see: Upper Display (value) Lower Display INP Repeat Steps 4 and 5 to test pen 2 operation.	
8	DISP	Terminates the test at any time.	

Chart step pattern

Figure 4-5 is a typical chart step pattern generated by the recorder in the test.

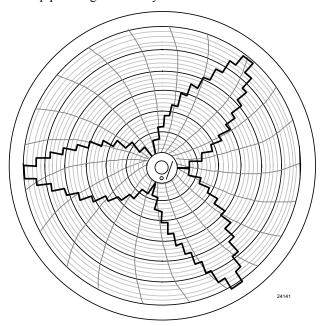


Figure 4-5 Typical Step Test Chart Patterns

4.4.4 Completing Preparation and Startup

4.4.4.1 Overview

Introduction

Once the recorder is set up, mounted, wired, and the chart has been installed, the only remaining tasks are:

- setting the chart time and applying the power (see Subsection 4.4.4.2)
- checking the self-diagnostic tests (see Subsection 4.4.4.3)
- checking the displays and keys (see Subsection 4.4.4.4)
- starting operation (see Subsection 4.4.4.5)

4.4.4.2 Set chart time and apply power

Procedure

To set the chart time and apply power, follow the procedure in Table 4-18. (See also Figure 4-6.)

Table 4-22 Procedure for Setting Chart Time and Applying Power

Step	Action	
1	Open the door.	
2	Pull up the pen lifter to raise the pen(s) from the chart plate. Lift locking clip on the chart hub.	
3	Turn the chart until the desired time line on the chart is aligned with the time index on the chart plate and pen 1 before closing the locking clip on the hub. Push down on the lifter to return the pen(s) to the chart.	
	CAUTION: Do not try to rotate the hub.	
4	Close the door and apply power.	
5	The pen(s) will move into position and the recorder pen will start to track the value specified using the "PENIN" parameter in the pen set up group (see Subsection 4.3.8).	

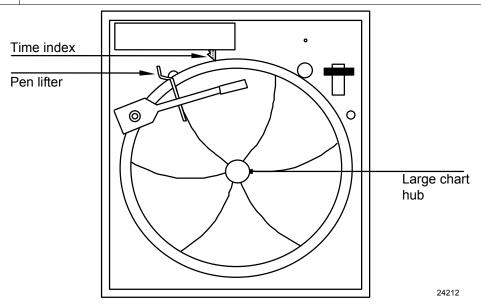


Figure 4-6 Setting Chart Time to Time Index

4.4.4.3 Diagnostic tests

Tests run automatically

When the recorder is powered-up, self-diagnostics are run by the software.

As the tests in Table 4-23 are run, the display indicates whether the tests were passed or failed as described below.

Table 4-23 Power-Up Diagnostic Tests

Lower Display	Upper Display
RAMTST	PASS or FAIL
CFGTST (configuration checksum)	PASS or FAIL
CALTST (working calibration)	PASS or FAIL

Status of tests displayed

As the tests are run, the lower line of the display shows which test is running. The upper line of the display indicates the status. If any of these tests fail, "FAIL" appears momentarily in the upper display, then a display test is run. The display changes to show the value of the process variable on the top line, and the error message for the failed test on the second line.

In addition, if the control group parameter "CONTRL" has a value of "ENAB" when the test is failed, the message "FAILSF" (failsafe) will alternate with error message for the test, and the controller will be in manual mode. When the "FAILSF" message is displayed, it indicates that the recorder control output has been driven to the value assigned to the control group "FAILSF" parameter.

By default, when the recorder is powered up the display will be for pen 1. Therefore, when the power up tests run, the "PASS" and "FAIL" messages will apply only to the printed circuit assembly associated with pen 1. However, in a 2-pen recorder the tests will also be run on the printed circuit assembly for pen 2. If the pen 2 assembly fails one of the tests, the message "P2 ERR" will be displayed, along with any error messages from the pen 1 tests.

Section 8 contains additional information about self-diagnostics, and suggested remedies if a problem is detected.

4.4.4.4 Check the displays and keys

Procedure

Use the procedure in Table 4-24 to run the optional display and key test.

Press Result The recorder runs a display test. All the displays will light for 10 seconds, then SET the displays will look like this: UP Upper Display and hold in, **KEYS** then Lower Display **FUNC** TRY at the same time Press each key to see if When the key is pressed, the lower display indicates the name of the key it works pressed.* **Key Pressed Lower Display** SET UP SET **FUNC FUNC** DISP DISP MAN/AUTO/RESET AUTO lack**INCR DECR** If pressing a key does not display its name, the display/keypad assembly is defective. Replace it as described in Section 9 - Replacing Hardware Assemblies.

Table 4-24 Procedure for Testing the Displays and Keys

Key Error message

When a key is pressed and the prompt "KEY ERROR" appears in the lower display, the message is not associated with the display and keypad test. This message will be displayed when the operator presses a key that is invalid for the recorder's configuration. The "KEY ERROR" message will be displayed during normal operation if one of the following conditions is met.

- The parameter normally called up by the key is not available.
- The recorder is not in Set Up mode, so the recorder can not respond to the key; press the SET UP key first.
- The key is not valid because the recorder is not set up for control.
- The key malfunctions; perform keypad test.

^{*} If no key is pressed for 30 seconds, the test times out and the recorder exits the key test.

4.4.4.5 Startup procedure

Procedure

Use the procedure listed in Table 4-25 to start the recorder.

Open the recorder door (if the recorder does not have the optional keypad on the outside of the door). Apply power and wait for the recorder to run its power-up tests.

ATTENTION

If FAILSF or another error message starts blinking in the lower display, refer to Section 8 for troubleshooting information.

For recorders with control on both pens, be sure the INP '1' indication is lit for steps 2 to 6. If INP 1 is not lit, press the FUNC key until "1" is lit when "INP" is displayed.

Table 4-25 Procedure for Starting the Recorder

Step	Operation	Press	Action/Result
1	Pen check		For models without outputs, check that the pen is operating and skip to Step 4.
2	Select manual mode	MAN AUTO RESET	Until "M" indicator is ON. Be sure INP 1 indicator is lit. If it is not, press FUNC key. The recorder is in manual mode and the Output (OT) in percent is displayed in the lower display.
		DISP	Calls up OT value in the lower display.
3	Adjust the output	or	Adjust the output value and ensure that the final control element is functioning correctly. Upper Display shows the input value.
			Lower Display shows OT and the output value in %.
4	Confirm correct configuration.	SET UP	If you want to check the recorder's configuration, follow the procedure described earlier in this section. If you try to change a value and can not, a lockout is enabled; see Subsection 4.3.19.

Step	Operation	Press	Action/Result
5	Enter the setpoint	DISP	SP and the setpoint value for the selected channel.
		or	Adjust the setpoint to the value at which you want the process variable maintained.
6	Select automatic mode	MAN AUTO RESET	Until "A" indicator is ON. The recorder is in Automatic mode. The recorder will automatically adjust the output to maintain the process variable at setpoint as tracked by the pen trace.
7	Start up Controller #2	FUNC	Until INP 2 indicator on left side of display is lit. For recorders with two control outputs enabled, repeat steps 2 to 6 for the second control output, but be sure INP "2" indicator is lit instead of INP "1".
8	Exit Startup		Close the door and monitor the operation.

4.5 Operation of Recorder with Display and Keypad

4.5.1 Monitoring Your Recorder

4.5.1.1 Overview

Introduction

In addition to the historical chart record, you can monitor the recorder's indicators and displays to see real time values of inputs. If control is enabled, then setpoint, output, and deviation values can also be displayed.

Set up values can also be viewed. Depending on the lockout status, configuration values may also be changed.

As a background task the recorder runs self-diagnostics on the printed circuit assemblies for the pens as described in *Section 8 – Troubleshooting and Pen Alignment of Recorder with Display*. If a test is failed, an error message will be displayed as described in Subsection 4.5.1.4. Depending on the recorder's configuration, a "failsafe" output value may be used for control in case of malfunction, as described in Section 8.

4.5.1.2 Operator interface

Display

The indicators and displays on the operator interface let you see what is happening to your process and how the recorder is responding. Figure 4-7 is a view of the operator interface. A description of the displays and indicators is included.

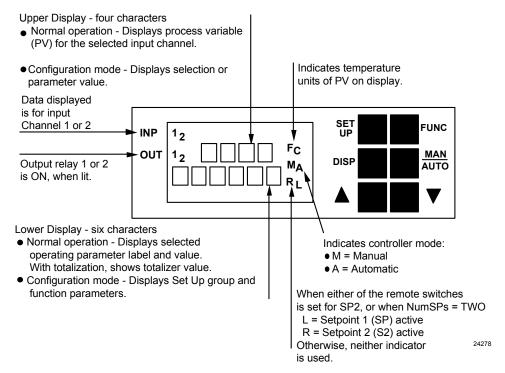


Figure 4-7 Operator Interface

Meaning of indicators

During normal operation, the indicators will light for the reasons shown in Table 4-26.

Table 4-26 Meaning of Indicators

Indicator	Definition when lit
INP 1 2	Data displayed is for channel 1 or 2
OUT 1 2	Output relay 1 or 2 is ON
A or M	Indicates the mode of operation: A = Automatic M = Manual
F or C	Indicates the temperature units of PV: F = Fahrenheit C = Celsius
R or L	L = Setpoint 1 (SP) active; R = Setpoint 2 (S2) active
KEYERR (in lower display)	Keystroke is invalid.

4.5.1.3 Viewing the operating parameters

Contents of display

The upper display uses four characters to display the value of the input. During normal operation, you can view various real time values and setpoints in the lower six-character display if the recorder supports control. Each value will be labeled. Press the DISP key to scroll through the displayed values listed in Table 4-27. If the recorder does not support control, then only the label "INP" or the totalizer value will appear in the lower display. (The input value will be in the upper display.)

The display shows only those parameters and values that apply to your specific model and the way in which it was configured. For recorders with two pens, remember that any controller-related values displayed correspond with the lighted INP indicator. "1" means that the values apply to the pen 1 input channel and "2" means that the values apply to the pen 2 input channel. Press FUNC key to toggle between input 1 and input 2.

Table 4-27 Lower Display Operating Parameter Labels

Label	Description
INP	Process variable value of currently selected input; if the recorder does not support options, then this label is always displayed. In this case the other parameters listed below are not applicable.
OT *	Controller output in percent for selected channel's control loop
SP *	Setpoint for selected channel
S2 *	Second setpoint for selected channel; this setpoint is used only if control group NumSPs = TWO, or if recorder supports digital inputs, and is configured to use this alternate setpoint in case an external event triggers the "remote switch".
UseSPn *	If a second setpoint is available (because control set up group NumSPs = TWO), use this to select Setpoint 1 or Setpoint 2.
DE	Process variable deviation from setpoint currently being used.
[nnnnnn]	If totalizer is being used, the totalized value will be in the lower display (no label). To see the scale factor applicable to this value, see the totalizer set up group.
+ □ □.□□ *	If the optional timer is active, either the time remaining on the timer (Hrs:Min), or
<u>↑</u> □ □.□□ ∗	elapsed time (Hrs:Min) will be displayed. If the "clock hand" is not moving, the timer is not running.
SPRG n *	Select which setpoint program to run; n = 1 to 4.
RUN or HOLD *	If the optional Setpoint Program feature is currently executing a program, the status "RUN" or "HOLD" will also be displayed as part of the display cycle. See Appendix C for detailed instructions for executing a Setpoint Program.
N nn.nn	Currently executing setpoint program segment (N) and time remaining for segment (nn.nn) in hours and minutes.
REC nn	Setpoint program cycles remaining. Displayed only if the program was set to run more than one cycle, and if the program is not executing the last of multiple cycles.
TuneON or TuneOF *	Status of Accutune II. Displayed only if Accutune is enabled. See <i>Appendix D</i> for detailed Accutune instructions.

^{*}You can press ▲ or ▼ or to change the value or initiate some action when this parameter is displayed.

4.5.1.4 Diagnostic Error Messages

Recorders with displays run background tests as described in *Section 8 – Troubleshooting and Pen Alignment of Recorders with Display* to verify data and memory integrity. If there is a malfunction, an error message will blink in the lower display. If more than one self-diagnostic test fails, the display will cycle through the appropriate error messages.

A list of background test error messages is in Table 4-28.

If any of these error messages are displayed, refer to Section 8 for information on correcting the problem.

In addition, an error message will be displayed if the operator tries to run a setpoint program in which the number of the ending segment is lower than the segment number of the start segment. See *Appendix C* for details.

Prompt Description **CALERR** Indicates failure of the calibration test. **CFGERR** Indicates failure of the configuration test. **EEFAIL** Unable to write to nonvolatile memory **FAILSF** Failsafe value being used as output INP FL Two consecutive failures of input integration **INPRNG** Input out-of-range Indicates error on channel other than the one on display. P1 ERR or P2 ERR **RAMTST** Indicates failure of the RAM test. **SEGERR** Indicates that the number of the setpoint program's end segment is lower

than the segment number of the start segment.

Table 4-28 Error Messages

ATTENTION

In addition to error messages, the recorder will display special status messages when optional features are active.

- If the lower display flashes "TUNING", the recorder is in the process of automatically determining tuning parameters using the Accutune II feature described in Appendix D.
- If the lower display flashes "RUN n" or "HOLD", the recorder is executing setpoint program "n" as described in Appendix C, and the run or hold action was initiated locally.
- If the lower display flashes "run n" or "hold", the recorder is executing setpoint program "n", and the run or hold action was initiated remotely.

4.5.2 Operator Functions

4.5.2.1 Overview

Actions an operator can initiate

An operator can do the following:

- change the control mode (AUTO/MANUAL) and adjust the output manually (see Subsection 4.5.2.2)
- change the setpoint (see Subsection 4.5.2.3)
- check the alarm setpoints; the operator may also be able to change the setpoints, depending on the configured value of the "LOCK" parameter (see Subsection 4.5.2.4)
- run a key test (see Subsection 4.4.4.4)
- restore factory or field calibration values (see Subsection 4.5.2.5)
- if the recorder has the totalizer option, reset the totalizer to zero (see Subsection 4.5.2.6)
- *if the recorder has the timer option,* start the timer (see Subsection 4.5.2.7)
- *if the recorder is a limit controller*, reset the recorder to take it out of the limit state (see Subsection 4.5.2.8)
- if the recorder supports Setpoint Programming, run a program (see Appendix C)
- if the recorder supports Accutune II, use this automatic tuning feature (see Appendix D)

Note that being able to perform some actions depends upon how the recorder was configured and the features supplied on the recorder model. For example, control mode and setpoint only apply to units having optional output relays that have been configured for use in control.

INP (Input) indicator

Remember that any value displayed for a 2-pen recorder will be identified by the "1" or "2" at the left of the display, indicating the pen channel to which the value applies.

Press the FUNC key to toggle between pen channels.

132

4.5.2.2 Changing Control Mode and Adjusting Output Manually

Available modes

The recorder can operate in one of two modes.

- *Manual:* When switched to manual mode, the recorder holds its output at the last value used during automatic operation and stops adjusting the output for changes in process variable. In manual, the operator uses the keypad to adjust the output by changing the value shown in the upper display.
 - If the switch to manual is the result of an input failure sending the channel to failsafe operation, the output value displayed when the controller first switches to manual will be the value of the "FAILSF" parameter in the control set up group. This "FAILSF" value is expressed as a percentage. The output can be any value between 0 % and 100 %.
- Automatic with Local Setpoint: In automatic local mode, the recorder uses the local setpoint and automatically adjusts the output to maintain the setpoint at the desired value. In this mode you can adjust the setpoint as described in Subsection 4.5.2.3.

Procedure for selecting manual or automatic mode

Table 4-29 includes procedures for selecting automatic or manual mode, and for changing the output while in manual.

Press Action/Result Step Operation Selecting automatic Until "A" indicator is ON. MAN mode The recorder regulates its output to maintain the PV at **AUTO** the desired setpoint. RESET 2 Selecting manual Until "M" indicator is ON. MAN mode The recorder holds its output at the last value used **AUTO** during automatic operation and stops adjusting the RESET output for changes in setpoint or process variable. • If you get a "KEYERR" prompt, be sure control has been enabled through configuration as described earlier in this section. 3 Adjust the output in Adjust the output value while in manual mode. Upper Display manual mode shows the input value. Lower Display shows OT and the output value in % for the selected channel. 4 Return to automatic "A" indicator appears indicating automatic mode. MAN mode **AUTO** RESET

Table 4-29 Procedure for Selecting Automatic or Manual Mode

4.5.2.3 Changing the Control Setpoint

Procedure

The recorder can be set up for control on pen channel 1 and/or 2 as described earlier in this section. Follow the procedure in Table 4-30 to change the control setpoints.

Table 4-30 Procedure for Changing the Control Setpoints

Step	Operation	Press	Action/Result
1	Select setpoint for the pen 1 channel (input 1).	DISP	until you see:. Upper Display shows the input value. Lower Display shows SP and the setpoint value for the selected channel.
		or	to change the setpoint to the desired value.
2	Select setpoint for pen 2 (input 2)	FUNC	Until "INP 2" indicator lights.
		DISP	until you see:. Upper Display shows the input value. Lower Display shows S2 and the second setpoint for the selected channel.
		or	to change the setpoint to the desired value.
3	Return to input 1 parameters for display	FUNC	to light "INP 1" indicator

If remote switch is set to SP2 then DISP will allow setting of second setpoint (S2).

4.5.2.4 Viewing and Changing Alarm Setpoints

Introduction

If the recorder hardware supports outputs, one or both relays can be used for alarming. An alarm is an indication that an event specified during configuration (process variable, for example) has exceeded one or more alarm limits. There are two alarms available for each pen (assuming no relay is being used for control). Each alarm has two setpoints. There are two alarm output selections, high and low. During configuration, each alarm setpoint is configured to alarm either high or low.

The alarm setpoints can be changed by the operator if the alarm parameters are not locked (see Subsection 4.3.19). If a recorder output is being used for control, that output is not available as an alarm and the prompts will not appear.

Procedure

The procedure for displaying and changing the alarm setpoints is listed in Table 4-31.

Step Operation **Press** Action/Result 1 Access the Alarm Set Until you see: **SET** Upper Display Up group UP SET Lower Display **ALARMS** 2 Access the Alarm Until you display the desired alarm setpoint and its Setpoint Values value. Their order of appearance is shown below. **FUNC Upper Display** The alarm setpoint value Lower Display **A1S1 VA =** (Alarm 1, Setpoint 1 value) A1S2 VA = (Alarm 1, Setpoint 2 value) **A2S1 VA =** (Alarm 2, Setpoint 1 value) A2S2 VA = (Alarm 2, Setpoint 2 value) Change any alarm setpoint value you select in the upper display. 3 Return to normal Returns to normal operation. operation **DISP**

Table 4-31 Procedure for Displaying or Changing the Alarm Setpoints

4.5.2.5 Selecting Factory or Field Calibration Values

Introduction

Recorders are calibrated at the factory. The calibration values for each pen channel are stored on the printed circuit assembly associated with the pen. In addition, provision is made for the storage of field calibration values. The procedure for calibrating an input is provided in *Section 5 – Input and Output Calibration for Recorder with Display*. Entering field calibration values does not affect the stored factory calibration.

The "LD CAL" parameter in the input set up group for each pen channel permits you to specify whether factory or field calibration values are to be used by the recorder.

Procedure

Follow the procedure in Table 4-32 to select factory or field calibration values.

ATTENTION

If you change the type of input used by the recorder, you must change the setting of the "IN TYP" parameter in the input set up group (see Subsection 4.3.7). Changing the input type also requires changing the settings of hardware switches at SW6 (see Subsection 4.3.5.2).

Press Step Action 1 Select the desired input (indicator INP 1 or INP 2). **FUNC** 2 Until you see: SET Upper Display UP SET Lower Display INPUT Until you see: 3 **FUNC** Upper Present value (FAC or FLD) Lower LD CAL 4 Select FAC (factory) or FLD (field). ATTENTION Until field calibration has been done. FLD uses the same calibration values as FAC. When field calibration is performed, the value of LD CAL is automatically set to FLD at the completion of the field calibration operation. 5 Be sure the correct sensor is connected to the input terminals and resume normal operation.

Table 4-32 Procedure for Selecting Factory or Field Calibration Values

4.5.2.6 Resetting the Totalizer

Introduction

The models having a display and keypad are available with an optional totalizer to calculate and display the total flow volume as measured by the pen channel's input. The displayed value is six digits with a configurable scale factor. The scale factor is displayed as "En", where n is 10^n . For example:

- If the display reads "189 E0", then the totalized value since last reset is 189×10^{0} or 189.
- If the display reads "189 E3", then the totalized value since last reset is 189×10^3 or 189,000.
- If the display reads "189" E8", then the totalized value since the last reset is 189 x 10⁸ or 18,900,000,000.

The value of the totalizer set up group parameter "RSTABL" (resettable) determines whether and how the totalizer can be reset. If RSTABL = KEY, then the totalizer can be reset using the procedure in Table 4-33. If RSTABL is set to REM1 or REM2, the totalizer will be reset by Digital Input 1 or Digital Input 2, respectively.

Reset procedure

Follow the procedure in Table 4-33 to reset the totalizer (return value to 0).

Action/Result Step **Press** 1 Select channel. **FUNC** 2 Upper Display SET SETUP UP Lower Display If "TOTAL" doesn't appear or prompt access until you see TOTAL is declined, check "LOCK" configuration. 3 You will see: **FUNC** Upper Display NO Lower Display RESET 4 You will see: Upper Display YES Lower Display RESET 5 The totalizer will reset to zero. **FUNC** 6 The recorder will return to the same state it was in before configuration (set up) mode was entered. DISP The value of the RESET parameter will automatically be returned to NO after the reset operation.

Table 4-33 Procedure for Resetting Totalizer

4.5.2.7 Starting the Timer

Introduction

The DR4300 is available with an optional timer. This timer can be configured to be started by Alarm 1 or the keypad. (If the recorder supports digital inputs, one can be used to trigger the timer. This remote switch is independent of whether the timer is configured to start with the alarm or the keypad.)

Once the timer has been started, it cannot be stopped with the Increment and Decrement keys (see Step 3 below).

At the end of timer period Relay 2 will be energized, and remain energized until the timer is reset.

- If the timer set up group parameter START = KEY, then restarting the timer will involve pushing the Increment or Decrement key twice while the timer is displayed: once to reset the timer and deenergize Relay 2, and the second to start the timer.
- If the timer set up group START = AL1, then when Alarm 1 toggles (goes inactive, then active again) the timer is reset and restarted. When the timer is configured to start via Alarm 1, the timer can be reset (but not restarted) with the Increment or Decrement key. If the Alarm 1 relay is still energized when you reset the timer with the key, then the timer will be restarted immediately.

Procedure

Use the procedure in Table 4-34 to start the timer.

Step **Press** Action/Result 1 □ n.nn where n.nn is: **DISP** 0.00 if the timer is configured to show elapsed time, or until you see · the hours and minutes set on the timer if it is configured to show time remaining. 2 You will see the "clock hand" start to move: counterclockwise if the timer is configured to show elapsed time, or clockwise if the timer is configured to show time remaining. After a minute, the time indication will change. 3 The timer cannot be stopped with the Increment or Decrement key. To stop the timer go into the timer set up group and disable the timer.

Table 4-34 Procedure for Starting Timer

4.5.2.8 Resetting the Limit Controller

Introduction

The DR4300 is available as a limit controller. On each pen channel's printed circuit assembly Relay 1 is used for limit control. When the recorder detects that the input has exceeded the limit (or fallen below the limit, depending on how the unit is configured) the controller goes to the limit state: Relay 1 is **de-energized**.

Limit controller operator interface

The operator interface on a limit controller is the same as that of other models having a display and keypad. The MAN/AUTO/RESET key functions as a reset only. Manual and Auto mode do not apply to the limit controller.

When the recorder's controller goes to the limit state (relay de-energized), the operator will be alerted to the limit state by a message on the bottom line of the display.

- If the input that triggered the limit state is on the pen channel being displayed, the message will be "LIMIT".
- If the input that triggered the limit state is on the other pen channel, the message will be "Pn ERR" (where n is the limit state's pen channel). Pressing the "FUNC" key to switch channels will display the "LIMIT" message.

Reset procedure

Follow the procedure in Table 4-35 to reset the limit controller (take it out of the limit state).

Table 4-35 Procedure for Resetting Limit Controller

Step	Press	Action
1		Correct the cause of the limit state.
2	FUNC	Select the desired input (indicator INP 1 or INP 2).
3	MAN AUTO RESET	Press the RESET key.* The limit controller will resume normal operation, monitoring the value of the input and comparing it to the configured limit value.

^{*} This refers to the MAN/AUTO/RESET key on the keypad, **NOT** the reset switch SW2 on the printed circuit assembly for the pen channel.

The Limit Controller may also be reset remotely; see XRSET function in Subsection 4.3.22.

Output LED is on when relay is energized (not in limit).

5. Input and Output Calibration for Recorder with Display

5.1 Overview

Introduction

This section explains how to field calibrate analog inputs, as well as a 4 to 20 mA current output for a model having a display and keypad.

Because the recorder stores both factory and field calibration values for inputs in memory, you can easily select either factory or field calibration values for use by the recorder using the procedure given in Subsection 4.5.2.5.

To calibrate an input:

- Determine the minimum and maximum range values to be used for calibration (see Subsection 5.2).
- Prepare to calibrate (see Subsection 5.3).
- Set up and wire the input for calibration (see Subsection 5.4).
- Use the parameters in the calibration set up group to store field calibration values in the recorder's memory (see Subsection 5.5).

What's in this section?

The following is a list of the topics covered in this section.

Торіс		
5.1 Overview	141	
5.2 Input Calibration Minimum and Maximum Range Values	142	
5.3 Input Calibration Preliminary Information	144	
5.4 Input Calibration Set Up and Wiring		
5.5 Input Calibration Procedure	151	
5.6 Current Output Calibration	153	



WARNING—SHOCK HAZARD



INPUT CALIBRATION MAY REQUIRE ACCESS TO HAZARDOUS LIVE CIRCUITS, AND SHOULD ONLY BE PERFORMED BY QUALIFIED SERVICE PERSONNEL. MORE THAN ONE SWITCH MAY BE REQUIRED TO DE-ENERGIZE UNIT BEFORE CALIBRATION.

5.2 Input Calibration Minimum and Maximum Range Values

Minimum and maximum range values

You should calibrate the recorder for the minimum (0 %) and maximum (100 %) range values of your particular sensor. If your recorder has two (pens) inputs, calibrate each input separately.

Make sure the correct input is on display INP1 or INP2; use the FUNC key to select the input.

Select the voltage or resistance equivalent for 0 % and 100 % range values from Table 5-1. Use these values when calibrating your recorder.

Table 5-1 Voltage and Resistance Equivalents for 0 % and 100 % Range Values

Sensor Type PV Input Range		Range Values*			
Thermocouples	°F	°C	0 %	68 °F/20 °C	100 %
В	105 to 3300	41 to 1816	0 mV		13.769 mV
E	-454 to 1832	-270 to 1000	−9.835 mV	1.192 mV	76.373 mV
E (low)	–200 to 1100	-129 to 593	−6.472 mV		44.555 mV
J	0 to 1600	-18 to 871	–0.886 mV	1.019 mV	50.060 mV
J (low)	20 to 770	–7 to 410	-0.334 mV		22.400 mV
К	-320 to 2500	-196 to 1371	–5.822 mV	0.798 mV	54.856 mV
K (low)	–20 to 1000	–29 to 538	–1.114 mV		22.255 mV
Ni-Ni-Moly	32 to 2500	0 to 1371	-0.000 mV	0.755 mV	71.773 mV
Nicrosil-Nisil	0 to 2372	-17.8 to 1300	-0.461 mV	0.525 mV	47.513 mV
R	0 to 3100	-18 to 1704	-0.090 mV	0.111 mV	20.281 mV
S	0 to 3100	-18 to 1704	–0.092 mV	0.113 mV	17.998 mV
Т	-420 to 700	-251 to 371	–6.187 mV	0.789 mV	19.097 mV
T (low)	-200 to 600	-129 to 316	-4.149 mV		15.771 mV
W5W26	0 to 4200	-18 to 2315	-0.234 mV	0.273 mV	37.075 mV
RTD					
100 Ω ** 100 Ω (low)** 100 Ω (T)***	-300 to 900 -130 to 392 -238 to 482	-184 to 482 -90 to 200 -150 to 250	25.18 Ω 64.30 Ω 38.79 Ω		274.96 $Ω$ 175.84 $Ω$ 195.57 $Ω$
Milliamps	0 mA to	20 mA	0 mA		20 mA
	4 mA to 20 mA		4 mA		20 mA
Millivolts	0 mV to	10 mV	0 mV		10 mV
	0 mV to	100 mV	0 mV		100 mV
	0 mV to 200 mV		0 mV		200 mV
Volts	0 V to	o 1 V	0 V		1 V
	0 V to 2 V		0 V]	2 V
	1 V to 5 V		1 V	1	5 V
	0 V to 5 V		0 V]	5 V
	0 V to	10 V	0 V	1	10 V
	2 V to	10 V	2 V]	10 V

^{*}Range values for thermocouples are based on a cold junction temperature of 32 $^{\circ}$ F (0 $^{\circ}$ C). These values must be adjusted for the actual cold junction temperature when using the ambient temperature method for calibrating thermocouple inputs.

^{**} IEC Alpha = 0.00385

^{***} Alpha = 0.00391

5.3 Input Calibration Preliminary Information

Equipment needed

Table 5-2 lists the equipment required to calibrate various types of inputs. You will also need a medium size bladed screwdriver for general use and a small bladed screwdriver for use with the screws on the connector plugs.

Table 5-2 Equipment Needed for Calibration

Type of Input	Equipment Needed
Thermocouple Inputs	A compensated calibrator with ± 0.02 % accuracy.
(Compensated Calibrator)	Thermocouple extension wire that corresponds with the type of thermocouple that will be used with the recorder input.
Thermocouple Inputs (Ice Bath)	A calibrating device with ± 0.02 % accuracy for use as a signal source such as a millivolt source.
	Thermocouple extension wire that corresponds with the type of thermocouple that will be used with the recorder input.
	Two insulated copper leads for connecting the thermocouple extension wire from the ice baths to the precision calibrator.
	Two containers of crushed ice, or an ice point reference.
RTD (Resistance Temperature Detector)	A resistance decade box, with ± 0.02 % accuracy, capable of providing stepped resistance values over a minimum range of 0 ohms to 1400 ohms with a resolution of 0.01 ohm.
	Three insulated copper leads for connecting the decade box to the recorder.
Milliamp, Millivolt, and Volts	A calibrating device with ± 0.02 % accuracy for use as a signal source.
Inputs	Two insulated copper leads for connecting the calibrator to the recorder.

Disconnect the field wiring

Depending on which input (1 or 2) you plan to calibrate, tag and disconnect any field wiring connected to the input terminals on the printed circuit assembly for the appropriate pen channel. Refer to Figure 5-1 and follow the procedure in Table 5-3.

Table 5-3 Disconnect the Field Wiring

Step	Action		
1	Remove the power from the recorder, open the door on the recorder, and swing the chart plate out.		
2	Depending on the input (1 or 2) you are going to calibrate, disconnect the input connections from terminal block TB2 on the right edge of the applicable printed circuit assembly. See Figure 5-1 for the location of the circuit boards and input connectors.		

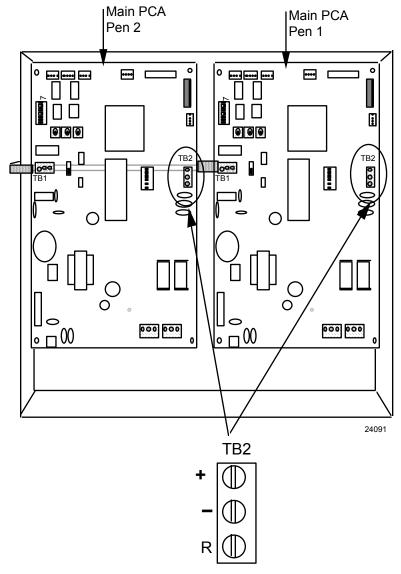


Figure 5-1 Location of the Input Connections on the Input Boards

5.4 Input Calibration Set Up and Wiring

5.4.1 General Calibration Set Up

DIP switch settings

Before starting the calibration activity, check that the input switches SW6 on the applicable printed circuit assembly (pen 1 or pen 2) are set correctly for the type of sensor being calibrated. (See Section 4 – Configuration, Startup, and Operation of Recorder With Display.)

General set up procedure

Table 5-4 lists the general set up procedure for all methods of calibration. Do this procedure and then refer to the set up procedure and diagram specific to your input type.

Table 5-4 General Calibration Set Up Procedure

Step	Action		
1	Set up and connect the calibrator to the input terminals for the applicable printed circuit assembly in your recorder according to the type of input sensor being used. Refer to the following figures for corresponding set-up diagrams:		
	Figure 5-2 Calibration Set Up Diagram for Thermocouple Inputs Using a Compensated Calibrator		
	Figure 5-3 Calibration Set Up Diagram for Thermocouple Inputs Using an Ice Bath		
	Figure 5-4 Calibration Set Up Diagram for RTD Inputs		
	Figure 5-5 Calibration Set Up Diagram for Millivolts, Volts, and Milliamps Inputs.		
2	Route leads (for example: copper leads or thermocouple extension wires) through a conduit hole in the recorder case so that you will be able to close the chart plate.		
3	Close the chart plate after you have completed the applicable calibration set up.		

5.4.2 Thermocouple Inputs Using a Compensated Calibrator

Refer to Figure 5-2 and wire the recorder according to the procedure given in Table 5-5.

Table 5-5 Set Up Wiring Procedure for Thermocouple Inputs Using a Compensated Calibrator

Step	Action		
1	Connect the thermocouple extension wire to the calibration source (see Figure 5-2).		
2	Connect the other end of the thermocouple extension wires to the TB2 terminals on the printed circuit assembly for the input channel being calibrated.		

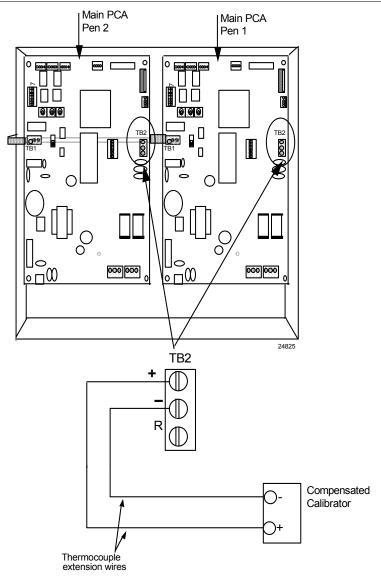


Figure 5-2 Calibration Set Up Diagram for Thermocouple Inputs Using a Compensated Calibrator

5.4.3 Thermocouple Inputs Using an Ice Bath or Ice Point Reference

Refer to Figure 5-3 and wire the recorder according to the procedure given in Table 5-6.

Table 5-6 Set Up Wiring Procedure for Thermocouple Inputs Using an Ice Bath

Step	Action		
1	Connect the copper leads to the calibration source (see Figure 5-3).		
2	Connect a length of thermocouple extension wire to the end of each copper lead and insert the junction points into the ice bath.		
3	Connect the other end of the thermocouple extension wires to the TB2 terminals on the printed circuit assembly for the input channel being calibrated.		

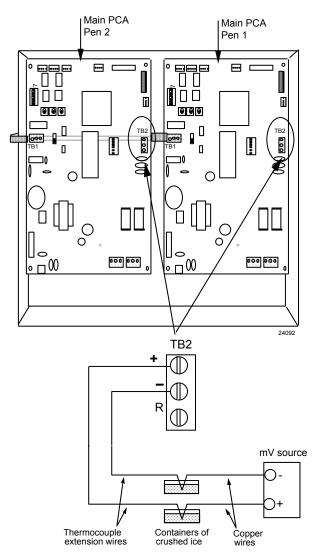


Figure 5-3 Calibration Set Up Diagram for Thermocouple Inputs Using an Ice Bath

5.4.4 RTD (Resistance Temperature Detector) Inputs

Refer to Figure 5-4 and wire the recorder according to the procedure given in Table 5-7.

Table 5-7 Set Up Wiring Procedure for Calibrating RTD Inputs

Step	Action	
1	Connect the copper wire to the calibration source (see Table 5-3).	
2	Connect the other end of the copper wire to the TB2 terminals on the printed circuit assembly for the input channel being calibrated.	

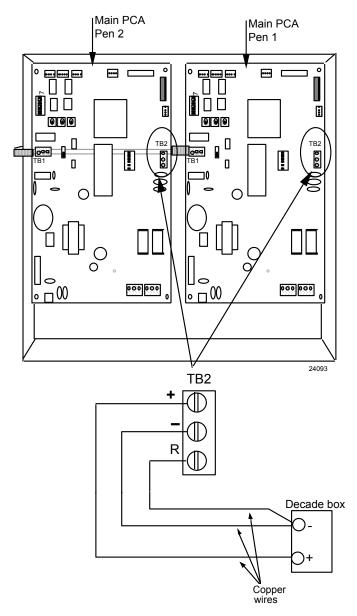


Figure 5-4 Calibration Set Up Diagram for RTD Inputs

Millivolts, Volts and Milliamps inputs

Refer to Figure 5-5 and wire the recorder according to the procedure given in Table 5-8.

Table 5-8 Set Up Wiring Procedure for Calibrating Millivolts, Volts, and Milliamps Inputs

Step	Action	
1	Connect the copper wire to the calibration source (see Figure 5-5).	
2	Connect the other end of the copper wire to the TB2 terminals on the printed circuit assembly for the input channel being calibrated.	

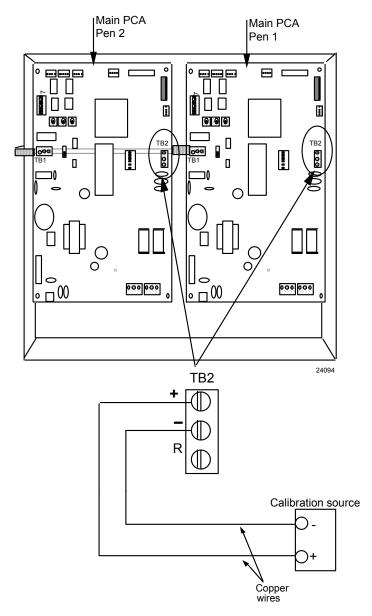


Figure 5-5 Calibration Set Up Diagram for Millivolts, Volts, and Milliamps Inputs

5.5 Input Calibration Procedure

Introduction

Before performing this procedure, be sure the recorder is wired for calibration as described in Subsection 5.4. Apply power and allow the recorder to warm up for 30 minutes before you calibrate.

Make sure "LOCK" is set to "NONE" (see Section 4 - Configuration, Startup and Operation of Recorder with Display).

ATTENTION

For *Milliamp inputs*, be sure the current source is at zero before switching on the calibrator. Do not switch the calibrator on/off while it is connected to the recorder's input. Failure to observe this precaution could result in damage to input circuits.

Calibration procedure sequence

The calibration procedure sequence for all inputs is listed in Table 5-9. The calibration procedure for inputs 1 and 2 is identical. The displays indicate the input number.

Press the FUNC key to change display as required (INP1 or INP2).

Table 5-9 Input Calibration Procedure Sequence

Step	Description	Press	Action/Result
1	Enter Calibration Mode	SET UP until you see	Upper Display CAL Lower Display INPUT If "CAL" doesn't appear or prompt access is declined,
			check "LOCK" configuration.
		FUNC	You will see: Upper Display DIS
			Lower Display CAL IN
			The calibration sequence is enabled and you will see: Upper Display BEGIN Lower Display CAL IN

Step	Description	Press	Action/Result
2	Calibrate 0 %	FUNC	You will see: Upper Display APLY Lower Display INZERO • Adjust your calibration device to an output signal equal to the 0 % range value for your particular input type. See Table 5-1 for Voltage or Resistance equivalents. • Wait 60 seconds, then go to the next step.
3	Calibrate 100 %	FUNC	You will see: Upper Display APLY Lower Display INSPAN Adjust your calibration device to an output signal equal to the 100 % range value for your particular input type (see Table 5-1 for voltage or resistance equivalents). Wait 60 seconds, then go to next step.
4	Exit the Calibration Mode	FUNC	The recorder stores the calibration constants. The value of input set up group parameter "LD CAL" is set to "FLD" (field). The recorder begins to use the new field calibration values for this channel. Repeat this procedure for the other pen, if required.

5.6 Current Output Calibration

Introduction

Calibrate the recorder so that the output provides the required amount of current over the desired range. The recorder can provide an output current range of from 0 to 20 milliamperes and can be calibrated at 4 mA for 0 % of output and 20 mA for 100 % of output, or at any other values between 0 mA and 20 mA.

Equipment needed

You will need a standard shop type milliammeter, with whatever accuracy is required, capable of measuring 0 milliamps to 20 milliamps.

Calibrator connections

Refer to Figure 5-6 and wire the recorder according to the procedure given in Table 5-10.

Table 5-10 Set Up Wiring Procedure for Current Proportional Output

Step	Action	
1	With the power off, door open, and the chart plate swung out; tag and disconnect field wiring from the terminals on terminal block TB5 on the printed circuit assembly for pen 1 or pen 2 as applicable (see Figure 5-6).	
2	Observing polarity, connect a milliammeter's leads to TB5 terminals.	
3	Close the chart plate: apply power and allow the recorder to warm up 15 minutes before you calibrate.	

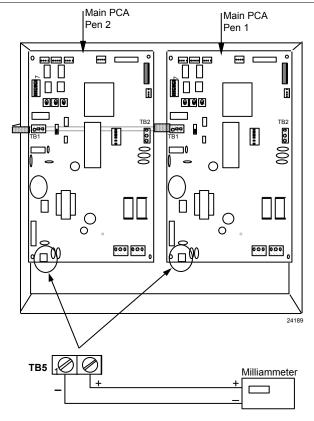


Figure 5-6 Test Equipment Connections for Calibrating Current Output

Procedure

The procedure for calibrating the current proportional output is listed in Table 5-11. Make sure "LOCK" in the Set Up group is set to "NONE."

For display recorders with 2 pens, be sure the correct input is on display—INP 1 or INP 2 indicator is lit.

Press FUNC key to change input on display to agree with the control loop output to be calibrated.

Table 5-11 Procedure for Calibrating Current Output

Step	Description	Press	Action/Result
1	Enter Calibration Mode	SET UP until you see	Upper Display CAL Lower Display CURENT If "CAL" doesn't appear or prompt access is denied, check the "LOCK" configuration.
2	Calibrate 0 %	FUNC or	You will see: Upper Display a value (approximately 365) Lower Display ZERO Until the desired 0 % output is read on the milliammeter. Use the values shown below depending on the action of your recorder.
3	Calibrate 100 %	FUNC	Stores the 0 % value and, you will see: Upper Display a value (approximately 1800) Lower Display SPAN Until the desired 100 % output is read on the milliammeter. Use the values shown below depending on the action of your recorder.

Step	Description	Press	Action/Result
4	Exit Calibration Mode	FUNC	The recorder stores the span value. Repeat procedure for the other pen. Remove power from recorder and disconnect the milliammeter and connect output wiring.
		or SET UP	To exit the calibration mode.

6. Routine Maintenance

6.1 Overview

Introduction

Unless the recorder's location will expose it to dust, the DR4300 recorder does not require any periodic maintenance except the replacement of the chart and ink cartridges.

This section provides instructions for replacing the chart and ink cartridge. It also contains tips for maximizing the life of the pens, including recommended practices if the recorder is used in a dusty area.

ATTENTION

Humidity can affect the size of the chart, resulting in the pen being offset from the proper chart increment. Instructions for aligning the pens are provided in Section 7 – Troubleshooting and Pen Alignment for Recorder Without Display and Section 8 – Troubleshooting and Pen Alignment for Recorder With Display.

What's in this section?

The following is a list of the topics covered in this section.

Topic	See Page
6.1 Overview	157
6.2 Replacing the Chart	158
6.3 Replacing the Ink Cartridge	159
6.4 Maximizing Pen Life	160

6.2 Replacing the Chart

Procedure

Refer to Figure 6-1 and follow the procedure in Table 6-1 to replace the chart.

Table 6-1 Procedure for Replacing the Chart

Step	Action
1	Turn off the power to the recorder, then open the door.
2	Pull up on the pen lifter to raise the pen(s) from the chart plate.
3	Lift the chart from the hub, and slide it from under the pen(s) to remove it from the chart plate.
4	Slip the new chart under the pen lifter, pens and time index; and press the chart into place over the chart hub.
5	Turn the chart until the desired time line on the chart is aligned with the time index on the chart plate and pen 1 before closing the locking clip on the hub. Push down on the lifter to return the pen(s) to the chart. CAUTION: Do not try to rotate the hub
	CAO HON. DO HOL ITY to Totate the Hub
6	Close the door and apply power.

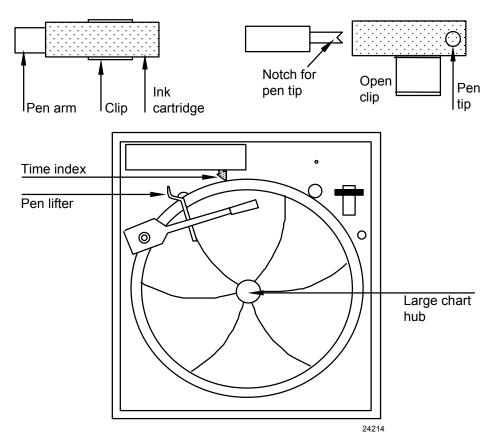


Figure 6-1 Replacing the Chart and Ink Cartridge

6.3 Replacing the Ink Cartridge

Procedure

Refer to Figure 6-1 and follow the procedure in Table 6-2 to replace the ink cartridge.

Table 6-2 Procedure for Replacing the Ink Cartridge

Step	Action	
1	Remove the power from the recorder, then open the door.	
2	Pull up on the pen lifter to raise the pen(s) from the chart plate.	
ATTENTION	Be careful not to move the pen arm while removing and installing the ink cartridge.	
3	Unclip and remove the purple (pen 1) or red (pen 2) ink cartridge from the pen arm.	
4	Remove the protective cap from the pen tip on the new cartridge and open its clip. (If you plan to store or ship the recorder, save the protective cap.)	
5	Slide the new cartridge onto the pen arm so that its tip fits into the notch at the end of the pen arm and close the clip to secure the cartridge to the pen arm.	
6	Push down the pen lifter to return the pen tip to the chart.	
7	Close the door and apply power.	

6.4 Maximizing Pen Life

Steps for maximizing pen life

Table 6-3 lists steps that will help maximize the life of recorder pens.

Table 6-3 Maximizing Pen Life

Step	Action
1	Store the chart paper in a cool, clean dry place where the temperature does not exceed 40 °C (104 °F) and the humidity is below 65 % RH.
2	Do not expose the pen tip and chart paper to abrasive chemicals or dust that cause excessive pen wear.
3	If the recorder is used in a dusty atmosphere, provide a positive 'clean air purge' to minimize dust particle accumulation on the chart paper.
4	Periodically clean the pen arm using a cotton swab dipped in alcohol. This is more important when the recorder is located in a dusty environment and no 'clean air purge' is used.
5	Never let the pen tip ride on the chart plate when the paper is not present. Use the pen lifter to raise the arm when changing the paper.
6	Keep the door closed while recording.
7	Always cover the pen arm tip with its protective cap when storing or shipping the recorder.
8	Be sure that the chart paper lays flat against the chart plate. Any ripple in the paper will cause light pen printing.
9	Be sure the chart hub assembly is pushed onto the motor shaft so that it is flush with the chart plate.

7. Troubleshooting and Pen Alignment of Basic Recorder without Display

7.1 Overview

Introduction

This section explains how to use observable symptoms of failure to troubleshoot the recorder models that do not have a display.

- To reduce recorder down-time, this section enables tracing trouble to a printed circuit assembly (PCA)/hardware assembly level rather than to an individual component.
- While troubleshooting is straightforward, we recommend that only trained service technicians repair the recorder. SEE THE SHOCK HAZARD WARNING BELOW.

This section also includes instructions for aligning the pens.

What's in this section?

The following is a list of the topics covered in this section.

Topic	See Page
7.1 Overview	161
7.2 Observable Symptoms of Failure	163
7.3 Troubleshooting Procedures	164
7.4 Alignment of Pen at Zero and 100 %	169



WARNING—SHOCK HAZARD



TROUBLESHOOTING MAY REQUIRE ACCESS TO HAZARDOUS LIVE CIRCUITS, AND SHOULD ONLY BE PERFORMED BY QUALIFIED SERVICE PERSONNEL. MORE THAN ONE SWITCH MAY BE REQUIRED TO DE-ENERGIZE UNIT BEFORE SERVICING.

Types of problems

Instrument performance can be adversely affected by installation and application problems as well as by hardware problems. We recommend that you investigate the problems in the order listed below, and use the information in this section to solve them. If replacement of any part is required, follow the procedures in Section 9 – Replacing Hardware Assemblies.

- Installation related problems
- Application related problems
- Hardware and software related problems

Installation related problems

Read Section 2 – Installation to make sure the DR4300 has been properly installed. Document 51-52-05-01 How to Apply Digital Instrumentation in Severe Electrical Noise Environments can provide additional relevant information

ATTENTION

System noise induced into the recorder may result in transient abnormalities in performance.

If system noise is suspected, completely isolate the recorder from all field wiring. Use calibration sources to simulate PV and check all recorder and control functions; that is, pen functions, chart trace, output, alarms, etc.

Application related problems

Review the application of the recorder; then, if necessary, direct your questions to the local sales office.

Hardware and software related problems

Observe the symptoms to identify typical failures which may occur in the recorder. Follow the troubleshooting procedures to correct the problems.

7.2 Observable Symptoms of Failure

Introduction

If erratic operation is observed, refer to the failure symptoms in Table 7-1, then follow the appropriate troubleshooting procedure in Subection 7.3.

Symptoms

Compare your recorder's symptoms with those shown in Table 7-1 and refer to the indicated subsection for the appropriate troubleshooting procedure.

Table 7-1 Observable Symptoms of Failure

Symptom	See Subsection
Recorder will not operate.	7.3.2
Recorder operation is normal but pen trace is incorrect.	7.3.3
Chart rotates at wrong speed or will not rotate (pen indication correct).	7.3.4
Pen remains at high end of range when input signal is low.	7.3.5

7.3 Troubleshooting Procedures

7.3.1 Overview

Introduction

The troubleshooting procedures for the observable symptoms of failure are presented in the same order as they appear in Table 7-1. Each procedure includes what to do if you have that particular problem, as well as instructions for accomplishing the task, or a cross-reference to instructions elsewhere in the manual.

Equipment needed

You will need a voltmeter to troubleshoot the symptoms listed in the tables that follow.

Safety precautions

Exercise appropriate safety precautions when troubleshooting the recorder operation.



TROUBLESHOOTING MAY REQUIRE ACCESS TO HAZARDOUS LIVE CIRCUITS, AND SHOULD ONLY BE PERFORMED BY QUALIFIED SERVICE PERSONNEL. MORE THAN ONE SWITCH MAY BE REQUIRED TO DE-ENERGIZE UNIT BEFORE SERVICING.

7.3.2 Recorder Failure Troubleshooting

Procedure

Table 7-2 explains how to troubleshoot recorder failure symptoms.

Table 7-2 Troubleshooting Recorder Failure Symptoms

Step	What to do	How to do it or where to find the instructions
1	Check the supply voltage.	Measure the line voltage across the line and neutral connections at TB1 on the printed circuit assembly (PCA) on the right (for pen 1).
2	Check the connections to TB1 on the pen 1 PCA.	Refer to ac wiring procedures in Section 2 – Installation.
3	Check the system for brown-outs, heavy load switching, etc.; and conformance to installation instructions.	Refer to Section 2 – Installation.
4	Replace the PCA for pen 1.	Refer to the replacement procedures in Section 9 – Replacing Hardware Assemblies.

7.3.3 Pen Trace Troubleshooting

Procedure

Table 7-3 explains how to troubleshoot a pen trace problem.

Table 7-3 Troubleshooting Pen Trace Failure Symptoms

Step	What to do	How to do it or where to find the instructions
1	Check the ink cartridge for proper installation.	Reposition or replace the ink cartridge as described in Section 6 – Routine Maintenance.
		If the pen arm is severely warped, replace the pen arm as described in Section 9 – Replacing Hardware Assemblies.
2	Check that the chart agrees with the actuation type and chart set up.	Replace wrong chart with correct chart. Refer to Section 3 – Configuration, Startup, and Operation of Recorder without Display for instructions for viewing the configuration.
		See Section 6 – Routine Maintenance for instructions for replacing the chart.
3	Check the pen alignment.	Follow the procedure in Subsection 7.4.
4	Look at printed circuit assembly (PCA) for the pen to see if the red* LED is lit. This LED is lit when the PCA failed a self- diagnostic, or an out-of-range input has been detected. (Flashing green LED is OK, it indicates that the processor is	Press the reset switch SW2. The PCA will be initialized. If the problem was a software error, the error may be cleared by the reset.
	active.)	*For Recorders with a display, the red LED is used by an internal control signal and is <i>not</i> a fault indicator.
5	Check the sensor for the proper type and its ability to function.	Verify the input configuration data and operation of the sensor.
		Measure input signal at TB2 or apply calibration source to verify input signal.
6	Replace the servo plate assembly.	Refer to the replacement procedure in Section 9 - Replacing Hardware Assemblies.
7	Replace the printed circuit assembly for the pen with the problem.	Refer to the replacement procedure in Section 9 — Replacing Hardware Assemblies.

7.3.4 Chart Rotation Troubleshooting

Procedure

Table 7-4 explains how to troubleshoot a chart rotation problem.

Table 7-4 Troubleshooting Chart Rotation Failure Symptoms

Step	What to do	How to do it or where to find the instructions
1	Check the chart installation.	Turn the chart until the desired time line on the chart is aligned with the time index on the chart plate and pen 1 before closing the locking clip on the hub. Push down on the lifter to return the pen(s) to the chart.
		CAUTION: Do not try to rotate the hub
2	Check the settings of the configuration switches. Change settings if incorrect for application.	Refer to Section 3 – Configuration, Startup, and Operation of Recorder without Display.
3	Run the step test.	Refer to Section 3 – Configuration, Startup, and Operation of Recorder without Display (Subsection 3.3.3).
4	Check the motor cable plug connection at connector P3 on the printed circuit assembly for pen 1.	Power down the recorder, then visually examine the plug and reseat it.
5	Replace the chart motor.	Refer to the replacement procedure in Section 9 - Replacing Hardware Assemblies.
6	Replace the printed circuit board for pen 1.	Refer to the replacement procedure in Section 9 - Replacing Hardware Assemblies.

7.3.5 Troubleshooting Erratic Pen Movement

Procedure

Table 7-5 explains what to do if the pen remains at the high end of range when the input signal is low.

Table 7-5 Troubleshooting Erratic Pen Movement Symptoms

Step	What to do	How to do it or where to find the instructions
1	Check the sensor and lead wires for continuity. Check the connections to TB2 on the printed circuit assembly for the pen with the problem.	Replace the sensor lead wires as needed. Tighten the connections.
2	Check the pen and input configuration data.	Refer to Section 3 – Configuration, Startup, and Operation of Recorder without Display.
3	Run step test.	Refer to Section 3 – Configuration, Startup, and Operation of Recorder without Display (Subsection 3.3.3).
4	Replace the servo plate assembly.	Refer to the replacement procedure in Section 9 — Replacing Hardware Assemblies.
5	Replace the printed circuit assembly for the pen having the problem.	Refer to the replacement procedure in Section 9 - Replacing Hardware Assemblies.

7.4 Alignment of Pen at Zero and 100 %

Procedure

You can align the pens to the zero and 100 % positions on the chart using the procedure in Table 7-6. If humidity causes the chart to change size, repeat the procedure as needed.

WARNING



SHOCK HAZARD

When the unit is powered a potentially lethal shock hazard exists at the AC line connections at TB1 on each printed circuit assembly (behing the chart plate). Make sure the unit power is disconnected before starting the procedure. More than one switch may be required to de-energize the recorder.

Failure to observe this precaution can result in exposure to a potentially lethal shock hazard.

Table 7-6 Procedure for Pen Alignment

Step	Action	Graphic
1	Place run switch SW5 to the setup position (toward the top of the board) on the pen's PCA.	
		See Figure 3-1 for location of SW5 (to the right of TB1).
2	Press SW3 and SW4 simultaneously and release them.	See Figure 3-1 for location of SW3 and SW4.
	The pen will move downscale toward the hub and be positioned at the previously set 0 % point on the chart within approximately 10 seconds.	SVV4.
	n tip is greatly out of position, follow Steps 3 through 7. (Unl will not be necessary.) If pen position requires only minor a	
3	Turn off the power to the recorder before the pen begins to move upscale (approximately 10 seconds).	
4	To place the pen tips in approximately the correct position, loosen the screw holding the pen 1 arm to the servo shaft and move the pen arm to access the locking screw for the pen 2 arm (if applicable).	
5	Align the tip of pen 2 with the zero line on the chart and tighten the locking screw.	
6	Align the tip of pen 1 with the zero line on the chart and tighten the locking screw.	
7	Turn on the power and repeat Step 2.	
8	To fine-tune the alignment of a pen, press the raise switch SW4 or lower switch SW3 on its PCA until the pen tip is aligned with the zero line on the chart.	See Figure 3-1 for the location of SW3 and SW4.
	Approximately 10 seconds after the last press of the raise or lower switch the pen will move to the previously set 100 % point.	

Step	Action	Graphic
9	To fine-tune the alignment of the pen, press the raise switch SW4 or lower switch SW3 until the pen tip is aligned with the 100 % line on the chart.	See Figure 3-1 for the location of SW3 and SW4.
	Approximately 10 seconds after the last press of the raise or lower switch the pen will move downscale as described in Step 2.	
10	To exit the pen alignment cycle place SW5 to the run position (toward the bottom of the board). Pen will return to normal operation.	

8. Troubleshooting and Pen Alignment of Recorder with Display

8.1 Overview

Introduction

This section explains how to troubleshoot the recorder models having display and keypad. Troubleshooting uses self-diagnostic test results and error messages as well as some observable symptoms of failure.

- To reduce recorder down-time, this section enables tracing trouble to a printed circuit assembly (PCA)/hardware assembly level rather than to an individual component.
- While troubleshooting is straightforward, we recommend that only trained service technicians repair the recorder. SEE THE SHOCK HAZARD WARNING BELOW.

This section also includes instructions for aligning the pens

What's in this section?

The following is a list of the topics covered in this section.

Topic	See Page
8.1 Overview	171
8.2 Troubleshooting Aids	173
8.3 Self Diagnostics	174
8.4 Observable Symptoms of Failure	179
8.5 Troubleshooting Procedures	180
8.6 Alignment of Pen at Zero and Span	188



WARNING—SHOCK HAZARD



TROUBLESHOOTING MAY REQUIRE ACCESS TO HAZARDOUS LIVE CIRCUITS, AND SHOULD ONLY BE PERFORMED BY QUALIFIED SERVICE PERSONNEL. MORE THAN ONE SWITCH MAY BE REQUIRED TO DE-ENERGIZE UNIT BEFORE SERVICING.

Types of problems

Instrument performance can be adversely affected by installation and application problems as well as by hardware problems. We recommend that you investigate the problems in the order listed below, and use the information in this section to solve them. If replacement of any part is required, follow the procedures in Section 9 – Replacing Hardware Assemblies.

- Installation related problems
- · Application related problems
- Hardware and software related problems

Installation related problems

Read Section 2 – Installation to make sure the recorder has been properly installed. Document 51-52-05-01 How to Apply Digital Instrumentation in Severe Electrical Noise Environments can provide additional relevant information.

ATTENTION

System noise induced into the recorder will result in diagnostic error messages recurring. If the diagnostic error messages can be cleared, it indicates a "soft" failure and is probably noise related.

If system noise is suspected, completely isolate the recorder from all field wiring. Use calibration sources to simulate PV and check all recorder and control functions; that is, pen functions, chart trace, output, alarms, etc.

Application related problems

Review the application of the recorder; then, if necessary, direct your questions to the local sales office.

Hardware and software related problems

Use the troubleshooting error messages and observable symptoms to identify typical failures which may occur in the recorder. Follow the troubleshooting procedures to correct the problems.

8.2 Troubleshooting Aids

Self diagnostics

The software runs self-diagnostic tests to monitor the recorder's general state. Tests are run when the unit is powered up and as a background task during operation.

When tests run at power-up, the progress of the tests will be displayed as described in Subsection 8.3.1.

When the tests run in the background during normal operation, the display will not indicate the progress of the tests. However, if the recorder fails a test, an error message will appear on the lower line of the display as described in Subsection 8.3.4. Table 8-4 lists all the possible error messages, the reason for each, and how to correct the problem.

Observable symptoms of failure

Other failures may occur that deal with the power, pen functions, chart rotation, output, or alarms. If erratic operation is observed, refer to the failure symptoms in Table 8-5, then follow the appropriate troubleshooting procedure in Subsection 8.5.

Check Installation

If a set of symptoms still persists, refer to Section 2 – Installation and Section 4 – Configuration, Startup, and Operation of Recorder with Display to ensure that the recorder has been installed and set up properly.

Determine the software version before calling for technical support

Before calling for technical support, follow the procedure in Table 8-1 to determine the version of the software in the recorder. This version information will assist the support team in diagnosing the problem.

Step Operation **Press** Action/Result 1 Select STATUS Until you see: SET Set Up Group Upper Display UP READ Lower Display STATUS 2 Read the software Until you see: version **FUNC** Upper Display Software version Lower Display Number VERSION Please give this number to the Customer Support person assisting you.

Table 8-1 Procedure for Identifying the Software Version

8.3 Self Diagnostics

8.3.1 Power up tests

Tests run automatically

When the recorder is powered-up, self-diagnostics are run by the software.

As the tests in Table 8-2 are run, the display indicates whether the tests were passed or failed as described below.

Table 8-2 Power-Up Diagnostic Tests

Lower Display	Upper Display
RAMTST	PASS or FAIL
CFGTST (configuration checksum)	PASS or FAIL
CALTST (working calibration)	PASS or FAIL

Status of tests displayed

As the tests are run, the lower line of the display shows which test is running. The upper line of the display indicates the status. If any of these tests fail, "FAIL" appears momentarily in the upper display, then a display test is run. The display changes to show the value of the process variable on the top line, and the error message for the failed test on the second line.

In addition, if the control group parameter "CONTRL" has a value of "ENAB" when the test is failed, the message "FAILSF" (failsafe) will alternate with error message for the test, and the controller will be in manual mode. When the "FAILSF" message is displayed, it indicates that the recorder control output has been driven to the value assigned to the control group "FAILSF" parameter.

By default, when the recorder is powered up the display will be for pen 1. Therefore, when the power up tests run, the "PASS" and "FAIL" messages will apply only to the printed circuit assembly associated with pen 1. However, in a 2-pen recorder the tests will also be run on the printed circuit assembly for pen 2. If the pen 2 assembly fails one of the tests, the message "P2 ERR" will be displayed, along with any error messages from the pen 1 tests.

8.3.2 View Status of Tests

Procedure

The status of self-diagnostic tests can be viewed using the procedure in Table 8-3.

Note that "FAILSF" is not a test. When "FAILSF YES" is displayed, it is an indication that the recorder is using the value of the control set up group "FAILSF" parameter as the output value because the recorder failed a self-test, or because the recorder detected an input failure while the input set up parameter "BRNOUT" = "NONE".

See Table 8-4 for more information about self-diagnostics, and for recommended actions when a test fails.

Table 8-3 Procedure for Displaying the Results of Self-Diagnostics

Step	Operation	Press	Action/Result
1	Select STATUS set up Group	SET UP	Until you see: Upper Display READ Lower Display STATUS
2	Read the status tests results	FUNC	Until you see: Upper Display NO or YES YES indicates a failure - Successive presses of the FUNC key will display the results of the status tests (PASS or FAIL) in the following order: RAMTST CFGTST CALTST - Identify the problem and correct the failure as shown in Table 8-4.

8.3.3 Background Tests

Tests run automatically

During normal operation of the recorder, tests of the configuration and calibration run in the background. If the recorder fails one of the tests, the appropriate message will be displayed as described in Subsection 8.3.4.

8.3.4 Error Messages

All relevant messages are displayed

If the recorder fails one or more tests, the operator is alerted by the display of one or more messages.* One message is displayed at a time on the lower line of the display.

If the problem is with the pen channel input or printed circuit assembly for which real time values are currently on display, the appropriate error message for each failed test will be displayed. The display will continue to cycle through the messages until the test is passed.

If the failure is for the pen channel not on display, then a message will alert the operator to the existence of one or more error messages for the other pen. The message is "Pn ERR", where n is the number of the pen with errors not on display. Once the operator has toggled the display to the pen channel whose input or printed circuit assembly was the source of the error, the display will cycle through the appropriate error messages.

Error messages are listed in Table 8-4, along with the type of test to which each applies, the reason for the failure, and how to correct the problem.

ATTENTION

In addition to error messages, the recorder will display special status messages when optional features are active.

- If the lower display flashes "TUNING", the recorder is in the process of automatically determining tuning parameters using the Accutune II feature described in Appendix D.
- If the lower display flashes "RUN n" or "HOLD", the recorder is executing setpoint program "n" as
 described in Appendix C, and the run or hold action was initiated locally.
- If the lower display flashes "run n" or "hold", the recorder is executing setpoint program "n", and the run or hold action was initiated remotely.

If you are familiar with the operation of the recorder models without display, you are aware that in those models the red LED on the printed circuit assembly lights when the unit fails a self-diagnostic, or detects an out-of-range input. **The red LED has a different function in the models with display and keypad.** It is **not** an indication of a problem. In the models with display the red LED indicates that the display is currently interfacing with this PCA. Rely on the error messages to notify you of a problem with a recorder with a display. (The flashing green LED is an indication that the processor is active.)

Table 8-4 Error Messages

Lower Display Indication	Type of Test	Reason For Failure	How to Correct the Problem
CALERR	power-up background	The working calibration constants in the recorder are in error or corrupted in memory.	Use the procedure in Subsection 4.5.2.5 to switch between the set of calibration constants being used (factory or field) to the other type. Exit configuration mode. Next go back into configuration mode and change back to the original type of constants used (factory or field). This will overwrite the corrupted values in memory.
			Change the setting of the "IN TYP" parameter and exit configuration mode. Go back into configuration mode and change the "IN TYP" setting back to the correct type.
CFGERR	power-up background	Configuration data is in error.	Check all configuration parameter values for accuracy. (See Section 4 – Configuration, Startup, and Operation of Recorder with Display.)
			Make a change to configuration, then exit configuration, so the recorder will recalculate the checksum error.
EEFAIL	background	Unable to write to nonvolatile memory. Anytime you change a parameter and it is not accepted, you will see EE FAIL.	 Try to change something in configuration. Cycle the power. If problem persists, replace printed circuit assembly for the channel.
FAILSF	power-up background	This error message is displayed whenever the recorder is using the value of the control group "FAILSF" parameter as an output. For this to occur, the recorder must have control enabled (control group parameter "CONTRL" = "ENAB") when one or more of the following occur: • RAM test fails • Configuration test fails • Calibration test fails • Input parameter "BRNOUT" = "NONE" and the input fails.	1. Check the operation of the input sensor. 2. Run through STATUS check to determine the reason for the failure. • Press the SET UP key until STATUS appears in the lower display. • Press the FUNC key to see what tests pass or fail, then run through the STATUS codes a second time to see if the error cleared. • Correct according to the recommendations given in this table.

Lower Display Indication	Type of Test	Reason For Failure	How to Correct the Problem
INP FL	background	Recorder detects an input failure. Two consecutive failures of input 1 integration (for example, recorder cannot make analog to digital conversion.)	 Be sure the range and actuation are configured correctly. Check the input source. See input set up group in Section 4 – Configuration, Startup, and Operation of Recorder with Display and change the "IN TYP" or "LD CAL" to a different type. Enter it, loop through the status tests, then return the input type to the original one. Recalibrate if step 3 does not clear the error. Refer to Section 5 – Input and Output Calibration for Recorder with Display. Replace the printed circuit assembly for the pen.
INPRNG	background	Input out of range. The process input is outside the range limits.	 Make sure the range and actuation are configured properly. Check the input source. See Section 4 – Configuration, Startup, and Operation of Recorder with Display to restore the factory or field calibration, as applicable. Field calibrate using the procedure in Section 5 – Input and Output Calibration for Recorders with Display. Replace the printed circuit assembly for the pen.
P1 ERR P2 ERR	power-up background	Indicates that one or more error messages are active for the pen channel for which values are not on display. For example, if value of INP1 is on display, while the input for pen 2 fails, P2 ERR will be displayed. This alerts the operator to the need to switch the display to pen 2 to view the active error messages associated with that channel's input and printed circuit assembly.	Press the FUNC key to toggle to the other pen channel. Watch the display to see all error messages for the active channel. Follow the procedure in this table for each message displayed.
RAMTST	power-up	RAM failure	Cycle power or press the reset switch SW2 to see if the error clears. If error does not clear, replace the printed circuit assembly for the pen.

8.4 Observable Symptoms of Failure

Introduction

In addition to the error message prompts, there are observable symptoms of failure that can be identified by noting the erratic recorder functions.

Symptoms

Compare your recorder's symptoms with those shown in Table 8-5 and refer to the indicated subsection for the appropriate troubleshooting procedure.

Table 8-5 Observable Symptoms of Failure

Symptom	See Subsection
Recorder will not operate.	8.5.2
Recorder operation is normal but pen trace is incorrect.	8.5.3
Chart rotates at wrong speed or will not rotate (pen indication correct).	8.5.4
Pen remains at high end of range when input signal is low.	8.5.5
A key does not respond and/or a display does not light.	8.5.6
Displayed output does not agree with controller output.	8.5.6
External alarm function does not operate properly.	8.5.8
Digital input function does not operate properly.	8.5.9
Modbus communications are not successful.	8.5.10

8.5 Troubleshooting Procedures

8.5.1 Overview

Introduction

The troubleshooting procedures for the observable symptoms of failure are presented in the same order as they appear in Table 8-5. Each procedure includes what to do if you have that particular failure, as well as instructions for accomplishing the task, or a cross-reference to instructions elsewhere in the manual.

Equipment needed

You will need the following equipment in order to troubleshoot the symptoms listed in the tables that follow:

- DC Milliammeter mA DC
- Calibration sources T/c, mV, Volt, etc.
- Voltmeter

Safety precautions

Exercise appropriate safety precautions when troubleshooting the recorder operation.



WARNING—SHOCK HAZARD



TROUBLESHOOTING MAY REQUIRE ACCESS TO HAZARDOUS LIVE CIRCUITS, AND SHOULD ONLY BE PERFORMED BY QUALIFIED SERVICE PERSONNEL. MORE THAN ONE SWITCH MAY BE REQUIRED TO DE-ENERGIZE UNIT BEFORE SERVICING.

8.5.2 Recorder Failure Troubleshooting

Procedure

Table 8-6 explains how to troubleshoot recorder failure symptoms.

Table 8-6 Troubleshooting Recorder Failure Symptoms

Step	What to do	How to do it or where to find the instructions
1	Check the supply voltage.	Measure the line voltage across the line and neutral connections at TB1 on the printed circuit assembly (PCA) on the right (for pen 1).
2	Check the connections to TB1 on the pen 1 PCA.	Refer to ac wiring procedures in Section 2 – Installation.
3	Check the system for brown-outs, heavy load switching, etc.; and conformance to installation instructions.	Refer to Section 2 – Installation.
4	Replace the PCA for pen 1.	Refer to the replacement procedures in Section 9 - Replacing Hardware Assemblies.

8.5.3 Pen Trace Troubleshooting

Procedure

Table 8-7 explains how to troubleshoot a problem with the pen trace not matching the (correct) displayed value, assuming that the pen channel is configured to trace the input value.

Table 8-7 Troubleshooting Pen Trace Failure Symptoms

Step	What to do	How to do it or where to find the instructions
1	Check the ink cartridge for proper installation.	Reposition or replace the ink cartridge as described in Section 6 – Routine Maintenance.
		If the pen arm is severely warped, replace the pen arm as described in Section 9 – Replacing Hardware Assemblies.
2	Check that the chart agrees with the actuation type and check chart and pen set up.	Replace wrong chart with correct chart. Refer to Section 4 – Configuration, Startup, and Operation of Recorder with Display for instructions for viewing the configuration.
		See Section 6 – Routine Maintenance for instructions for replacing the chart.
3	Check the pen alignment	Follow the procedure in Subsection 8.6.
4	Check the sensor for the proper type and its ability to function.	Verify the input configuration data and operation of the sensor.
		Measure input signal at TB2 or apply calibration source to verify input signal.
5	Replace the servo plate assembly.	Refer to the replacement procedure in Section 9 — Replacing Hardware Assemblies.
6	Replace the printed circuit assembly for the pen with the problem.	Refer to the replacement procedure in Section 9 - Replacing Hardware Assemblies.

8.5.4 Chart Rotation Troubleshooting

Procedure

Table 8-8 explains how to troubleshoot a chart rotation problem.

Table 8-8 Troubleshooting Chart Rotation Failure Symptoms

Step	What to do	How to do it or where to find the instructions
1	Check the chart installation.	Turn the chart until the desired time line on the chart is aligned with the time index on the chart plate and pen 1 before closing the locking clip on the hub. Push down on the lifter to return the pen(s) to the chart.
		CAUTION: Do not try to rotate the hub
2	Check the configured chart speed value and change it, if required.	Refer to Section 4 – Configuration, Startup, and Operation of Recorder with Display.
3	Run the step test.	Refer to Section 4 – Configuration, Startup, and Operation of Recorder with Display (Subsection 4.4.3).
4	Check the motor cable plug connection at connector P3 on the printed circuit assembly for pen 1.	Power down the recorder, then visually examine the plug and re-seat it.
5	Replace the chart motor.	Refer to the replacement procedure in Section 9 - Replacing Hardware Assemblies.
6	Replace the printed circuit board for pen 1.	Refer to the replacement procedure in Section 9 - Replacing Hardware Assemblies.

8.5.5 Troubleshooting Erratic Pen Movement

Procedure

Table 8-9 explains what to do if the pen remains at the high end of range when the input signal is low.

Table 8-9 Troubleshooting Erratic Pen Movement Symptoms

Step	What to do	How to do it or where to find the instructions
1	Check the sensor and lead wires for continuity. Check the connections to TB2 on the printed circuit assembly for the pen with the problem.	Replace the sensor lead wires as needed. Tighten the connections.
2	Check the pen and input configuration data.	Refer to Section 4 – Configuration, Startup, and Operation of Recorder with Display.
3	Run step test.	Refer to Section 4 – Configuration, Startup, and Operation of Recorder with Display (Subsection 4.4.3).
4	Replace the servo plate assembly.	Refer to the replacement procedure in Section 9 — Replacing Hardware Assemblies.
5	Replace the printed circuit assembly for the pen having the problem.	Refer to the replacement procedure in Section 9 - Replacing Hardware Assemblies.

8.5.6 Troubleshooting the Keypad and Display

Procedure

Table 8-10 explains what to do if a key does not respond and/or the display does not light.

Table 8-10 Troubleshooting Keypad and/or Display Failure Symptoms

Step	What to do	How to do it or where to find the instructions
1	Run a Key Test to check the operation of the keys and displays.	Refer to Section 4 – Configuration, Startup, and Operation of Recorder with Display for procedure for running key test (Subsection 4.4.4.4).
2	Verify correct alignment of display cable with pins on connector at display module and main PCA.	Insure tracks on cable are aligned with pins on connector.
		Refer to the replacement procedure in Section 9 - Replacing Hardware Assemblies.

8.5.7 Troubleshooting Relay Output

Procedure

Table 8-11 explains what to do if the displayed output does not agree with the single relay or dual relay control output.

Table 8-11 Troubleshooting Relay Output Failure Symptoms

Step	What to do	How to do it or where to find the instructions			
1	Be sure the recorder is configured for relay output.	Refer to Section 4 – Configuration, Startup, and Operation of Recorder with Display.			
2	Be sure all the recorder and control related data is correct.	Refer to Section 4 – Configuration, Startup, and Operation of Recorder with Display.			
3	Check that the applicable output relay actuates properly. If it does, go to step 4.	Put the recorder into manual mode and adjust the output manually to raise or lower the PV around the setpoint. Listen for the click of the relay as the PV moves in either direction. Observe OUT 1 or OUT 2 value on the front display.			
4	Check the field wiring.	Refer to Section 2 – Installation.			
5	Replace the relay.	Refer to Section 9 – Replacing Hardware Assemblies.			
6	Replace the printed circuit assembly for the pen channel having the problem.	Refer to the replacement procedure in Section 9 - Replacing Hardware Assemblies.			

8.5.8 Troubleshooting External Alarm Function

Procedure

Table 8-12 explains what to do if the external alarm function does not operate properly.

Table 8-12 Troubleshooting External Alarm Function Failure Symptoms

Step	What to do	How to do it or where to find the instructions
1	1 Be sure all the alarm configuration data is correct. Refer to Section 4 – Configuration Operation of Recorder with Displa	
2	Check the field wiring.	Refer to Section 2 – Installation.
3	Check that the applicable alarm relay actuates properly depending on ALARM TYPE configuration selection.	 Alarms can be triggered either by: reconfiguring the value of the trip points (AnSnVA), [n = 1 or 2], or connecting a signal generator to the input and setting the generator level beyond the trippoint values.

8.5.9 Troubleshooting Remote Switch (Digital Input) Function

Procedure

Table 8-13 explains what to do if the digital input function does not operate properly.

Table 8-13 Troubleshooting Remote Switch (Digital Input) Function Failure Symptoms

	•	• . ,				
Step	What to do	How to do it or where to find the instructions				
1	Be sure all remote switch configuration data is correct.	Refer to Section 4 – Configuration, Startup, and Operation of Recorder with Display.				
		See section for pen parameters set up group or remote switch set up group.				
2	Check the field wiring.	Refer to Section 2 – Installation.				
3	Check that the applicable remote switch actuates properly depending on REMOTE SWITCH configuration selection.	Remote switch actuates either by:				
		reconfiguring PENIN for REM1 or REM2, or				
		reconfiguring REM SW for SP2, MAN, or MNFS on REMSW1 or REMSW2.				

8.5.10 Troubleshooting Modbus Communications

Procedure

Table 8-14 explains what to do if Modbus communications are not successful.

Table 8-14 Troubleshooting Modbus Communications

Step	What to do	How to do it or where to find the instructions			
1	Verify that communications are enabled.	Refer to Section 4 - Configuration, Startup, and Operation of Recorder with Display.			
2	Check that the configured baud rate is correct.	Refer to Section 4 - Configuration, Startup, and Operation of Recorder with Display.			
3	Check that the device address is correct. Each address must be unique. A recorder with two pens must have a unique address for each pen channel.	Refer to Section 4 - Configuration, Startup, and Operation of Recorder with Display.			
4	Check that the communication wires are properly connected to the J3 connector on the communication printed circuir assembly (PCA).	Refer to Section 2 - Installation.			
5	Verify that the communication cable connects J2 on the communication PCA to J3 on the PCA for Pen 1. The PCA for Pen 1 is on the right when facing the recorder. If communication is used for Pen 2, another communication cable must connect J1 on the communication PCA with J3 on the PCA for Pen 2.	Refer to Section 9 - Replacing Hardware Assemblies.			
6	Replace the communication PCA.	Refer to the replacement pocedure in Section 9 - Replacing Hardware Assemblies.			

8.6 Alignment of Pen at Zero and Span

Introduction

If the pen trace does not track at the correct chart increment with a known input value, you can use the following procedure to adjust the pen travel at zero and span (full scale) to compensate for the effects of humidity on the chart size.

If the recorder has 2 pens, be sure Input1 (INP 1) is on the display. If it is not on display, press FUNC key to toggle input for display.

Procedure

Follow the procedure in Table 8-15 to align the pens.

Table 8-15 Procedure for Aligning Pen at Zero and Span

Step	Press	Action/Result
2	SET UP	until you can see: Upper Display ALIN Lower Display PEN until you can see:
If the pen to replaced, to		Upper Display (value) (approximately 60 on the upper display) Lower Display PEN0 Wait until pen stops moving downscale. t of position, follow Steps 3 through 7. (Unless a pen arm has been III not be necessary.) If pen position requires only minor adjustment, go to
Step 8.		Turn off the power to the recorder.
4		To place the pen tips in approximately the correct position, loosen the screw holding the pen 1 (purple) arm to the servo shaft and move the pen arm to access the locking screw for the pen 2 (red) arm (if applicable).
5		Align the tip of pen 2 with the zero line on the chart and tighten the locking screw.
6		Align the tip of pen 1 with the zero line on the chart and tighten the locking screw.
7		Turn on the power and repeat Step 2.

Step	Press	Action/Result
8	or	To set tip of pen 1 (purple) on zero scale line of chart ± 0.25 % (or quarter graduation).
9	FUNC	and you will see: Upper Display (value) (approximately 1200 more than the zero value in Step 2) Lower Display PEN 100 Wait until pen stops moving upscale.
10	or The state of th	To set tip of pen 1 (purple) on full scale line of chart ± 0.25 % (or quarter graduation).
11	DISP	to return to normal operation for pen 1. you will see: Upper Display (value) Lower Display INP and the Input 1 indicator will be lit. If the recorder has 2 pens go to Step 12.
12	FUNC	you will see: Upper Display (value) Lower Display INP and the Input 2 indicator will be lit. Repeat Steps 1, 2, and 8 through 11 for pen 2 (red).

9. Parts List

9.1 Overview

Introduction

This section provides the replacement parts lists for the DR4300 Circular Chart Recorder.

Most parts are supplied on an optimum replacement unit basis; that is, part numbers are given for complete printed circuit assemblies rather than for individual PCA components.

The figures that follow are exploded views of the DR4300 recorder. Each part is labeled with a key number and the key numbers are listed in tables with associated part numbers.

When ordering parts, be sure to specify your recorder's serial and model numbers (on chartplate) as well as the part number.

Also included for your reference are an Internal Cabling drawing (Figure 9-4) and an Internal Wiring Diagram (Figure 9-5) for options only.

What's in this section?

The following is a list of the topics covered in this section.

	See Page	
9.1 Overview		191
9.2 Exploded Views Figure 9-1 Figure 9-2 Figure 9-3	Door Assembly Chart Plate Recorder Components	192 192 193 194
9.2 Internal Cabling Figure 9-4 Figure 9-5	Internal Cabling CE Mark Version Internal Cabling Non-CE Mark Version	196 197

9.2 Exploded Views

Door assembly

Figure 9-1 is an exploded view of the door assembly. Table 9-1 is a list of the associated part numbers.

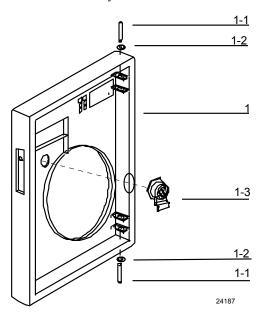


Figure 9-1 Door Assembly

Table 9-1 Door Assembly Parts

Key	Part Number	Description	Recom Spare F	Quantity per Unit	
			10	100	
1	51309609-501 51309609-502 51309609-506 51404778-501	Door Assembly (includes components for all door variations) Gray Door Blue Door Black Door NEMA4/Heavy Duty Door			1
1-1	(K)30756409-002	Hinge Pin*			2
1-2	(K)30756409-002	Retaining Ring*			2
1-3	51309609-503 51404673-501 30757307-503	Latch/Lock Assembly Kit* NEMA4/Heavy Duty Door Latch/Lock Assembly Kit* Key Only for Lock Assembly*	1	3	1
	51198139-501	Graphic Overlay for Door* (not shown)			1
	51309609-504	External Keypad Assembly Replacement Kit* (not shown)			1

^{*}Parts included with applicable door assembly.

⁽K) denotes that the part number is for the parts kit in which the described part is included. The described part cannot be ordered separately.

Chart plate

Figure 9-2 is an exploded view of the chart plate assembly. Table 9-2 is a list of the associated part numbers.

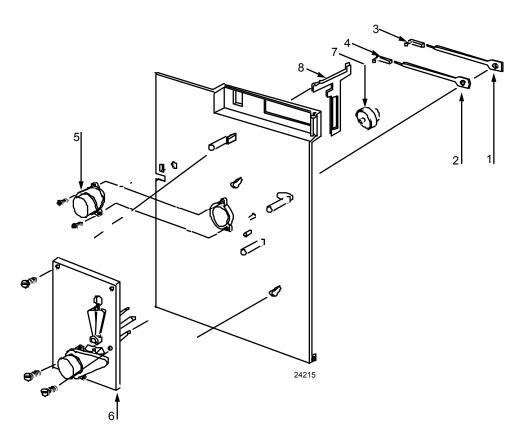


Figure 9-2 Chart Plate Assembly

Table 9-2 Chart Plate Assembly Parts

Key	Part Number	Description	Recom Spare	Quantity per Unit	
			10	100	
1	(K)30756409-002	No. 1 Pen Arm	1	5	1
2	(K)30756409-002	No. 2 Pen Arm (2-pen model only)	1	5	1
3	30735489-007	No. 1 Purple Pen Cartridge (six pack)	1	3	1
4	30735489-002	No. 2 Red Pen Cartridge (six pack)	1	3	1
5	30756113-501	Chart Motor	1	3	1
6	30755833-501 30755833-502	Servo Plate Assembly 1-pen model 2-pen model			1
7	(K)30756150-501	Chart Hub Kit			1
8	(K)30756409-002	Pen Lifter Retainer			1

⁽K) denotes that the part number is for the parts kit in which the described part is included. The described part cannot be ordered separately.

Basic recorder components without options

Figure 9-3 is an exploded view of the recorder. Table 9-3 is a list of the associated part numbers.

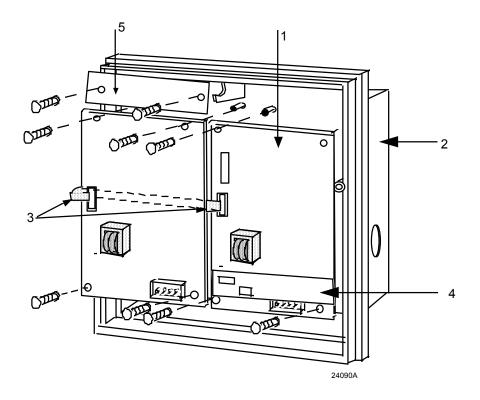


Figure 9-3 Recorder Components

Table 9-3 Basic Recorder Parts

Key	Part Number	Description		mended Parts Per	Quantity per Unit
			10	100	
1		100 Vac to 240 Vac models			
	51404453-501 51404453-502 51404453-505	Printed Circuit Assembly, Record Only Printed Circuit Assembly, Record and Control Spare Kit (includes solid state relay and open collector output) Printed Circuit Assembly, FM-approved Limit Controller (includes solid state relay and open collector output)	1	3	1/2
2	30755800-502	Case	1	3	1
3	51404511-501	Cable Replacement Kit	1	3	1
4	51404566-501	Digital Input Assembly	1	3	1/2
5	51404750-502	Modbus Communication Assembly	1	3	1/2
Parts	Not Shown				
	51404459-501	Display Module Printed Circuit Assembly	1	3	1/2
	51404999-001	Hand Held Display Kit			
	51197612-502	Round cable suppression cores, package of 2	1	3	up to 3
	51197612-508	Round cable suppression cores, package of 8	1	1	1
	51198150-501	Pipe Mounting Kit, 2 inch size			
	30755306-501	Relay Kit - Electromechanical	1	10	2
	30756725-501	Relay Kit - Solid State	1	10	2
	30756679-501	Relay Kit - Open Collector	1	10	2
	51204403-501	Transmitter 24 V Power Supply Assembly			
	51404753-501	Filter assembly, CE version			
	51404546-501	Battery for Totalizer Option			
	30755065-001	Standard Mounting Bracket Kit			
	30755065-502	Heavy Duty/NEMA4 Mounting Bracket Kit			
	51197657-501	Panel Mount Gasket Kit			
	51205804-501	Terminal Block Kit			
Upgra	ade PROMs				
	51197993-501	Basic Recorder PROM, latest software version			
	51450899-501	Totalizer Upgrade PROM and Battery			
	51450899-502	PID Control Upgrade PROM			
	51450899-503	Auxilary Output/Timer Upgrade PROM			

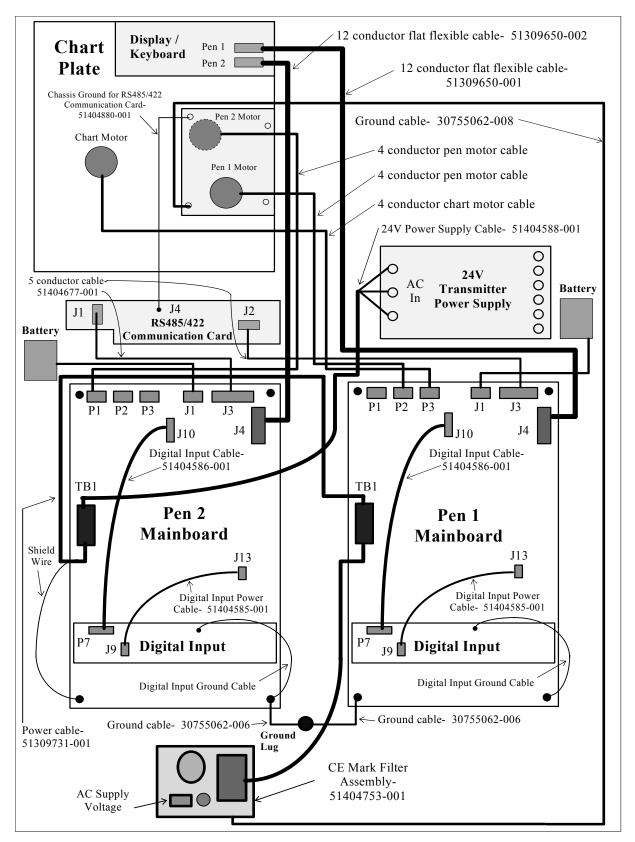


Figure 9-4 DR4300 Recorder (CE Mark) - Internal Cabling Diagram

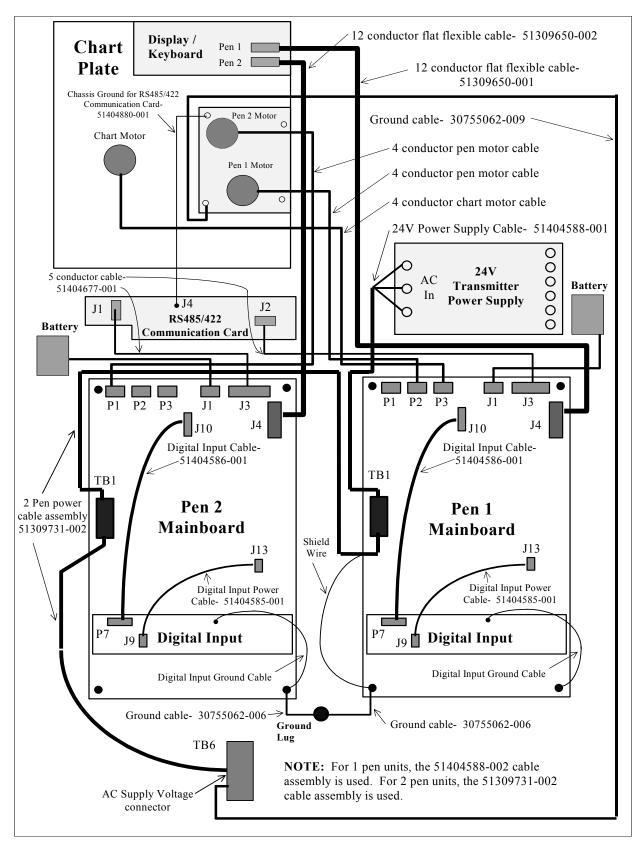


Figure 9-5 DR4300 Recorder (Non-CE Mark) - Internal Cabling Diagram

A. Accuracy

A.1 Overview

Reference accuracy

The reference accuracy varies according to the type of input actuation.

- Typical reference accuracy for each type of input is supplied in Subsection A.2.
- Factory accuracy may be improved by performing an input calibration (field calibration) as described in Section 5 (*Field calibration requires model with display*). The field-calibrated reference accuracy for each type of input actuation is also supplied in Subsection A.2. The figures include reference junction calibration of ± 0.01 degrees using the standard "ice bath" method of calibration.

Typical Reference Accuracy A.2

Table A-1 Typical Reference Accuracy

Types of Input Actuations	Range		Accu wi Fie	Reference Accuracy* with Field Calibration		tory iracy*	Temp Stability ± Degrees Error Per 1 Degree ΔT	
	°F	°C	± °F	± °C	±°F	± °C		
Thermocouples B	105 to 3300 150 to 500 500 to 1000 1000 to 3300	41 to 1816 66 to 260 260 to 538 538 to 1815	28.0 6.0 3.0	16.0 3.3 1.7	37 18	21 10	4.00 1.00 0.40	
E	-454 to 1832 -454 to -202 -202 to 1832	-270 to 1000 -270 to -130 -130 to 1000	36.0 2.0	20.0 1.1	79 14	44 8	1.40 0.70	
E (low)	-200 to 1100	-129 to 593	1.0	0.6	11	6	0.40	
J	0 to 1600	-18 to 871	1.6	0.9	7	4	0.15	
J (low)	20 to 770	-7 to 410	0.8	0.5	6	3	0.08	
К	-320 to 2500	-196 to 1371	2.4	1.4	9	5	0.15	
K (low)	-20 to 1000`	-29 to 538	1.0	0.6	7	4	0.10	
Ni-Ni Moly	32 to 2500 32 to 500 500 to 2500	0 to 1317 0 to 260 260 to 1371	1.5 1.0	0.8 0.6	12 9	7 5	0.21 0.14	
Nicrosil-Nisil	0 to 2372	-18 to 1200	2.1	1.2	11	6	0.20	
R	0 to 3100 0 to 500 500 to 3100	-18 to 1704 -18 to 260 260 to 1704	4.0 2.0	2.2 1.1	26 13	14 7	0.50 0.21	
S	0 to 3100 0 to 500 500 to 3100	-18 to 1704 -18 to 260 260 to 1704	4.0 2.0	2.2 1.1	23 13	13 7	0.50 0.21	
Т	-420 to 700	-251 to 371	1.6	0.9	13	7	0.15	
T (low)	-200 to 600	-129 to 316	0.8	0.5	7	4	0.15	
W5W26	0 to 4200 0 to 600 600 to 3600 3600 to 4200	-18 to 2316 -18 to 316 316 to 1982 1982 to 2316	2.8 2.6 3.2	1.6 1.5 1.8	19 13 27	11 7 15	1.00 0.50 0.20	
Platinum 100 ohms** 100 ohms (low)** 100 ohms (T)***	-300 to 900 -130 to 392 -238 to 482	-184 to 482 -90 to 200 -150 to 250	0.8 0.6 0.6	0.5 0.3 0.3	4 3 3	2 2 2	0.15 0.15 0.15	

^{*}Includes reference junction calibration of ± 0.01 degrees using the standard "ice bath" method of calibration. Factory accuracy at reference ± 1.2 °F. Note that factory accuracy may have typical variations of ± 150 microvolts or ± 0.6 ohms for RTDs which means field calibration may be required to achieve stated accuracy.

^{**}IEC Alpha = 0.00385 ***Alpha = 0.00391

Table A-1 Typical Reference Accuracy, Continued

Types of Input Actuations	Range	Reference Accuracy* with Field Calibration	Factory Accuracy*	Temp Stability ± Degrees Error Per 1 Degree ΔT
Linear				
Milliamperes dc	0 to 20	16 μA	80 μA	0.011 %/°F
	4 to 20	16 μA	80 μA	0.011 %/°F
Millivolts dc	0 to 10	10 μV	50 μA	0.011 %/°F
	0 to 100	100 μV	500 μA	0.011 %/°F
	0 to 200	200 μV	1.0 mV	0.011 %/°F
Volts dc	0 to 1	1 mV	5 mV	0.011 %/°F
	0 to 2	2 mV	10 mV	0.011 %/°F
	0 to 5	5 mV	25 mV	0.011 %/°F
	1 to 5	4 mV	20 mV	0.011 %/°F
	0 to 10	10 mV	50 mV	0.011 %/°F
	2 to 10	8 mV	80 mV	0.011 %/°F

^{*}Includes reference junction calibration of ± 0.01 degrees using the standard "ice bath" method of calibration. Factory accuracy at reference ± 1.2 °F. Note that factory accuracy may have typical variations of ± 150 microvolts or ± 0.6 ohms for RTDs which means field calibration may be required to achieve stated accuracy.

**IEC Alpha = 0.00385

***Alpha = 0.00391

B. Available 10-inch Charts

B.1 Single Range Charts

Table B-1 lists the chart part numbers for the available 10-inch single range charts.

+ indicates the chart is used in Table 3-2 configurations; no mark indicates recorder with display is required.

Table B-1 10-inch Single Range Chart Part Numbers

Chart Type	Range	Units	24 HR P/N 24001660	-xxx	7 DAY P/N 2400166	
B Thermocouple	0 to 1800	С	135			
J Thermocouple	-18 to 425	С	028		028	
	-45 to +150	С	027		027	
	-50 to +300	F	019		019	
	0 to 150	С	070	+	070	+
	0 to 200	F	114	+		
	0 to 250	С	024	+	024	+
1	0 to 300	F	002	+	002	+
	0 to 300	С	062	+	062	
	0 to 400	F	012	+	006	
	0 to 400	С	063	+	063	
	0 to 500	F	013	+	007	+
	0 to 600	F	003		008	+
	0 to 800	F	014	+	009	+
	0 to 1000	F	015	+	010	+
	0 to 1200	F	004	+	011	+
	0 to 1600	F	018	+	018	+
	10 to 340	С	057	+	057	+
	10 to 76	С	030		030	
	50 to 1400	F	029		029	
	50 to 650	F	056		056	
	100 to 260	С	094			
	150 to 750	F			150	
	810 to 910	F	230			

Chart Type	Range	Units	24 HR P/N 24001660	-XXX	7 DAY P/N 2400166	
K Thermocouple	-18 to 1320	С	031		031	
	0 to 200	С	086	+		
	0 to 400	F	053	+	053	
	0 to 400	С	064	+	064	
	0 to 500	С	205	+		
	0 to 600	С	059	+	059	
	0 to 800	С	060	+	060	
	0 to 1000	F	007	+	016	+
	0 to 1000	С	049	+	049	+
	0 to 1200	F	006	+	012	+
	0 to 1200	С	065	+		
	0 to 1600	F	016	+	013	+
	0 to 2000	F	005	+	014	+
	0 to 2400	F	009	+	015	+
	800 to 1000	F	227			
R Thermocouple	0 to 1600	С	017	+	017	
	0 to 2500	F	025	+	025	+
	30 to 2900	F	032	+	032	+
	800 to 1600	С	089			
S Thermocouple	0 to 1600	С	066			
	0 to 3000	F	147	+	147	+
T Thermocouple	-250 to +150	F		+	042	+
	-130 to +410	F	033	+	033	+
	-100 to +100	С	069		069	+
	-90 to +210	С	034	+	034	+
	0 to 100	С			100	
	0 to 150	С	103	+		
	0 to 300	С			079	
	+75 to –200	С			058	+
	+125 to –105	С	098			
W5W26 Thermocouple	0 to 1800	С	157	+		

Chart Type	Range	Units	24 HR P/N 2400166		7 DAY P/N 24001661-	XXX
Linear	-200 to +200				199	
	-100 to +200		232	+	178	+
	-100 to +100	F	201	+		
	-85 to +190		179	+		
	-75 to +260		178		179	
	-60 to +215		088			
	-50 to +50				218	+
	-40 to +10				142	
	-35 to +75	С	023	+	023	+
	-30 to +100	С	210			
	-30 to +20	F	204			
	-18 to 94		035			
	-10 to 100				149	
	-5 to 50	С	022	+	197/022	+
	0 to .6				203	
	0 to 1		211		202	
	0 to 2	MG/L			217	
	0 to 2	MGD	175		129	
	0 to 5				074	
	0 to 8		212			
	0 to 10		076		076	
	0 to 14		036		036	
	0 to 15		119		085	
	0 to 20		071		071	
	0 to 24	FEET			196	
	0 to 25		095		095	
	0 to 30		040		040	
	0 to 40		110		041	
	0 to 45		078			
	0 to 50			+	051	+
	0 to 55		130			
	0 to 70				075	+
	0 to 80		120			
	0 to 100		001	+	001	+
Linear (continued)	0 to 150		180	+		

Chart Type	Range	Units	24 HR P/N 2400166		7 DAY P/N 2400166	
	0 to 200		010	+	004	+
	0 to 300		050	+	050	+
	0 to 350		037	+	037	+
	0 to 400		011	+	005	+
	0 to 500		104			
	0 to 600		052	+		
	0 to 750		223			
	0 to 800		137	+		
	0 to 1000		173	+		
	0 to 1200		054		108	+
	0 to 1600				109	+
	0 to 2000	F	202	+		
	0 to 2400	GPM			219	
	0 to 2500		113	+		
	0 to 7000		123			
	0 to 8000		208			
	0 to 25000		111			
	1.3 to 1.8					
	5 to 9	PH			093	
	10 to 20	METER	231			
	20 to 120		039		039	
	40 to 70				125	
	50 to 70				141	
	50 to 250		008	+	003	+
	70 to 140		038		038	
	100 to 200		132			
	100 to 300	F	131			
	100 to 600	F	140			
Linear (continued)	180 to 30	Reverse range			224	
	1500 to 2500					
	2250 to 2500	F	209			
	1300 to 2600	F	203			
RTD-PT100 a=0.00391	-200 to +100	F	044		044	
	-125 to +375	F	020	+	020	+

Chart Type	Range	Units	24 HR P/N 24001660-XXX	7 DAY P/N 24001661-XXX
	-100 to +50	С	091	
	-100 to +100	С	080	080
	-100 to +200	С	021	021
	-100 to +500	F	099	
	-85 to +190	С	047	
	-75 to +260	С	055	055
	-50 to +25	С	048	048
	-50 to +50	С	092	
	-30 to +170	F	087	087
	–25 to +125	С	045	045
	-20 to +30	F		117
	0 to -100	С		084
	0 to 120	С	144	
	0 to 150	С	122 +	
	0 to 250	С	068	
	0 to 400	С	081	081
	49 to –95	С		083
	50 to 100	С	061	
	50 to 150	С	116 +	116
	100 to 200	F	132	
	120 to -140	F	082	
	180 to 30	F	121	
	250 to 300	F	106	
RTD-PT100 a=0.00385	-100 to +100	С	080	080 +
	-40 to +60	С	067 +	067 +
	50 to 100		061	061
	50 to 120		134	
	0 to 60	С	161	
	0 to 250	С	068 +	
	0 to 400		081	081

B.2 Dual Range Charts

Table B-2 lists the chart part numbers for the available 10-inch dual range charts.

+ indicates the chart is used in Table 3-2 configurations.

Table B-2 10-inch Dual Range Chart Part Numbers

Calibration	Range 1	Range 2	24 HR P/N 24001660-XXX	7 DAY P/N 24001661-XXX
Linear/Linear	0 to 15	0 to 3,000,000	200	
	-100 to +200	35 to 0	600	600*
	0 to 200	63 to 0		602*
	0 to 2000	0 to 90		633*
	-18 to +94	35 to 0	603	
	-18 to +94	35 to 0		603
	-22 to +158	0 to 10	174*	
	0 to 50	0 to 100	606*	606
	0 to 60	0 to 100	138*	
	0 to 100	-30 to +70	601 +	601 +
	0 to 100	0 to 14	621*	
	0 to 100	-80 to +20		653* +
	40 to 140	30" Hg to 40 PSI		148*
	50 to 150	0 to 100	097	
	50 to 150	20 to 0	609	
	50 to 150	0 to 100		097
Linear %/Linear PH	0 to 100	0 to 14		213
Linear/K T/C Deg. F	0 to 10	0 °F to 2000 °F	640*	
Linear/RTD Deg. C	0 to 100	-87°C to +191 °C	145*	
Linear Deg. C/Linear	-40 °C to +150 °C	0 to 100 RH	660*	660*
Linear Deg. F/Linear % RH	0 °F to 120 °F	0 to 100	207	
Linear Deg. F/Linear	–40 °F to +300 °F	0 to 100 RH	661*	661*
Linear Deg. F/K T/C Deg. F	0 °F to 3000 °F	0 °F to 2000 °F	645*	
Linear Deg. F/Linear	32 °F to 122 °F	0 to 100		151*
Linear Deg. F/PSI Linear	0 °F to 1400 °F	0 to 5000		
Linear Deg. C/Linear	–18 °C to +37 °C	0 to 100		637* +
Linear GPM/Linear PH	0 to 100	0 to 14		214
	0 to 250	0 to 14		200
Linear PSI/Linear GPM	0 to 150	0 to 7800		204
J T/C Deg. F/Linear	0 °F to 600 °F	0 to 2000 PSI	647*	

Calibration	Range 1	Range 2	24 HR P/N 24001660-XXX	7 DAY P/N 24001661-XXX
	0 °F to 300 °F	0 to 100	617*	617*
	0 °F to 300 °F	0 to 400	656*	
	0 °F to 400 °F	0 to 100	124*	
	0 °F to 400 °F	0 to 800	629*	
	0 °F to 600 °F	0 to 100	611*	
	0 °F to 300 °F	0 to 500	636*	
J T/C Deg. C/K T/C Deg. C	-18 °C to +315 °C	-18 °C to +1315 °C	112*	
J T/C Deg. F/J T/C Deg. C	95 °F to 455 °F	35 °C to 235 °C	026*	026*
J T/C Deg. F/K T/C Deg. F	0 °F to 300 °F	0 °F to 1500 °F	186	
J T/C Deg. F	0 °F to 600 °F	0 °F to 2400 °F	604*	
K T/C Deg. F/J T/C Deg. F	1300 °F to 2000 °F	400 °F to 800 °F	649*	
J T/C Deg. F	0 °F to 300 °F	0 °F to 1600 °F	651*	
K T/C Deg. F/Linear	–100 °F to +900 °F	0 to 10	635*	
	0 °F to 2000 °F	0 to 2	163*	
	500 °F to 2000 °F	0 to 1.5	127*	
T T/C Deg. F/Linear	50 °F to 250 °F	0 to 100	643*	
	–50 °F to +300 °F	0 to 100		631*
T T/C Deg. C/Linear	–100 °C to +100 °C	0 to 100		162*
	−80 °C to +180 °C	0 to 100	657*	
RTD Deg. F/Linear	100 °F to 300 °F	0 to 160	152*	
RTD Deg. C/Linear	−5 °C to +50 °C	0 to 100		102*
	–10 °C to +60 °F	0 to 100		616*
	−35 °C to +75 °C	0 to 100		101*
	-76 °C to +100 °C	35 to 0	607*	
	–50 °C to +100 °C	0 to 100	638*	638*
	-76 °C to +100 °C	35 to 0		607*
	–75 °C to +180 °C	35 to 0	608*	
RTD Deg. C/Linear	−85 °C to +190 °C	0 to 100	154*	
	−85 °C to +190 °C	0 to 100	659*	
	12 °C to 93 °C	0 to 100	644*	
	50 °C to 150 °C	0 to 50	646*	

Calibration	Range 1	Range 2	24 HR P/N 24001660-XXX	7 DAY P/N 24001661-XXX
RTD Deg. F/Linear	–50 °F to +250 °F	0 to 1000		642* +
	0 °F to 300 °F	0 to 100	632*	
	100 °F to 300 °F	0 to 160	652*	
	-10 °F to +60 °F	0 to 100	616*	
RTD Deg. C/Linear	-100 °C to +200 °C	0 to 100	628*	628*
	-18 °C to +94 °C	0 to 100	155*	
RTD Deg. C/Linear PSIA	0 °C to 150 °C	0 to 25	222	
RTD Deg. C/RTD Deg. C	0 °C to 100 °C	50 °C to 120 °C		641*
	-23.3 °C to +93.3 °C	−87.2 °C to +177 °C	206	
RTD Deg. F/RTD Deg. F	14 °F to 122 °F	104 °F to 212 °F	619*	
RTD Deg. C/RTD Deg. C	-10 °C to +50 °C	40 °C to 100 °C	618*	

^{*}minimum purchase required

C. Setpoint Ramp/Soak Programming and Operation

C.1 Overview

Introduction

As an option, the recorder can support the programming and execution of a setpoint program (profile). A total of twenty-four program segments are available, twelve ramp and twelve soak segments. In a ramp segment the setpoint value is changed as specified during configuration. The ramp is configured in terms of ramp time or ramp rate, depending on how you have configured the RPUNIT (ramp unit) parameter. During a soak segment the setpoint is held at the specified value.

Odd-numbered segments are always ramp segments. Even-numbered segments are always soaks. These ramp and soak segments can be used in up to four programs. You designate the beginning and end segments to determine where the program will start or stop.

- Every program must start with a ramp segment and end on a soak segment.
- Recorder must be set to use SP1 (setpoint 1)
- Only contiguous segments can be used by a program.
- There can be overlap between programs. For example, Program 1 could use Segments 1, 2, 3, 4, 5, and 6. Program 2 could be configured to begin with Segment 5 and end with Segment 8.

This appendix contains instructions for setting up a setpoint program, and for executing the program at runtime.

Note that Section 4 contains instructions for using the single setpoint ramp supported by all DR4300 models. The SPRAMP (single setpoint ramp) parameter described in Section 4 must be set to DIS (disabled) if a setpoint program is to be used.

ATTENTION

If power is lost during execution of a program, upon power-up the recorder will use the last setpoint value prior to the beginning of the setpoint program. The program is placed in hold at the beginning. The Manual/Auto mode will be as configured under "PWR UP" in the "CONTROL" group.

What's in this section?

This section contains the following information:

Topic	See Page
C.1 Overview	211
C.2 Program Contents	212
C.3 Drawing a Ramp/Soak Profile	214
C.4 Setpoint Program Prompt Hierarchy	218
C.5 Run/Monitor the Program	221

C.2 Program Contents

What you will configure

You will configure all the data that is relevant to each ramp and soak segment for a given setpoint versus time program (profile). The recorder will prompt you through the sequence of segments and associated functions. All prompts are listed, in sequence, in Table C-1.

Ramp unit

The ramp unit selection determines the engineering units for the ramp segments.

The selections are:

- TIME = Hours: Minutes
- EU-H = Degrees/Hour OR EU-M = Degrees/Minute

Recycle number

The recycle number allows the program to recycle a specified number of times from beginning to end.

• Range = 0 to 99

Program state

The program state selection determines the program state after completion.

The selections are:

- DIS = program is disabled
- HOLD = program on hold

Ramp time or rate segments

A ramp segment is used to change the setpoint to the next soak setpoint value in the program.

- Ramps are odd-numbered segments. Segment 1 will be the initial ramp.
- Ramps are specifed in terms of either:

```
TIME* - Hours:Minutes Range = 0-99 hr:59 min or EU-M* - Degrees/Minute Range = 0 to 999 \\ EU-H* - Degrees/Hour * The selection of time or rate is made at prompt "RP UNIT". Set this prompt before entering any Ramp information.
```

ATTENTION

Entering "0" will imply an immediate step change in setpoint to the next soak.

Soak segments

A soak segment is a combination of soak setpoint (value) and a soak duration (time).

- Soaks are even-numbered segments.
- Segment 2 will be the initial soak value and soak time.
- The soak setpoint range value must be within the setpoint high and low range limits in engineering units. (Specify the setpoint range with SP HI and SP LO in the control group as described in Section 4.)
- Soak time is the duration of the soak and is determined in:

TIME - Hours: Minutes

Range = 0-99 hrs:59 min.

 At the conclusion of program execution, the recorder will use the setpoint achieved during the last soak segment.

Start segment number for each program

The start segment number designates the number of the first segment.

• Range = 1 to 23 (odd-numbered segments only)

End segment number for each program

The end segment number designates the number of the last segment, it must be a soak segment (even-numbered).

• Range = 2 to 24 (even-numbered segments only)

Guaranteed soak

A SOKDEV (soak deviation) parameter is provided. If its value is not zero, then soaking will be frozen for each segment until the difference (plus or minus) between PV and SP is less than or equal to the value of SOKDEV.

There are no guaranteed soaks whenever SOKDEV = 0. In this case, soak segments start timing soak duration as soon as the soak setpoint is first reached, regardless of where the process variable remains relative to the soak setpoint during the duration of the segment.

The decimal location corresponds to input 1 decimal selection.

Digital input (remote) operation

Program can be placed in RUN or HOLD state through a remote dry contact connected to optional digital input terminals. The REMSW1 and REMSW2 parameters mus be configured to support this function. The valid values for those parameters are:

- RUN—contact closure places program in RUN state, and lower display will flash "run n"
- HOLD—contact closure places program in HOLD state, and lower display will flash "hold"

Opening contact reverts to original state.

C.3 Drawing a Ramp/Soak Profile

Ramp/soak profile example

Before you perform the actual configuration, we recommend that you draw your Ramp/Soak profiles in the space provided on the blank graphs and fill in the associated information on the worksheet. An example of a Ramp-Soak Profile using the first twelve segments for Program 1 is shown in Figure C-1. Start setpoint in this example is at 200 °F.

Figure C 1 Pamp/Soak Profile Example				


Figure C-1 Ramp/Soak Profile Example

Prompt	Function	Segment	Value
START1	Start Seg.		1
END 1	End Seg.		12
RECYCL	Number of Recycles		2
SOKDEV	Deviation Value		0
RP UNIT	Ramp Units		TIME
END ST	Program State at end		HOLD
SG1 RP	Ramp	1	1 hr
SG2 SP	Soak SP	2	300
SG2 TI	Soak Time	2	1 hr:30 min
SG3 RP	Ramp	3	1 hr
SG4 SP	Soak SP	4	400
SG4 TI	Soak Time	4	1 hr
SG5 RP	Ramp	5	1 hr:30 min.

Prompt	Function	Segment	Value
SG6 SP	Soak SP	6	250
SG6 TI	Soak Time	6	3 hr:0 min
SG7 RP	Ramp	7	2 hr:30 min
SG8 SP	Soak SP	8	500
SG8 TI	Soak Time	8	0 hr:30 min
SG9 RP	Ramp	9	0
SG10SP	Soak SP	10	400
SG10TI	Soak Time	10	0 hr:30 min
SG11RP	Ramp	11	3 hr:30min
SG12SP	Soak SP	12	200
SG12TI	Soak Time	12	0 hr:30 min

Profile graphs

Draw your ramp/soak profiles on the graphs below and fill in the associated information in the worksheet. This will give you a permanent record of your program and will assist you when entering the ramp and soak values.

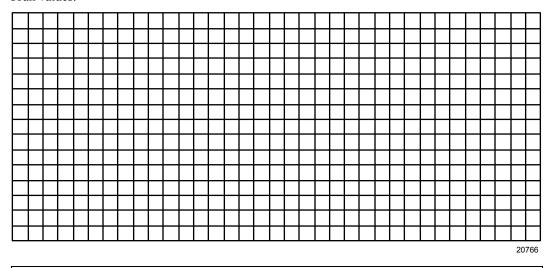



Profile worksheet

Prompt	Function	Segment	Value
START1	Start Seg Prog 1		
END 1	End Seg Prog 1		
START2	Start Seg Prog 2		
END 2	End Seg Prog 2		
START3	Start Seg Prog 3		
END 3	End Seg Prog 3		
START4	Start Seg Prog 4		
END 4	End Seg Prog 4		
SOKDEV	Deviation Value		
RP UNIT	Ramp Units		
END ST	Program State at end		
SG1 RP	Ramp	1	
SG2 SP	Soak SP	2	
SG2 TI	Soak Time	2	
SG3 RP	Ramp	3	
SG4 SP	Soak SP	4	
SG4 TI	Soak Time	4	
SG5 RP	Ramp	5	
SG6 SP	Soak SP	6	
SG6 TI	Soak Time	6	
SG7 RP	Ramp	7	
SG8 SP	Soak SP	8	
SG8 TI	Soak Time	8	

Prompt	Function	Segment	Value
SG9 RP	Ramp	9	
SG10SP	Soak SP	10	
SG10TI	Soak Time	10	
SG11RP	Ramp	11	
SG12SP	Soak SP	12	
SG12TI	Soak Time	12	
SG13RP	Ramp	13	
SG14SP	Soak SP	14	
SG14TI	Soak TIme	14	
SG15RP	Ramp	15	
SG16SP	Soak SP	16	
SG16TI	Soak TIme	16	
SG17RP	Ramp	17	
SG18SP	Soak SP	18	
SG18TI	Soak TIme	18	
SG19RP	Ramp	19	
SG20SP	Soak SP	20	
SG20TI	Soak TIme	20	
SG21RP	Ramp	21	
SG22SP	Soak SP	22	
SG22TI	Soak TIme	22	
SG23RP	Ramp	23	
SG24SP	Soak SP	24	
SG24TI	Soak Time	24	

C.4 Setpoint Program Prompt Hierarchy

Table C-1 lists all the function prompts for Setpoint Program data configuration in the order of their appearance. These prompts are available when SPPROG is enabled in the SPRAMP set up group described in Section 4.

All parameters may be changed while the program is disabled or in HOLD.

Table C-1 Prompt Hierarchy and Available Selections

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
SPPROG		SETPOINT PROGRAMMING —This must be set to ENAB for the setpoint program feature to work, and for the associated operating parameters to be displayed.
		SPRAMP must be disabled. (See Section 4.)
	DIS ENAB	DIS—Disabled ENAB—Enabled
START 1	1,3,5,7,9,11,13,15,17,19, 21,23 [factory setting=1]	START SEGMENT FOR PROGRAM 1—Enter the number of the first segment in Program 1.
END 1	2,4,6,8,10,12,14,16,18,20,22, 24 [factory setting=6]	END SEGMENT FOR PROGRAM 1 —Enter the number of the last segment in Program 1.
START 2	1,3,5,7,9,11,13,15,17,19, 21,23 [factory setting=7]	START SEGMENT FOR PROGRAM 2 —Enter the number of the first segment in Program 2.
END 2	2,4,6,8,10,12,14,16,18,20,22, 24 [factory setting=12]	END SEGMENT FOR PROGRAM 2 —Enter the number of the last segment in Program 2.
START 3	1,3,5,7,9,11,13,15,17,19, 21,23 [factory setting=13]	START SEGMENT FOR PROGRAM 3—Enter the number of the first segment in Program 3.
END 3	2,4,6,8,10,12,14,16,18,20,22, 24 [factory setting=18]	END SEGMENT FOR PROGRAM 3 —Enter the number of the last segment in Program 3.
START 4	1,3,5,7,9,11,13,15,17,19, 21,23 [factory setting=19]	START SEGMENT FOR PROGRAM 4—Enter the number of the first segment in Program 4.
END 4	2,4,6,8,10,12,14,16,18,20,22, 24 [factory setting=24]	END SEGMENT FOR PROGRAM 4 —Enter the number of the last segment in Program 4.
RECYCL	0 to 99 [factory setting=0]	RECYCLES—Enter the number of times the program selected for execution will be repeated.
SOKDEV	-99.9 to 99.9 engineering units [factory setting=0.00]	SOAK DEVIATION —Enter the acceptable deviation from setpoint during a soak cycle. If the PV differs from the setpoint by more than the value of SOKDEV, soak time is frozen.
		There are no guaranteed soaks if SOKDEV = 0.

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
RPUNIT		RAMP UNITS —The selection you make here will determine whether the ramp segments will be configured in terms of time or in terms of rate.
	TIME [factory setting]	TIME—Ramps will be configured in hrs:min.
	EU-M	Engineering Units per Minute—Ramps will be configured as a rate in EU-M.
	EU-H	Engineering Units per Hour —Ramps will be configured as a rate in EU-H.
END ST	DIS [factory setting] HOLD	END STATE —Specify whether the program will be disabled after execution, or be placed in Hold.
SG1 RP	0 to 99 hours:0 to 59 min (if RPUNIT = TIME)	SEGMENT 1 RAMP VALUE —Enter the ramp time or ramp value for Segment 1.
	or 0 to 999 degrees per minute or hour (if RPUNIT = EU-M or EU-H) [factory setting=0.00]	Whether ramp segments are configured in terms of time or rate depends on whether RPUNIT is set to TIME or EU-M/EU-H.
SG2 SP	range depends on setpoint limits [factory setting=0]	SEGMENT 2 SETPOINT —Enter the setpoint for Segment 2.
SG2 TI	0 to 99 hours:0 to 59 min [factory setting=0]	SEGMENT 2 TIME—Enter the duration for Segment 2
SG3 RP	0 to 99 hours:0 to 59 min (if RPUNIT = TIME) or 0 to 999 degrees per minute or hour (if RPUNIT = EU-M or EU-H) [factory setting=0.00]	SEGMENT 3 RAMP VALUE—Enter the ramp time or ramp value for Segment 3.
SG4 SP	range depends on setpoint limits [factory setting 0]	SEGMENT 4 SETPOINT —Enter the setpoint for Segment 4.
SG4 TI	0 to 99 hours:0 to 59 min [factory setting=0]	SEGMENT 4 TIME—Enter the duration for Segment 4

Lower Display Prompt	Upper Display Range of Setting or Selection	Parameter Definition
Continue to configure of Segments 23 and 24.	ramp segments (odd-numbere	d) and soak segments (even-numbered) through
SG23RP	0 to 99 hours:0 to 59 min (if RPUNIT = TIME) or 0 to 999 degrees per minute or hour (if RPUNIT = EU-M or EU-H) [factory setting = 0.00]	SEGMENT 23 RAMP VALUE—Enter the ramp time or ramp value for Segment 23.
SG24SP	range depends on setpoint limits [factory setting = 0]	SEGMENT 24 SETPOINT—Enter the setpoint for Segment 24.
SG24TI	0 to 99 hours:0 to 59 min [factory setting = 0]	SEGMENT 24 TIME—Enter the duration for Segment 24

C.5 Run/Monitor the Program

Introduction

Prior to running the program, make sure all the SPPROG prompts under the SPRAMP set up group have been configured with the required data. (See Table C-1.)

"HOLD" appears periodically in the lower display indicating that the program is in the HOLD state.

ATTENTION

SP Programm parameters cannot be changed during RUN state (must be in HOLD state).

Run/Monitor functions

Table C-2 lists all the functions required to run and monitor the program.

Table C-2 Run/Monitor Functions

Function	Press	Result
Set the Local Setpoint		You will see input value SP and local setpoint value. (If control set up group NumSPs = TWO, make sure the recorder is set to use setpoint 1 by checking that operating parameter UseSP1 is displayed. If UseSP2 is displayed, use ▲ or ▼ to switch to UseSP1.)
		To set the Local Setpoint value to where you want the program to start out.
Selecting the Program to be Run		until
		To select the program where n is the program number 1 through 4.

Function	Press	Result
Putting the Program in the Run State		until
		to toggle from "HOLD" to to indicate that the program is running.
Putting the Program in the Hold State		until
		to toggle from "RUN" to to hold the program at the current setpoint.
External Hold		If the recorder supports digital inputs, and REMSWn is set to HOLD, then when the contact n closes, the program will be placed in hold (if the setpoint program is running).
		The "hold" in the lower display will be displayed periodically in lower case.
		ATTENTION The keypad takes priority over the external switch for the RUN/HOLD function.
		Contact reopening runs the program.
External Run		If the recorder supports digital inputs, and REMSWn is set to RUN, then when the contact n closes, the program will be run (if the setpoint program is enabled).
		The "run n" in the lower display will be displayed periodically in lower case.
		ATTENTION The keypad takes priority over the external switch for the RUN/HOLD function.
		Contact reopening holds the program.
Viewing the Present Ramp or Soak Segment Number and Time	until you see	input value XX HH . MM
		Time remaining in the SEGMENT in hours and minutes XX = 1 to 24

Function	Press	Result
Viewing the Number of Cycles Left for the Program	until you see	REC.X Number of cycles remaining in the setpoint program X = 0 to 99
Ending the Program		When the final segment is completed, the "RUN" in the lower display either changes to "HOLD" (if configured for HOLD state), or disappears (if configured for disable of setpoint programming).
		The recorder will operate at the last setpoint achieved by the program.
Disable Program	until you see	
	until you see	
	or until you see	
		Exit configuration and program is disabled.

D. Using Accutune II

D.1 Overview

Introduction

Accutune II provides foolproof, trouble-free on-demand tuning in the recorder. No knowledge of the process is required at start-up. The operator simply enters the desired setpoint and initiates the tuning. The recorder immediately starts controlling to the setpoint while it identifies the process, calculates the tuning constants and enters them into the tuning set up group, and begins PID control with the correct tuning parameters. This works with any process, including integrating type processes, and allows retuning at a fixed setpoint. The tuning sequence will cycle the recorder's output two full cycles between 0 % and 100 % (or low and high output limits) while allowing only a very small process variable change above and below the setpoint during each cycle.

- Accutune works for all control algorithms except ON/OFF.
- The recorder must be in Auto mode.
- Accutune works for integrating processes.

Enable/disable Accutune using the tuning set up group TUNE parameter described in Section 4.

Detailed instructions for using Accutune are provided in this appendix.

What's in this section?

This section contains the following information:

Topic	See Page
D.1 Overview	225
D.2 Starting and Stopping Tuning with Accutune II	226
D.3 Using Accutune with Duplex (Heat/Cool) Control	227

D.2 Starting and Stopping Tuning with Accutune II

Procedure

After "TUNE" has been enabled in the tuning set up group as described in Section 4, use the procedure in Table D-1 to start tuning.

To abort tuning in progress, press the MAN/AUTO/RESET key to take the recorder out of Auto mode. The message "AbRT" (abort) will be displayed as the value of tuning set up group parameter "AT ERR". The tuning parameters will retain the values they had at the start of the Accutune operation.

Table D-1 Procedure for Starting Accutune II

Step	Press		Action/Result
1	DISP until you see	Lower Display TuneOF	If "TuneOF" (tune off) does not appear, then Accutune is not enabled.
2	or 🔻	"T	ning will begin and the lower display will flash UNING". When tuning has been completed the ver display will again show "TuneOF".

D.3 Using Accutune with Duplex (Heat/Cool) Control

Introduction

"TUNE" can be done for applications using Duplex (Heat/Cool) control.

During tuning, Accutune II assumes SP 1 will cause a Heating demand, and then the calculated tuning parameters will be automatically entered as the first set of PID constants. Likewise, it assumes tuning at Local SP 2 will cause a Cooling demand, and the cooling parameters will be entered as the second set of PID constants.

Procedure

After "TUNE" has been enabled in the tuning set up group as described in Section 4, use the procedure in Table D-2 to start tuning. Note that control group parameter "NumSPs" must be set to "TWO" to enable the second setpoint.

To abort tuning in progress, press the MAN/AUTO/RESET key to take the recorder out of Auto mode. The message "AbRT" (abort) will be displayed as the value of tuning set up group parameter "AT ERR". The tuning parameters will retain the values they had at the start of the Accutune operation.

Step **Press** Action/Result **Heating Tuning** 1 Lower Display Display Setpoint 1. **DISP** SP nnn until you see 2 Until the value of Setpoint 1 is at the desired value within the Heat zone. or Make sure the recorder is in Auto mode. ("A" indicator lit.) If not, use the MAN/AUTO/RESET key to put the unit in Auto. 3 Lower Display **DISP** UseSPn This is the prompt used to select the setpoint. If it is not "USESP1", use \triangle or \bigvee to switch to "USESP1". until you see 4 Lower Display **DISP** TuneOF If "TuneOF" (tune off) does not appear, then Accutune is not enabled. until you see 5 to toggle to Lower Display TuneON Tuning will begin and the lower display will flash "TUNING". The output will cycle between 50 % and 100 % (or high output limit). When tuning has been completed the lower display will again show "TuneOF". The Heat tuning parameters are entered for the first set of PID constants in the tuning set up group.

Table D-2 Procedure for Using Accutune for Duplex Control

Step	Press	Action/Result
Cooling Tunir	ng	
6	DISP until you see	Lower Display Display Setpoint 2. S2 nnn
7	or 🔻	Until the value of Setpoint 2 is at the desired value within the Cooling zone.
8	DISP until you see	Lower Display UseSP1
9	or 🔻	to toggle to. Lower Display UseSP2
10	DISP until you see	Lower Display TuneOF
11	or 🔻	to toggle to Lower Display Tuning will begin and the lower display will flash "TUNING". The output will cycle between 0 % and 50 % (or low output limit). When tuning has been completed the lower display will again show "TuneOF". The Cool tuning parameters are entered for the second set of PID constants in the tuning set up group.

E. Foreign Language Safety Instructions

SIKKERHESKRAV

DA2I-6055



For at undgå elektrisk stød med mulighed for personskade, skal alle sikkerhedsbestemmelser i denne manual følges nøje.



Dette symbol advarer brugeren om en potentiel berøringsfare, såfremt der kan være adgang til den livsfarlige netspænding.



Beskyttende jordterminal. Terminalen er forberedt for og skal forbindes til beskyttelses-jordledning i henhold til stærkstrømsberkendtgørelsen (DK).

- Hvis udstyret ikke bruges som specificeret i manualen, kan den beskyttelse udstyret yder blive nedsat eller forsvinde.
- Eerstat kun komponenter som udtrykkeligt er specificeret som udskiftelige i manualen.
- Alle ledningsforbindelser skal følge stærkstrømsberkendtgørelsen (DK) og udføres af autoriseret erfarent personel.
- Den beskyttende jordterminal skal forbindes først af alle forbindelser (og fjernes som den sidste).
- Det anbefales jvf. stærkstrømsberkendtgørelsen, at der installeres en afbryder til frosyningsspændingen nær udstyret.

UDSTYRS SPECIFIKATIONER

Strømforsyning

100 til 240 V - 20 til 27 Vac/dc

Frekvens

49 - 61 Hz

Nominel effekt

20 watts max.

OMGIVELSES SPECIFIKATIONER

Placer ikke udstyret i nærheden af brandbare væsker eller dampe.

Temperatur

Rumtemperatur: 0 til 55°C

Fugtighed

5 til 90% RH - 40°C

Vibration

0 til 200 Hz acceleration 0.5 g

UDSTYRS INSTALLATION

Skriveren skal monteres i en tavle for at forhindre adgang til bagterminaler.

VEILIGHEIDSVEREISTEN

DU2I-6055



Ter vermindering van het gevaar van elektrische schokken die lichamelijk letsel kunnen veroorzaken, dient u alle veiligheidsaanwijzingen in dit dokument te volgen.



Dit symbool waarschuwt de gebruiker voor een potentieel schokgevaar wanneer toegang bestaat tot onderdelen die onder gevaarlijke spanning staan.



Beschermende aarde-aansluiting. Bestemd voor aansluiting van de aardingsdraad van de voeding.

- Indien de apparatuur wordt gebruikt anders dan door de fabrikant gespecificeerd, kan de bescherming, die de apparatuur biedt ongedaan worden gemaakt.
- Alleen die onderdelen mogen worden vervangen die door de fabrikant als uitwisselbaar zijn aangemerkt.
- Alle bedrading moet in overeenstemming zijn met de lokale elektriciteiseisen en moet aangelegd worden door geauthoriseerd, ervaren personeel.
- De aardingsdraad moet worden aangesloten vóórdat alle andere bedrading wordt aangesloten (en als laatste worden verbroken).
- Het verdient aanbeveling een netschakelaar aan te brengen vlakbij het instrument.

APPARATUUR VOORWAARDEN

Voedingsspanning 100 tot 240 V - 20 to 27 Vac/dc

Frequentie 49 - 61 Hz Vermogen of stroomvermogen 20 watts max.

OMGEVINGSCONDITIES

Gebruik het instrument niet in de aanwezigheid van ontvlambare vloeistoffen of dampen. Het gebruik van elk elektrisch instrument in een dergelijke omgeving vormt een gevaar voor uw veiligheid.

Temperatuur

In bedrijf: 0 tot 55°C 5 tot 90% RH - 40°C

Vochtigheid Trilling

0 tot 200 Hz versnelling 0.5 g

MONTAGE VAN DE APPARATUUR

De recorder moet worden gemonteerd in een paneel om de toegankelijkheid tot de achterste aansluitpunten te beperken.

SIKKERHETSKRAV NO2I-6055



Følg alle retningslinjene i dette dokumentet, slik at du reduserer risikoen for elektrisk støt og mulige personskader.



Dette symbolet advarer brukeren om tilgjengelige terminaler med farlige spenninger og en potensiell fare for elektrisk støt.



Jordingsterminal. kabelen for jording av systemet skal tilknyttes til denne terminalen.

- Dersom utstyret benyttes på en måte annerledes enn spesifisert av produsent, kan utstyrets beskyttelsesgrad forringes.
- Ingen komponenter eller deler skal skiftes ut dersom de ikke er uttrykkelig spesifisert som utskiftbare av din forhandler.
- Det er påkrevet med en hovedstrømsbryter i nærheten av utstyret.
- All kabling må utføres i henhold til gjeldende forskrifter og installeres av autoriser og erfaren installatør.
- Jord må tilknyttes før all annen kabling (og frakobles sist).

UTSTYRSPESIFIKASJONER

Strømtilførsel 100 til 240 V - 20 til 27 Vac/dc

Nettfrekvens 49 – 61 Hz Kraftforbruk 20 watts max.

OMGIVELSER

Instrumentet må ikke opereres i nærheten av lettantennelige væsker eller gasser. Bruk av elektriske instrumenter i slike omgivelser utgjør en sikkerhetsrisiko.

Temperatur omgivelse : 0 til 55°C Fuktighet 5 til 90% HR - 40°C

Vibrasjon 0 til 200 Hz

akselerasjon 0.5 g

UTSTYRSINSTALLASJON

Pass på å montere panelene på regulatoren, slik at berøring av terminalene på baksiden forhindres.

INSTRUÇÕES DE SEGURANÇA

PO2I-6055



Para reduzir o risco de choque eléctrico que pode causar danos corporais, seguir todas as normas de segurança contidas nesta documentação.



Este símbolo avisa o utilizador sobre um eventual perigo de choque quando são acessíveis voltagens sob tensão perigosas.



Terminal de protecção de terra. Fornecido para ligação do condutor do sistema da protecção de terra.

- Se este equipamento for usado de modo n\u00e3o especificado pelo fabricante, a protec\u00e7\u00e3o fornecida pelo equipamento pode n\u00e3o ser adequada.
- Não se deve substituir qualquer componente (ou peça) que não seja explicitamente especificado como substituível pelo nosso revendedor.
- Toda a cablagem deve estar de acordo com os códigos eléctricos locais e deve ser realizada por pessoal experiente devidamente autorizado.
- O terminal de terra deve ser ligado antes de ser feita qualquer outra cabelagem (e desligado em último lugar).
- Recomenda-se um comutador na fonte de alimentação principal próximo do equipamento.

ESPECIFICACÕES DO EQUIPAMENTO

Voltagem 100 a 240 V - 20 a 27 Vac/dc

Frequência 49 – 61 Hz

Potência ou consumo

de corrente 20 Watts max.

CONDICÕES AMBIENTAIS

Não operar o instrumento na presença de líquidos ou vapores inflamáveis. A operação de qualquer instrumento eléctrico em tal ambiente constitui um perigo para a segurança.

Temperatura Ambiente : 0 a 55 °C Humidade 5 a 90% RH a 40 °C

Vibração 0 a 200 Hz

aceleração 0.5 g

INSTALAÇÃO DO EQUIPAMENTO

O Registrador deve ser montado num painel para limitar o acesso do operador aos terminais traseiros.

NORMAS DE SEGURIDAD

SP2I-6055



Para reducir el riesgo de choque eléctrico el cual podría causar lesiones personales, seguir todas las indicaciones de este documento.



Este símbolo previene al usuario de un riesgo potencial de descarga cuando se puede acceder a corrientes de tensión peligrosas.



Terminal de tierra de protección. Proporcionado para la conexión de la tierra de protección del conductor del sistema de alimentación.

- Si el equipo es utilizado de forma no especificada por el fabricante, la protección suministrada con el mismo podría resultar dañada.
- No reemplazar ningún componente (o parte) no explicitamente especificado por el suministrador.
- Todo el cableado debe realizarse de acuerdo con las normas eléctricas locales y debe ser realizado por personal experimentado.
- El terminal de tierra debe ser conectado antes que cualquier otro cable y desconectado el último.
- Se recomienda la instalación de un interruptor de la alimentación principal, cerca del equipo.

DATOS ELECTRICOS DEL EQUIPO

Tensión de 100 a 240 V - 20 a 27 Vac/dc

alimentación

Frecuencia 49 – 61 Hz Potencia o corriente 20 watts max.

CONDICIONES AMBIENTALES

No operar con el instrumento en presencia de liquidos o gases inflamables. La operación de cualquier equipo eléctrico en tal ambiente constituye un riesgo contra la seguridad.

Temperatura Ambiente : 0 a 55°C Humedad 5 a 90% RH a 40°C

Vibración 0 a 200 Hz

acceleración 0.5 g

INSTALACION DEL EQUIPO

Este equipo debe ser montado en un panel para limitar al operador el acceso a los terminales traseros.

SÄKERHETSFÖRESKRIFTER

SW2I-6055



För att reducera riskerna av elektriska chocker som kan orsaka personskador, följ alla säkerhetsföreskrifter i denna dokumentation.



Denna symbol varnar användaren för risk för elchock vid tillfällig åtkomst av spänningsförande del.



Anslutning av skyddsjord. Avsedd för anslutning av elsysternets skyddsjordsledare.

- Om utrustningen används på ett sådant sätt, att det inte innefattas av tillverkarens specifikation, kan de inbyggda säkerhetsfunktionerna äventyras.
- Ersätt aldrig någon komponent (eller del) som inte är specificerad som ersättningsbar av tillverkaren.
- All ledningsdragning måste utföras i enlighet med lokala bestämmelser och skall utföras av behörig personal med erfarenhet av sådant arbete.
- Skyddsjordsanslutningen skall anslutas före alla andra anslutningar (och losskopplas sist).
- En strömbrytare för näströmmen rekommenderas.

STRÖMFÖRSÖRJNING

Spänning 100 a 240 V - 20 a 27 Vac/dc

Frekvens 49 – 61 Hz Effekt eller märkström 20 watts max.

OMGIVNINGSVILLKOR

Använd ej instrumentet i närhet av brännbara vätskor eller gaser. Användandet av instrumentet i sådant miljö är en direkt säkerhetsrisk.

Temperatur Omgivande : 0 till 55°C Fuktighet 5 till 90% RH - 40°C

Vibration 0 till 200 Hz

acceleration 0.5 g

INSTALLATION

Instrumentet skall monteras i en panel eller i en låda för att undvika att personalen kommer i beröring med bakre inkopplingsplintar.

TURVALLISUUSMÄÄRÄYKSET

F121-6055



Noudata tämän ohjeen kaikkia turvaohjeita välttääksesi sähkötapaturman vaaraa.



Tämä merkki varoittaa käyttäjää sähköiskun vaarasta paikassa, missä voi koskettaa vaarallisia jännitteitä.



Suojamaaliitin. Kytke maadoitsjohdin tähän liittimeen.

- Jos laitetta käytetään olosuhteissa, joihin sitä ei ole suunniteltu, käyttöturvallisuus voi heikentyä.
- Älä vaihda mitään komponettia tai osaa, jota valmistaja ei ole määritellyt käyttäjän vaihdettavaksi.
- Asennus ja johdotus on tehtävä paikallisten varmuusmääräysten mukaisesti valtuutetun sähköasentajan toimesta.
- Ensimmäiseksi on kytkettävä suojamaa-liitin (ja viimeiseksi irroittettava).
- Laitteen läheisyyteen suositellaan asennettavaksi verkkokytkin.

LAITTEEN VAATIMUKSET

Syöttöjännite

100 - 240 V / 20 - 27 Vac/dc

Taajuus

49 - 61 Hz

Teho

20 watts

KÄYTTÖOLOSUHTEET

Älä käytä laitetta paikassa jossa on syttyviä nesteitä tai kaasuja, koska laitteen käyttö aiheuttaa räjähdysvaaran.

Lämpötila

ympäröivä : 0 ... 55°C

Kosteus

5 ... 90% RH - 40°C

Tärinä

0 ... 200 Hz Kiihtyvyys 0.5 g

LAITTEEN ASENNUS

Piirturi on asennettava paneeliin siten, että peräliitimille jää riittävästi tilaa.

CONSIGNES DE SECURITE

FR2I-6055



Pour réduire tout risque de décharge électrique qui pourrait provoquer une lésion corporelle, respectez toutes les consignes de sécurité de cette documentation.



Ce symbole avertit l'utilisateur d'un risque électrique potentiel lorsqu'il peut avoir accès à des éléments sous tension.



Borne de mise à la terre. Destinée au raccordement du conducteur de mise à la terre de l'alimentation.

- Si l'équipement est utilisé dans un but non spécifié par le constructeur, la protection fournie avec cet équipement peut être affectée.
- Aucun composant (ou pièce) ne doit être remplacé s'il n'est pas explicitement spécifié comme tel par le constructeur.
- Tous les câblages doivent être conformes aux normes locales et doivent être réalisés par un personnel autorisé et expérimenté.
- La borne de masse doit être raccordée avant tout autre câblage (et débranchée en dernier).
- Il est obligatoire de connecter cet appareil sur une ligne possédant un moyen de coupure près de l'appareil.

CARACTERISTIQUES DE L'EQUIPEMENT

Tension d'alimentation 100 à 240 V ou 20 à 27 Vca/cc

Fréquence

49 - 61 Hz

Puissance ou courant

20 watts max.

CONDITIONS AMBIANTES

Ne jamais utiliser cet équipement en présence de liquides ou vapeurs inflammables.

L'utilisation de tout instrument électrique dans un tel environnement pourrait présenter un risque pour la sécurité.

Température

Ambiante: 0 à 55°C

Humidité

5 à 90 % HR à 40°C

Vibration

Fréquence : 0 à 200 Hz

Accélération 0.5 g

INSTALLATION DE L'EQUIPEMENT

Cet appareil doit être monté dans un panneau pour limiter l'accès aux bornes arrières par l'opérateur.

SICHERHEITSHINWEISE

GE2I-6055



Befolgen Sie alle Sicherheitshinweise in diesen Unterlagen, um das Risiko eines Stromschlags zu verringern, der zu Körperverletzung führen kann.



Dieses Symbol warnt den Benutzer vor eventueller Berührungsgefahr, wo lebensgefährliche Spannungen zugänglich sein können.



Schützende Erdung. Für den Anschluß der schützenden Erdung der Versorgungssystemleitung.

- Bei Benutzung der Ausrüstungen auf nicht vom Hersteller angegebene Art und Weise kann der von der Ausrüstung gewährleistete Schutz beeinträchtigt werden.
- Ersetzen Sie keine Komponente (oder Teil), die/das nicht ausdrücklich vom Lieferanten als ersetzbar angegeben ist.
- Die gesamte Verkabelung muß den örtlichen Normen entsprechen und von zugelassenem, erfahrenem Personal durchgeführt werden.
- Die Erde muß vor allen anderen Kabeln angeschlossen (und zuletzt abgeklemmt) werden.
- In der Nähe der Ausrüstung muß ein Schalter in der Hauptstromversorgung vorhanden sein.

AUSRÜSTUNGSDATEN

Netzspannung 100 bis 240 V oder 20 bis 27 Vac/dc

Frequenz 49 - 61 Hz Nennleistung 20 watts max.

UMGEBUNGSBEDINGUNGEN

Betreiben Sie das Gerät nicht in Gegenwart entflammbarer Flüssigkeiten oder Dämpfe. Der Betrieb elektrischer Geräte in solchen Umgebungen stellt ein Sicherheitsrisiko dar.

Temperatur Umgebung: 0 bis 55°C Feuchtigkeit 5 bis 90% RH - 40°C

Vibration 0 bis 200 Hz

Beschleunigung 0.5 g

ANBRINGUNG DER AUSRÜSTUNGEN

Der Regler muß in ein Pult eingebaut sein, damit der Bediener nicht zu oft auf die hinteren Anschlüsse zugreifen muß.

ΑΠΑΙΤΗΣΕΙΣ ΑΣΦΑΛΕΙΑΣ

GR2I-6055



Για την αποφυγή του κινδύνου ηλεκτροπληξίας που θα μπορούσε να προκαλέσει προσωπικό τραυματισμό, ακολουθείστε όλες τις υποδείξεις ασφαλείας αυτών των οδηγιών.



Το σύμβολο αυτό προειδοποιεί το χρήστη για πιθανό ηλεκτρικό κίνδυνο σε περίπτωση επαφής με επικίνδυνα μέρη της συσκευής.



Προστατευτικό τερματικό γείωσης. Παρέχεται για σύνδεση με τον αγωγό προστατευτικής γείωσης του συστήματος τροφοδοσίας.

- Εάν ο εξοπλισμός χρησιμοποιηθεί κατά τρόπο που δεν προβλέπεται από τον κατασκευαστή, διακινδυνεύεται η παρεχόμενη από τον εξοπλισμό προστασία.
- Μην αντικαταστήσετε κανένα μέρος (ή εξάρτημα) του οποίου η αντικατάσταση δεν προβλέπεται από τον κατασκευαστή.
- Όλες οι ηλεκτρικές εγκαταστάσεις πρέπει να είναι σύμφωνες με τα τοπικά πρότυπα και να πραγματοποιούνται από έμπειρους τεχνικούς.
- Το τερματικό εδάφους πρέπει να συνδέεται πριν από κάθε άλλη σύνδεση (και να αποσυνδέεται τελευταίο).
- Απαιτείται ένας διακόπτης στην κύρια ηλεκτρική εγκατάσταση τροφοδοσίας ηλεκτρικού κοντά στη συσκευή.

ΧΑΡΑΚΤΗΡΙΣΤΙΚΑ ΕΞΟΙΙΛΙΣΜΟΥ

Τροφοδοσία ισχύος 100 ως 240 V ή 20 ως 27 V ac/dc

 Συχνότητα
 49 – 61 Hz

 Ισχύς ρεύματος
 20 watts max

ΣΥΝθΗΚΕΣ ΠΕΡΙΒΑΛΛΟΝΤΟΣ

Αποφεύγετε τη λειτουργία του κοντά σε εύφλεκτα υγρά ή αέρια. Η λειτουργία οποιασδήποτε ηλεκτρικής συσκευής σε τέτοιο περιβάλλον εκθέτει σε κίνδυνο για την ασφάλεια.

Θερμοκρασία Περιβάλλοντος : 0 ως 55°C

Υγρασία 5 ως 90 % μη συμπυκνώσιμη / 40°C

Δόνηση Συχνότητα : 0 − 200 Hz

Επιτάχυνση: 0.5 g

ΕΓΚΑΤΑΣΤΑΣΗ ΕΞΟΠΛΙΣΜΟΥ

Η μονάδα αυτή πρέπει να μπει μέσα σε πλαίσιο για να περιορίζεται η πρόσβαση του χρήστη στα πίσω τερματικά.

NORME DI SICUREZZA

IT2I-6055



Per ridurre i rischi di scariche elettriche che potrebbero causare alle persone, seguire tutte le precauzioni circa la sicurezza indicate in questa documentazione.



Questo simbolo avverte del pericolo di scossa elettrica nelle aree in cui sono accessibili conduttori sotto tensione.



Terminale di protezione verso terra. Previsto per il collegamento del conduttore di protezione verso terra del sistema di alimentazione.

- Se lo strumento viene utilizzato in modo diverso dalla specifica del costruttore, la protezione fornita dallo strumento puó essere diversa.
- Non sostituire alcun componente (o parte) non specificato esplicitamente come ricambio dal vostro fornitore.
- Tutti i cablaggi devono essere in accordo con i regolamenti locali e devono essere eseguiti da personale esperto ed autorizzato.
- Il terminale di massa deve essere collegato prima di ogni altro filo (e scollegato per ultimo).
- E necessario che sia presente un interruttore nell'alimentazione principale accanto all'apparecchio.

ALIMENTAZIONE APPARECCHIATURA

Tensione di alimentazione Da 100 a 240 V ó da 20 a 27 Vac/dc

Frequenza 49 – 61 Hz Potenza o corrente 20 watts max.

CONDIZIONI AMBIENTALI

Non far funzionare l'apparecchio in presenza di liquidi o gas infiammabili, in quanto questo potrebbe essere estremamente pericoloso.

Temperatura Ambiente : da 0 a 55°C Umidità relativa Da 5 a 90% UR a 40°C

Vibrazioni Da 0 a 200 Hz accelerazione 0.5 g

INSTALLAZIONE DELL'APPARECCHIO

Il apparecchio deve essere montato su un pannello per limitare l'accesso ai terminali posteriori.

F. Honeywell Service Centers

For application assistance, current specifications, pricing, or name of the nearest Authorized Distributor, contact one of the offices below.

ARGENTINA

Honeywell S.A.I.C. Belgrano 1156 Buenos Aires Argentina

Tel.: 54 1 383 9290

ASIA PACIFIC Honeywell Asia Pacific Inc. Room 3213-3225 Sun Kung Kai Centre N° 30 Harbour Road Wanchai Hong Kong Tel.: 852 829 82 98

AUSTRALIA Honeywell Limited 5 Thomas Holt Drive North Ryde Sydney

Nsw Australia 2113 Tel.: 61 2 353 7000

Honeywell Austria

G.M.B.H. Handelskai 388 A1020 Vienna Austria

Tel.: 43 1 727 800

BELGIUM

Honeywell S.A. 3 Avenue De Bourget B-1140 Brussels Belgium

Tel.: 32 2 728 27 11

BRAZIL

HONEYWELL DO Brazil And Cia Rua Jose Alves Da Chunha Lima 172 Butanta 05360.050 Sao Paulo

Tel.: 55 11 819 3755

BULGARIA

HONEYWELL EOOD 14, Iskarsko Chausse POB 79 BG- 1592 Sofia BULGARIA Tel: 359-791512/ 794027/ 792198

CANADA

Honeywell Limited The Honeywell Centre 300 Yorkland Blvd. Toronto, Ontario M2j 1s1 Canada

Tel.: 800 461 0013 Fax:: 416 502 5001

CZECH REPUBLIC HONEYWELL, Spol.S.R.O. Budejovicka 1

140 21 Prague 4 Czech Republic Tel.: 42 2 6112 3434

DENMARK

HONEYWELL A/S Automatikvej 1 DK 2860 Soeborg DENMARK Tel.: 45 39 55 56 58

FINLAND

HONEYWELL OY Ruukintie 8 FIN-02320 ESPOO 32 **FINLAND** Tel.: 358 0 3480101

FRANCE

HONEYWELL S.A. Bâtiment « le Mercury » Parc Technologique de St Aubin Route de l'Orme (CD 128) 91190 SAINT-AUBIN **FRANCE** Tel. from France: 01 60 19 80 00 From other countries: 33 1 60 19 80 00

GERMANY

HONEYWELL AG Kaiserleistrasse 39 D-63067 OFFENBACH **GERMANY**

Tel.: 49 69 80 64444

HUNGARY

HONEYWELL Kft Gogol u 13 H-1133 BUDAPEST HUNGARY Tel.: 36 1 451 43 00

ICELAND

HONEYWELL Hataekni .hf Armuli 26 PO Box 8336 128 reykjavik Iceland

Tel: 354 588 5000

ITALY

HONEYWELL S.p.A. Via P. Gobetti, 2/b 20063 Cernusco Sul Naviglio ITALY

Tel.: 39 02 92146 1

MEXICO

HONEYWELL S.A. DE CV AV. CONSTITUYENTES 900 COL. LOMAS ALTAS 11950 MEXICO CITY **MEXICO**

Tel: 52 5 259 1966 THE NETHERLANDS

HONEYWELL BV Laaderhoogtweg 18 1101 EA AMSTERDAM THE NETHERLANDS Tel: 31 20 56 56 911

NORWAY

HONEYWELL A/S Askerveien 61 PO Box 263 N-1371 ASKER **NORWAY**

Tel.: 47 66 76 20 00

POLAND

HONEYWELL Sp.z.o.o UI Domaniewksa 41 02-672 WARSAW **POLAND** Tel.: 48 22 606 09 00

PORTUGAL

HONEYWELL PORTUGAL I DA Edificio Suecia II Av. do Forte nr 3 - Piso 3 2795 CARNAXIDE **PORTUGAL** Tel.: 351 1 424 50 00

REPUBLIC OF IRELAND HONEYWELL

Unit 1 Robinhood Business Park Robinhood Road **DUBLIN 22**

Republic of Ireland Tel.: 353 1 4565944

REPUBLIC OF SINGAPORE

HONEYWELL PTE LTD BLOCK 750E CHAI CHEE ROAD 06-01 CHAI CHEE IND.PARK 1646 SINGAPORE REP. OF SINGAPORE Tel.: 65 2490 100

REPUBLIC OF SOUTH AFRICA

HONEYWELL Southern Africa PO BOX 138 Milnerton 7435 REPUBLIC OF SOUTH AFRICA

Tel.: 27 11 805 12 01

ROMANIA HONEYWELL Office

Bucharest 147 Aurel Vlaicu Str., Sc.Z., Apt 61/62 R-72921 Bucharest **ROMANIA** Tel: 40-1 211 00 76/ 211 79

RUSSIA

HONEYWELL INC 4 th Floor Administrative Builiding of AO "Luzhniki" Management 24 Luzhniki 119048 Moscow RUSSIA Tel: 7 095 796 98 00/01

SLOVAKIA

HONEYWELL Ltd. Mlynske nivy 73 PO Box 75 820 07 BRATISLAVA 27 SLOVAKIA Tel.: 421 7 52 47 400/425 **SPAIN**

HONEYWELL S.A Factory Josefa Valcarcel, 24 **28027 MADRID SPAIN**

Tel.: 34 91 31 3 61 00

SWEDEN

HONEYWELL A.B. S-127 86 Skarholmen STOCKHOLM **SWEDEN**

Tel.: 46 8 775 55 00

SWITZERLAND

HONEYWELL A.G. Hertistrasse 2 8304 WALLISELLEN **SWITZERLAND** Tel.: 41 1 831 02 71

TURKEY

HONEYWELL A.S. Caryiryolu Sok No. 7 Ucgen Plaza, Kat 5-6-7 Icerenkoy 81120 Instanbul Turkey Tel (90-216) 575 66 00

UNITED KINGDOM

HONEYWELL Honeywell House Arlington Business Park Bracknell. Berkshire RG12 1EB Tel: +44 (0) 1344 656000

U.S.A.

HONEYWELL INC. INDUSTRIAL PROCESS CONTROLS 1100 VIRGINIA DRIVE PA 19034-3260 FT. WASHINGTON Tel.: 1-800-343-0228

VENEZUELA

HONEYWELL CA APARTADO 61314 1060 CARACAS VENEZUELA

Tel.: 58 2 239 0211

Index

	CALTST, 124, 174, 175
—2—	CE conformity, 1, 23
-	CFGERR error message, 177
20 mA V parameter, 110	CFGTST, 124, 174, 177
	chart
—4—	replacing, 158
	chart high range value. See CHTHI parameter
4mAVA parameter, 110	chart low range value. See CHTLO parameter
	chart parameters set up group, 90
—A—	chart plate
ACTION parameter 07	components, 66, 120
ACTION parameter, 97	parts, 193
ADDRES parameter, 111	chart rotation troubleshooting
AL HYS parameter, 107, 108	with display, 183
alarm hysteresis, 107, 108	without display, 167
alarm setpoints, 106, 113, 135	chart speed. See CHTSPD parameter
alarms	chart time
configuration, 106 troubleshooting, 186	with display, 123
<u>-</u>	without display, 69
alarms set up group, 106	chart type. See CHTTYP parameter
aligning pens with display, 188	CHTHI parameter, 89
without display, 169	CHTLO parameter, 89
AT ERR parameter, 101	CHTSPD parameter, 90
automatic mode, 96, 133	CHTTYP parameter, 90
AUX OUT parameter, 109	Circuit breakers, 27
	cleaning pen arm, 160
auxilary output set up group, 109	CNFTST, 175
n.	COMM parameter, 111
—B—	communications
BAUD parameter, 111	set up group, 111
BIAS parameter, 87	troubleshooting, 187
BRNOUT parameter, 79, 81, 88, 175	Communications
burnout	specifications, 14
with display, 81, 88	wiring, 35
with display, 64, 66	compensated calibrator, 147
	configuration
— C—	with display, 74, 83
_	without display, 45
CAL IN parameter, 137, 151	configuration checksum test (with display), 124, 174
CALERR error message, 177	177
calibration of inputs (with display), 141	configuration prompt hierarchy, 75
calibration of outputs (with display), 153	configuration record sheet, 117
calibration set up group, 151	configuration tips, 78
calibration test (with display), 124, 174, 177	CONTRL parameter, 94, 124, 174
calibration values, 87	control algorithm. See CTRALG parameter
entering field values, 151	control hysteresis, 97
selecting factory or field, 136	control set up group, 94
troubleshooting, 177	control setpoints, 94, 134

CTRALG parameter, 95, 100, 102, 103 -G current outputs, 94 GAIN 2 parameter, 103 calibration, 141, 154 GAIN parameter, 98, 101, 102 Current outputs, 41 current range. See CURRNG parameter -H---CURRNG parameter, 95 CYC TI parameter, 103 heat/cool application, 101, 102, 103 CYC2TI parameter, 103 Heavy Duty door mounting, 18 cycle timer. See CYC TI parameter HOLD status message, 131, 176 HOUR parameter, 90 HYST parameter, 97 hysteresis. See alarm hysteresis and control hysteresis DBAND parameter, 97 deadband. See DBAND parameter decimal point location. See DECMAL parameter DECMAL parameter, 85 I MIN parameter, 99, 102 derivative term, 92, 96 I RPM parameter, 99, 102 diagnostic tests I2 MIN parameter, 103 with display, 124, 131, 173, 174 I2 RPM parameter, 103 without display, 166 ice bath, 148 digital inputs IN PHI parameter, 87 configuration, 89, 93, 112, 113 IN PLO parameter, 87 Dimensions, 15 IN TYP parameter, 86, 136, 177 direct action control. See ACTION parameter indicators on display, 72, 129 display ink cartridges description, 72, 128 part numbers, 193 testing, 125, 184 replacing, 159 display cable, 79 INP FL error message, 178 door assembly parts, 192 INPRNG error message, 178 input actuation type. See IN TYP parameter .F. input bias EEFAIL error message, 177 with display, 87 electrical noise, 162, 172 Input bias with display, 1 Electrical noise precautions, 23, 28 input calibration (with display), 141 END 1 parameter, 218 input failure END ST parameter, 219 with display, 81, 88, 178 error messages, 131, 176 input filter External switches, 33 with display, 87 Input filter, 1, 13 input high range value. See INPHI parameter factory calibration (with display), 141 input out of range, 178 failsafe mode, 88, 98, 124, 133, 174, 175 input set up group, 85 FAILSF error message, 177 Input wiring analog, 31 FAILSF parameter, 98, 124, 174 digital, 33 field calibration (with display), 141 INSPAN parameter, 152 FILTER parameter, 87 Installation, 11 FINL SP parameter, 104 integral control. See I RPM parameter. See I MIN Flush mounting, 17 parameter Fuses, 27

fuzzy overshoot suppression, 100

FUZZY parameter, 101

integral term, 99

INZERO parameter, 152

J6 connector, 79	operating parameters, 73, 130 operation with display, 119, 128
— К—	without display, 65 operator interface, 72, 128
Key error, 125	limit control, 139
KEY ERROR, 125	OUT HI parameter, 97
key functions, 73, 130	OUT LO parameter, 97
keypad	OUTALG parameter, 94, 101, 103
description, 72, 128	OUTLAG parameter, 95
testing, 125, 184	output calibration (with display), 141, 154
Knockout locations, 16, 24	output limits, 97
· · · · · · · · · · · · · · · · · · ·	output set up (with display), 74
-L-	Output wiring
— <u>L</u> —	current outputs, 41
L DISP parameter, 105	relays, 37
LD CAL parameter, 87, 136, 152	outputs
LED indicators, 166	limit control, 139 troubleshooting, 185
with display, 176	troubleshooting, 165
limit controller, 73 configuration, 118, 137	—P—
resetting, 139	P3 connector, 167, 183
LIMIT parameter, 118 load calibration values. <i>See</i> LD CAL parameter	Panel cutout, 15
LOCK parameter, 78, 83, 114, 115, 151, 154	parts list, 191
LOCK parameter, 76, 83, 114, 113, 131, 134	PB 2 parameter, 103
NA.	PB parameter, 98, 101, 102
—M—	PBorGN parameter, 98
maintenance, 157	pen alignment set up group, 188
MANRST parameter, 102	pen group prompts, 89
manual mode, 96, 133	pen input. See PENIN parameter
manual reset. See MANRST parameter	pen set up group, 89
memory test (with display), 124, 174	pen step test, 67
memory test (with display), 178	pen trace troubleshooting
MINRPM parameter, 99	with display, 182
Modbus. See communications	without display, 166
Model number breakdown, 4	PENO parameter, 188
motor cable, 167, 183	PENIN parameter, 81, 89, 123
Mounting	pens
dimensions, 15	alignment with display, 188
flush, 17	without display, 169
surface, 21	maintenance, 160
Mounting methods	part numbers, 193
2-inch pipe, 20	replacing, 159
Flush in panel, 17 NEMA4 or Heavy Duty door, 18	troubleshooting
Panel or Wall Surface, 21	with display, 184
- 	without display, 168
—N—	PERIOD parameter, 105 Pipe mounting, 20
14	Plug locations, 16, 24
NEMA4 door mounting, 18	Pring locations, 16, 24 Pring ERR error message, 124, 178
NumSPs parameter, 94	power up controller mode recall. See PWR UP parameter
— 0—	power up state for limit control. See POWRUP parameter
On anating limits 12	Power wiring, 28
Operating limits, 12	POWRUP parameter, 118

prompt hierarchy, 76 setpoint high range limit. See SP HI parameter proportional band. See PB parameter setpoint low limit. See SP LO parameter proportional control, 96, 100, 103 setpoint low range limit. See SP LO parameter. See SP LO PWR UP parameter, 96 parameter setpoint program, 104, 211 status display, 73 setpoint ramp group, 104 raise switch. See SW3 raise switch setpoints. See control setpoints and alarm setpoints RAMTST, 124, 174, 175 setup switch. See SW5 run/setup switch range values for calibration, 142 SG1 RP parameter, 219 rate. See RATE T parameter SG2 SP parameter, 219 RATE parameter, 92 SG2 TI parameter, 219 RATE T parameter, 102 software version, 173 RATE2T parameter, 103 SOKDEV parameter, 218 real time values, 130 SP HI parameter, 97, 118 recorder failure troubleshooting SP LO parameter, 97, 118 with display, 181 SP PROG parameter, 104 without display, 165 SP RAMP parameter, 104 recorder part numbers, 194 spare parts, 191 recording set up Specifications, 12 with display, 74 SPPROG parameter, 218 without display, 45 square root of input, 86 RECYCL parameter, 218 START 1 parameter, 218 reference accuracy, 199 START parameter, 105 relays, 94, 107, 139, 185, 186 startup Relays, 13, 37 with display, 119, 123, 126 remote switch 1. See REMSW1 parameter without display, 65, 69 remote switch 2. See REMSW2 parameter status set up group, 175 remote switch set up group, 112 step test remote switches. See digital inputs with display, 121 REMSW1 parameter, 93, 113 without display, 67 REMSW2 parameter, 113 Surface mounting, 21 replacement parts, 191 SW1 configuration switches replacing ink cartridges, 159 with display, 79 without display, 46, 49, 67 replacing the chart, 158 SW2 reset switch, 166, 178 RESET key, 118 RESET parameter, 91 SW3 raise switch, 169 SW4 lower switch, 169 reset switch SW2, 166, 178 reverse acting control. See ACTION parameter SW5 run/setup switch, 67, 169 SW6 burnout switch 5 RPUNIT parameter, 219 with display, 79, 81 RSTABL parameter, 93, 137 SW6 input switches RUN status message, 131, 176 with display, 79, 80 run switch. See SW5 run/setup switch without display, 46, 49 switch settings with display, 79 without display, 46, 49 safety precautions, 45, 65, 66, 67, 79, 119, 120, 121, Switches 141, 161, 164, 169, 171, 180 external, 27 Safety precautions, 27 scale factor. See SCALER parameter SCALER parameter, 92 set up TB1 terminal, 165 with display, 74 TB2 terminal, 31 without display, 45 TB3 terminal, 38 setpoint high limit. See SP HI parameter

TB5 terminal, 153	TUNING status message, 131, 176
temperature units. See UNITS parameter	
TESTFL error message, 124, 174, 178	—U—
tests	-
display and keypad, 125, 184 pen step, 67	UNITS parameter, 85
self-diagnostic (with display), 124, 131, 174 self-diagnostic (without display), 166	—w—
TIM IN parameter, 104	warnings, 65, 79, 119, 141, 161, 164, 171, 180
time index	Warnings, 27, 28
with display, 123	Wire bundling, 26
without display, 69	wiring
timer	for calibration, 146, 153
configuration, 105	limit control, 139
display, 73, 105	Wiring
operation, 138	analog inputs, 31
TIMER parameter, 105	communication, 35
TOTAL parameter, 91, 92	current outputs, 41
totalizer, 91	digital inputs, 33
configuration, 91	insulation, 38, 41
resetting, 91, 137	relay outputs, 37
totalizer set up group, 91	routing, 24
transmitter delay. See XmtDLY parameter	transmitter power out, 43
transmitter input characterization, 86	_X_
Transmitter wiring, 43	— X—
troubleshooting	XMITTR parameter, 86
with display, 171	XmtDLY parameter, 111
without display, 161	XRSET parameter, 118
TUNE parameter, 101	ARODI parameter, 110
tuning set up groupt, 100	

Honeywell

Industrial Measurement and Control

Honeywell 1100 Virginia Drive Fort Washington, PA 19034